KHLKIT HOMELINK COMPATIBLE RECEIVER / TRANSMITTER KIT

Transmitter specifications


Supply voltage: Operating frequency: Codification: Max codes: 12V (L1028 battery) 300MHz 10 binary digits 1024


Receiver specifications

Supply voltage: Operating frequency: Number relay: Relay contact: Memory capacity (TX keys): AC / DC 12 ~ 24 V 300MHz / 310MHz 2(1 NO, 1NO) 1A / 12V 42



here

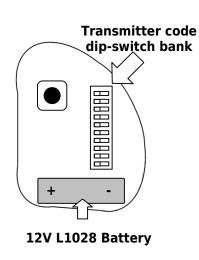

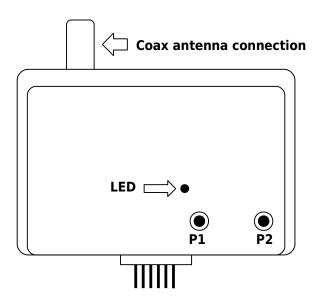

Harness wire color legend:

Red & Black: Power supply, 12 to 24 V AC or DC Blue & Yellow : Channel 1 normally open output Green & Orange: Channel 2 normally open output

TRANSMITTER INDIVIDUALIZATION:

- •Open up the transmitter by prying on corner as illustrated.
- •Change the transmitter code by moving the switches on the dip-switch bank.
- •Carefully close transmitter by snapping enclosure back in place.

TRANSMITTER PROGRAMMING:

- •Press and hold the receiver channel button until LED lights on (P1 for channel 1; P2 for channel 2).
- •Press button on transmitter to be programmed.

RECEIVER MEMORY DELETION:

- •Press and hold P1.
- •WITHOUT RELEASING **P1**, when the LED lights up, press and hold **P2** for 10 seconds.
- •Release both buttons. LED will flash 6 times indicating memory deletion.

For technical assistance call: (US toll free) 877-995-8155 or 561-995-8155