

Please follow these easy steps to adjust the pressure:


Loosen nut (pos. #3) with 10mm wrench.

Start pump, watch pressure gauge and turn (pos. #2) using 3mm hex clockwise until recommended/rated pressure is obtained. Line pressure will be approximately 200 psi less than actual head pressure. DO NOT set line pressure to rated.

Release trigger and make sure there is minimal spike (200-300 psi) (Repeat this step two or three times).

Tighten nut (pos. #3) down against (pos. #4).

Replace black cap (pos. #49)

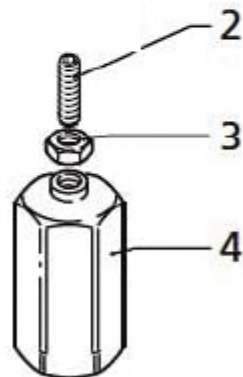

AR1540740

Nut holder for adjusting Minimatic Unloader