


## **Tools & Material Required**

Allen key - 12mm Adjustable Spanner

<b>C</b> ey	Component Qty	
Α	Thermostatic Cap	1
В	Thermostatic Body	1
С	Manual Body	1
D	Nut	2
Е	Valve Tail (1/2" BSP)	1
F	Valve Tail (1/2" BSP)	1
G	Compression Fitting (15mm)	2
Н	Isolating Cap	1

## **Temperature Settings**

★ Anti-Frost Setting1 to 6 Approx. Range 12°C to 30°C

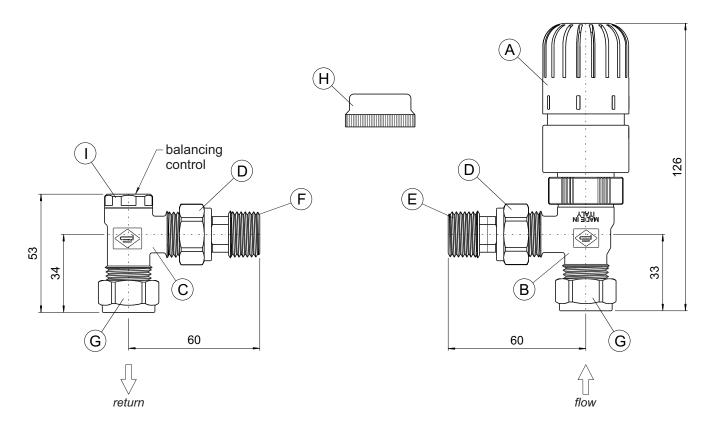

## **Assembly Instructions**

Leave isolating cap (H) tightened to thermostatic body (B).

Fit valve tail (E) to flow side of radiator using 12mm Allen key, ensuring nut (D) is in place.

Note: over-tightening of valve tails may cause damage to surface finish of radiator connections. Do not use grips.

Fit valve tail (F) to return side of radiator using 12mm Allen key, ensuring nut (D) is in place.

Loosen compression fittings (G) and apply valve bodies (B) & (C) to 15mm pipe tails.

Install radiator onto bracket mountings and tighten valve tails (E) & (F) onto valve bodies (B) & (C) respectively.

Concept House

Watchmoor Point

Camberley Surrey GU15 3AD

Fully tighten compression fittings (G).

Remove isolating cap (H). Note: retain cap for use during any future maintenance.

Set reading on thermostatic cap (A) to '6' and tighten cap fully onto the thermostatic body (B).

After filling and venting radiator, remove cap (I) and adjust balancing control to balance radiator.

Please note: thermostatic valve must only be installed on the flow side of system.



