


Zehnder Valve Set 40

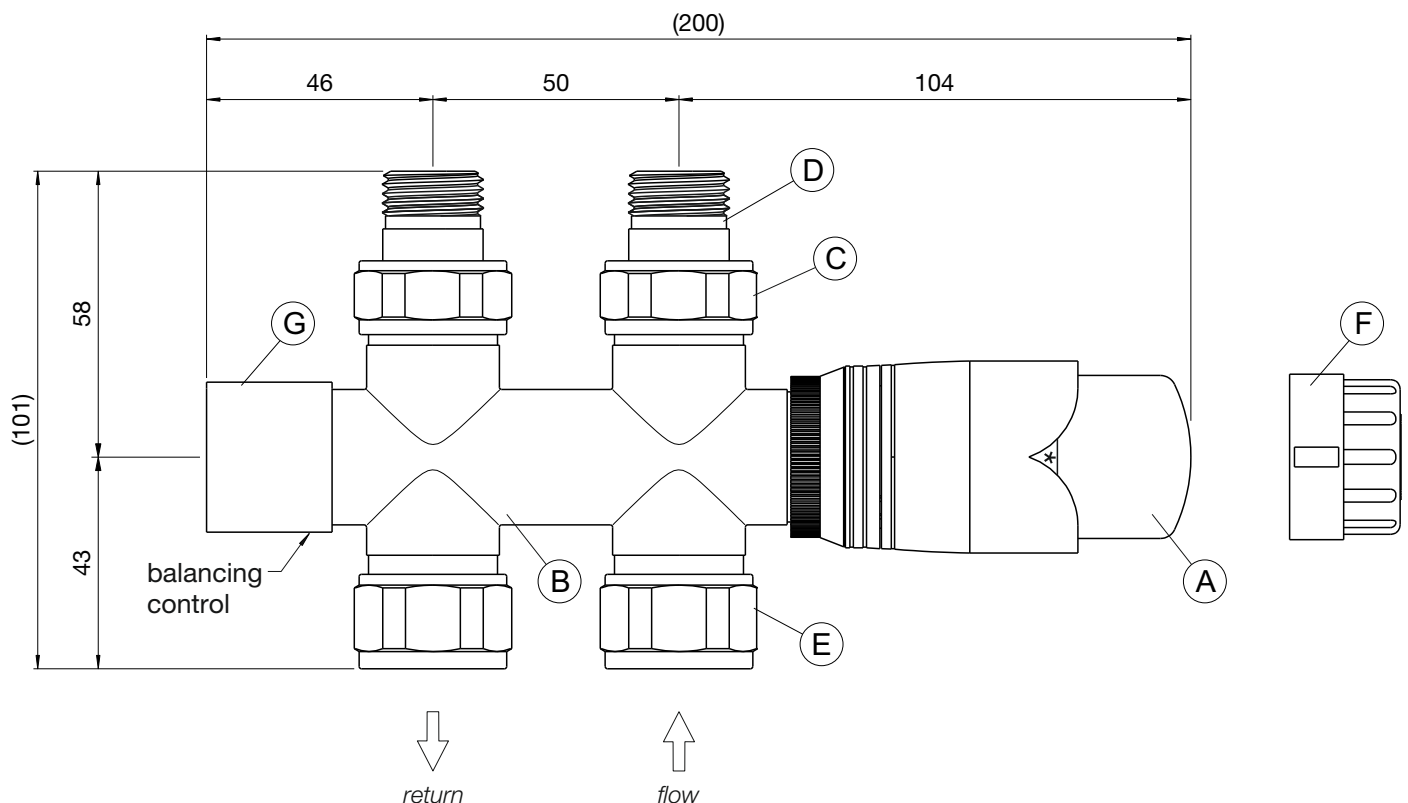

Tools & Material Required	Key	Component	Qty	Temperature Settings
Allen key - 12mm	A	Thermostatic Cap	1	★ Anti-Frost Setting
Adjustable Spanner	B	Valve Body	1	1 to 6 Approx. Range 12°C to 30°C
	C	Nut	2	
	D	Valve Tail (1/2" BSP)	2	
	E	Compression Fitting (15mm)	2	
	F	Isolating Cap	1	



Assembly Instructions

Leave isolating cap (F) tightened to valve body (B).

Fit valve tails (D) to radiator using 12mm Allen key, ensuring nut (C) is in place.

Note: over-tightening of valve tails may cause damage to surface finish of radiator connections. Do not use grips.

Loosen compression fittings (E) and apply valve body (B) to 15mm pipe tails.

Install radiator onto bracket mountings and tighten valve tails (D) onto valve body (B).

Fully tighten compression fittings (E).

Remove isolating cap (F). *Note: retain cap for use during any future maintenance.*

Set reading on thermostatic cap (A) to '6' and tighten cap fully onto the thermostatic body (B).

After filling and venting radiator, remove cap (G) and adjust balancing control to balance radiator.

Please note: thermostatic valve must only be installed on the flow side of system.

Issue 1.0



Zehnder Group UK Ltd

Concept House
Watchmoor Point
Camberley
Surrey GU15 3AD

Tel: 01276 605800
Fax: 01276 24058
retailsales@zehnder.co.uk
www.zehnder.co.uk

Registered in England: 2296696