

# Zehnder Valve Set 42





## Tools & Material Required

Allen key - 12mm  
Adjustable Spanner

Key	Component	Qty
A	Thermostatic Cap	1
B	Valve Body	1
C	Nut	2
D	Valve Tail (1/2" BSP)	2
E	Compression Fitting (15mm)	2
F	Isolating Cap	1

## Temperature Settings

★ Anti-Frost Setting  
1 to 6 Approx. Range 12°C to 30°C

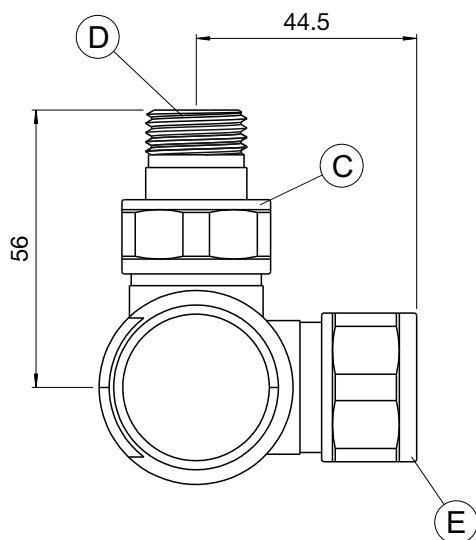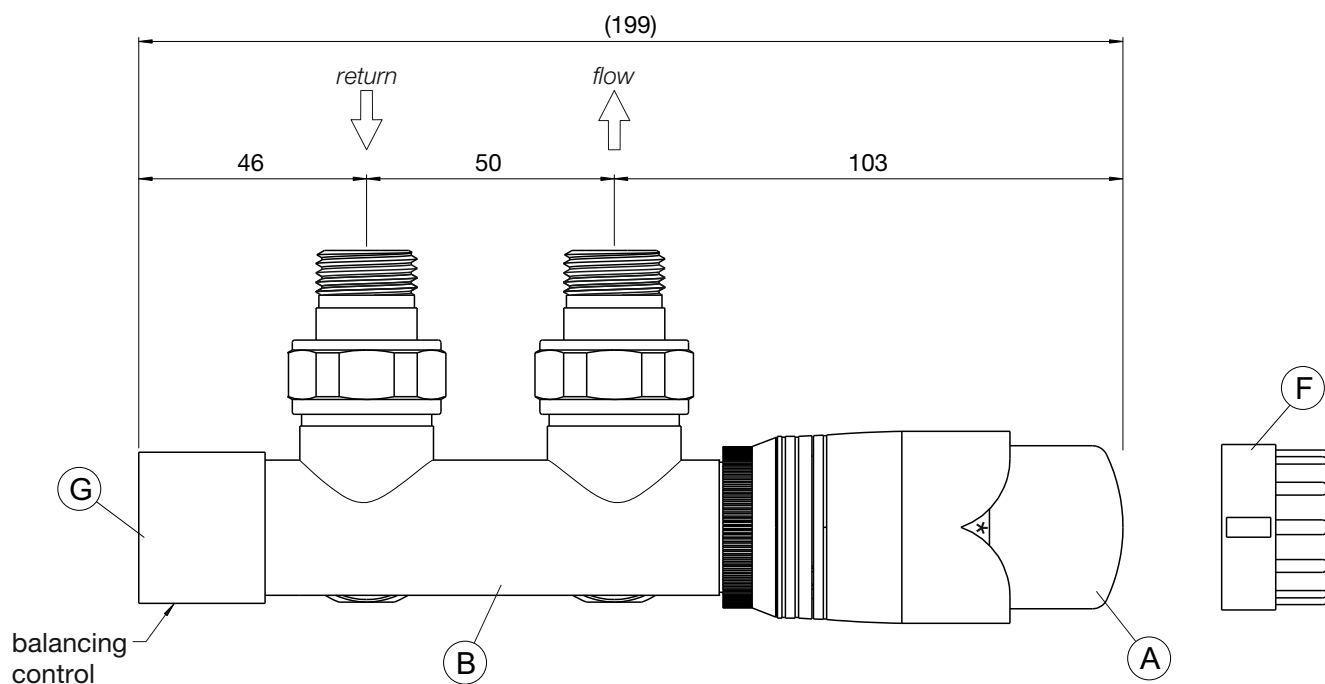

## Assembly Instructions

Leave isolating cap (F) tightened to valve body (B).

Fit valve tails (D) to radiator using 12mm Allen key, ensuring nut (C) is in place.  
*Note: over-tightening of valve tails may cause damage to surface finish of radiator connections. Do not use grips.*

Loosen compression fittings (E) and apply valve body (B) to 15mm pipe tails.

Install radiator onto bracket mountings and tighten valve tails (D) onto valve body (B).

Fully tighten compression fittings (E).

Remove isolating cap (F). *Note: retain cap for use during any future maintenance.*

Set reading on thermostatic cap (A) to '6' and tighten cap fully onto the thermostatic body (B).

After filling and venting radiator, remove cap (G) and adjust balancing control to balance radiator.

*Please note: thermostatic valve must only be installed on the flow side of system.*

Issue 1.0



Zehnder Group UK Ltd

Concept House  
Watchmoor Point  
Camberley  
Surrey GU15 3AD

Tel: 01276 605800  
Fax: 01276 24058  
retailsales@zehnder.co.uk  
www.zehnder.co.uk

Registered in England: 2296696