

COARSE MATERIAL SCREW WASHER SPARE PARTS


IMPORTANT INFORMATION:

It is recommended that you keep certain replacement parts at your facility. These parts will be available in the event of a breakdown and will also be available to perform any repairs that must be made as a result of regularly scheduled maintenance checks. McLanahan **Corporation** stocks a wide variety of commonly used components; however, storing these parts at your facility, will eliminate the expense of airfreighting critical parts that may be required during a breakdown situation. Refer to the "PARTS LIST AND ASSEMBLY" drawing(s) to assist with parts identification, part numbers and quantities. Contact the Parts Department at McLanahan Corporation for price and availability of all parts for your McLanahan equipment.

RECOMMENDED STANDARD SPARE PARTS:


QUANTITY	DESCRIPTION
1	Pillow Block Bearing Housing
1	Pillow Block Bearing
1	Pillow Block Bearing Adapter
1	Lower Bearing Assembly
1	Lower Bearing Rebuild Kit
1	Seal Installation Tool
1	Wear Collar
1-Set	V-Belts (Highly Recommended)
1-Set	Wear Shoes & Fasteners (optional)
1-Set	Paddles & Fasteners (optional)

V-BELTS:

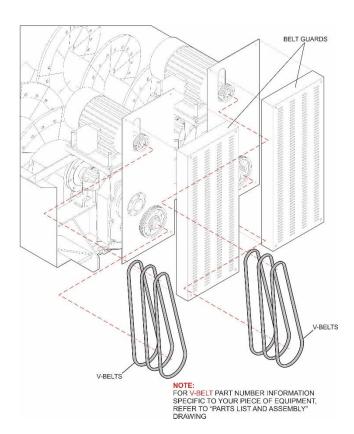





WEAR COLLAR:

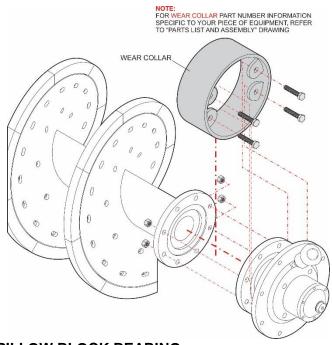

PILLOW BLOCK BEARING:

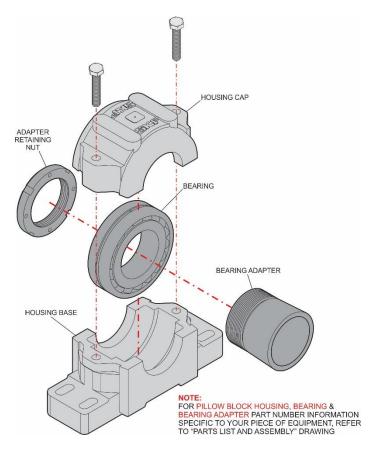


PADDLES AND WEAR SHOES:

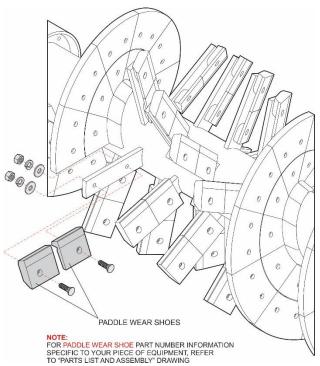



SEAL INSTALLATION TOOL FOR LOWER BEARING ASSEMBLY:

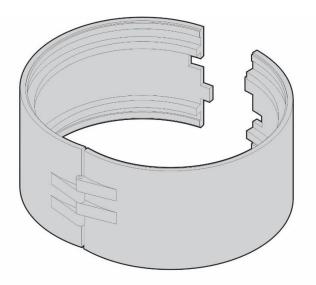

PART NUMBER	WHERE USED
2-992-00138	XXXXXXXXXXXXXXX
2-992-00139	3-992-14603 (20"-36" SCREW WASHER)
2-992-00140	3-992-16009 (44" SCREW WASHER)
	3-922-16010 (36" LOG WASHER)
	3-922-17800 (46" MUDMASTER)
2-992-00141	3-992-17803 (54" SCREW WASHER & 38" LOG WASHER)
	3-992-17804 (66" SCREW WASHER)