

This operation guide describes the basic functions of your GT Series Tenant Station

For complete instructions, download the manual from the manufacturer's website: www.aiphone.com

AIPHONE®



GT-1A Tenant Station

Speaker

Power Source

This tenant station is powered by the system and will always remain on. Contact the building manager if the tenant station in this residence is not working.

Option Button

 
 Push the option button to activate an external device (if included).

Guard Button

 Push the guard button to call all guard and concierge stations connected to the system (if included).

Tone Off Indicator Light

TALK Button



Push the TALK button to answer an incoming call. Once answered, conversation becomes hands-free. To end the conversation, push the TALK button again (this does not turn off the station). For push-to-talk (PTT) mode, push the TALK button until a beep is heard. The conversation then requires the TALK button to be pushed and held while talking and released while listening. To end the PTT conversation, push the TALK button one time without holding (this does not turn off the station). Whether the conversation is hands-free or PTT, the talk indicator light turns on while you speak and will turn off while your visitor speaks.

Door Release Button

 Push the door release button to unlock the entrance during a call.

Microphone

Talk Indicator Light

Chime Volume Control



Use the switch to adjust the chime volume (off, medium, or high). The tone off indicator light blinks slowly when the chime is off.

Volume Control



Use the switch to adjust the communication volume (low, medium, or high).