

Fire-Lite RZA-4XF Remote Zone Annunciator Module


Product Installation Drawing
Document Number 15275 Rev B
ECN: 97-192 Print Date: 7/7/97

RZA-4XF Remote Annunciator

The RZA-4XF Remote Annunciator mounts on a standard single-gang box, and provides LED indication of the same functions as the 4XZMF Zone Relay Module. For example, with DIP 1=ON and DIP 2=OFF:

- One Zone in Alarm (red)
- Two Zones in Alarm (red)
- Releasing Circuit 1 (red)
- Releasing Circuit 2 (red)
- System Trouble (yellow)

A Local Trouble Sounder and Silence Switch are also provided. All LED wiring is supervised for open conditions. Any open condition will cause the System Trouble LED to illuminate.

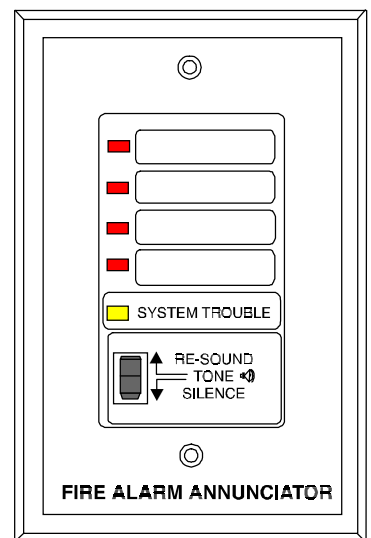

 **Note:** The RZA-4XF Remote Annunciator requires the use of an LED Interface Module (see Figure 1, reverse side).




Fire-Lite® Alarms
INCORPORATED

12 Clintonville Road Northford, CT 06472

(203) 484-7161 FAX: (203) 484-7118


Figure 1 - Installation of the RZA-4XF with 4XLMF LED Module

LED Interface Module -- 4XLMF

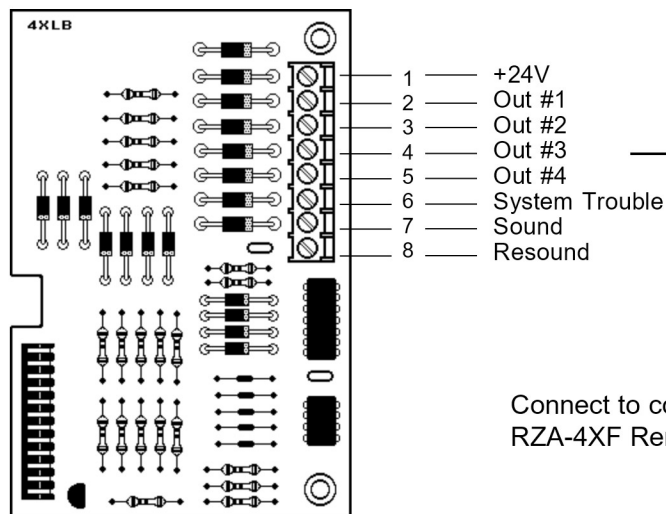


Connect to corresponding terminals of RZA-4XF Remote Annunciator.

Remote Annunciator -- RZA-4XF

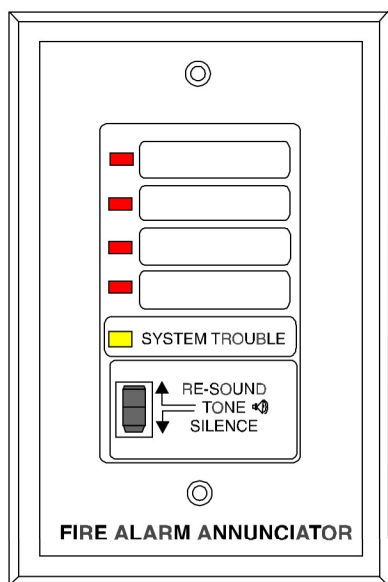

Front View

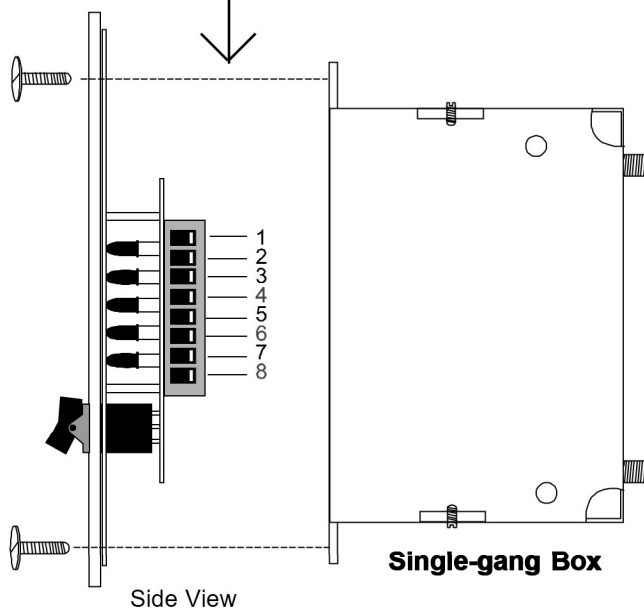

Fire-Lite® Alarms
INCORPORATED

12 Clintonville Road Northford, CT 06472

(203) 484-7161 FAX: (203) 484-7118