




## Wiring Instructions for 3-Wire Open-Close-Stop Control Stations

These control stations use a normally open stop circuit and can only be used with DoorKing control boards listed below. They are not compatible with control boards ending with a dash number of -012 or -018 as these control boards require a four (4) wire normally closed stop circuit. There is an exception – these control stations can be used with any series of the 4502 control board (6050, 6100 and 6300 swing gate operators).

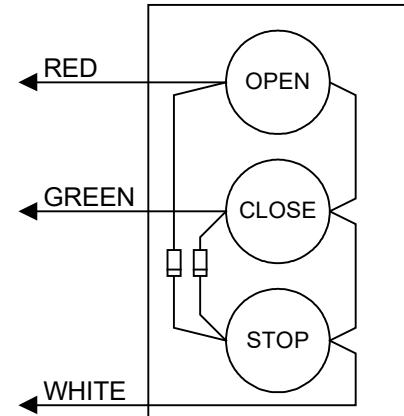

The 1200-006 control station is designed for indoor or outdoor use, while the 1200-007 is designed for indoor use only and mounts in a single-gang electrical box.

**This control station must be mounted a minimum of six (6) feet away from the gate and gate operator, or installed in such a way that the user cannot touch the gate or gate operator while using this control.**

*Be sure that power to the operator is OFF before wiring the control station. Use 18 AWG wire for control station connections.*

| Board Number                                                             | Operators                                                               | Operator Terminals |               |                |
|--------------------------------------------------------------------------|-------------------------------------------------------------------------|--------------------|---------------|----------------|
|                                                                          |                                                                         | Open (Red)         | Close (Green) | Common (White) |
| <b>4402-010</b>                                                          | 1150, 9200, 9300                                                        | 8                  | 9             | 1              |
| <b>4403-010</b>                                                          | 9310                                                                    | 7                  | 8             | 13             |
| <b>4404-010</b>                                                          | 9210, 9220, 9230, 9235, 9240, 9245, 9530, 9550, 9555, 9575              | 7                  | 8             | 1              |
| <b>4501-010</b><br><b>4502-010</b><br><b>4502-012</b><br><b>4502-018</b> | 480, 600, 605, 610, 615, 620, 625, 630, 805, 810, 815, 6050, 6100, 6300 | 13                 | 14            | 20             |
| <b>4601-010</b><br><b>4602-010</b>                                       | 910, 915, 1100, 9100, 9150                                              | 8                  | 9             | 18             |