

NETWORK VIDEO RECORDER

Quick Guide

PRN-6400DB4/PRN-6400B4/PRN-3200B4

PRN-6405DB4/PRN-6405B4/PRN-3205B4

XRN-6410DB4/XRN-6410B4/XRN-3210B4

PRN-3200B2/PRN-3205B2/PRN-1600B2/PRN-1605B2

XRN-6410RB2/XRN-6410B2/XRN-3210RB2/XRN-3210B2

 
XRN-1620B2/XRN-1620SB1/XRN-820S



Package Contents



- The appearance of the components may differ from the image shown.
- Accessory category and quantity may differ depending on sales region.
- For some regions, HDD is not pre-installed. HDD Fixing Screw, SATA Cable quantity vary depending on the model.



Recorder
XRN-820S



Recorder
XRN-1620SB1/XRN-1620B2
XRN-6410B2/XRN-3210B2



Recorder
PRN-3200B2/PRN-1600B2
PRN-3205B2/PRN-1605B2
XRN-6410RB2/XRN-3210RB2



Recorder
PRN-6400DB4/PRN-6400B4/PRN-3200B4
PRN-6405DB4/PRN-6405B4/PRN-3205B4
XRN-6410DB4/XRN-6410B4/XRN-3210B4



Mouse



Quick Guide



Power Cable



Terminal block



Bracket Rack ①



Bracket Rack ②



SATA Power Cable ①



SATA Power Cable ②



SATA Data Cable



HDD Fixing Screw



Bracket Fixing Screw



Grounding screw



HDD Number Sticker ①



HDD Number Sticker ②



Front Cover Lock Key



Anti-slip Rubber Pad

Model without a HDD

Parts \ Model name	PRN-6400DB4 PRN-6405DB4 XRN-6410DB4	PRN-6400B4/PRN-6405B4 PRN-3200B4/PRN-3205B4 XRN-6410B4/XRN-3210B4	PRN-3200B2/PRN-3205B2 PRN-1600B2/PRN-1605B2 XRN-6410RB2/XRN-3210RB2	XRN-6410B2 XRN-3210B2	XRN-1620SB1	XRN-1620B2	XRN-820S
Recorder	O	O	O	O	O	O	O
Mouse	O	O	O	O	O	O	O
Quick Guide	O	O	O	O	O	O	O
Power Cable	O (2 ea)	O	O	O	O	O	O
Terminal block	O (2 ea)	O (2 ea)	O (2 ea)	O (2 ea)	O	O	O
Bracket Rack ❶	X	X	O	O	O	O	X
Bracket Rack ❷	X	X	X	X	X	X	O
SATA Power Cable ❶	X	X	X	O (2 ea)	O	O (2 ea)	X
SATA Power Cable ❷	X	X	X	X	X	X	O
SATA Data Cable	X	X	X	O (8 ea)	O (4 ea)	O (8 ea)	O (2 ea)
HDD Fixing Screw	O (64 ea)	O (64 ea)	O (32 ea)	O (32 ea)	O (16 ea)	O (32 ea)	O (8 ea)
Bracket Fixing Screw	X	X	O (8 ea)	O (8 ea)	O (4 ea)	O (4 ea)	O (4 ea)
Grounding screw	X	X	O	O	X	X	X
HDD Number Sticker ❶	X	X	O	X	X	X	X
HDD Number Sticker ❷	O	O	X	X	X	X	X
Front Cover Lock Key	O	O	O	X	X	X	X
Anti-slip Rubber Pad	O	O	X	X	X	X	X

Model with a HDD

Parts \ Model name	XRN-6410B2 (HDD 1 ea)	XRN-3210B2 (HDD 1 ea)	XRN-1620SB1 (HDD 1 ea)	XRN-1620SB1 (HDD 2 ea)	XRN-1620B2 (HDD 1 ea)	XRN-820S (HDD 1 ea)
Recorder	O	O	O	O	O	O
Mouse	O	O	O	O	O	O
Quick Guide	O	O	O	O	O	O
Power Cable	O	O	O	O	O	O
Terminal block	O (2 ea)	O (2 ea)	O	O	O	O
Bracket Rack ❶	O	O	O	O	O	X
Bracket Rack ❷	X	X	X	X	X	O
SATA Power Cable ❶	O	O	X	X	O	X
SATA Power Cable ❷	X	X	X	X	X	X
SATA Data Cable	O (7 ea)	O (7 ea)	O (3 ea)	O (2 ea)	O (7 ea)	O
HDD Fixing Screw	O (28 ea)	O (28 ea)	O (12 ea)	O (8 ea)	O (28 ea)	O (4 ea)
Bracket Fixing Screw	O (8 ea)	O (8 ea)	O (4 ea)	O (4 ea)	O (4 ea)	O (4 ea)
Grounding screw	O	O	X	X	X	X
HDD Number Sticker ❶	X	X	X	X	X	X
HDD Number Sticker ❷	X	X	X	X	X	X
Front Cover Lock Key	X	X	X	X	X	X
Anti-slip Rubber Pad	X	X	X	X	X	X

Hanwha Vision Co., Ltd. is a surveillance camera manufacturer that provides video information equipment with various functions. Users must comply with local laws when using our devices. Users are solely responsible for any illegal use of our products.

CAUTION

- RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.
- Do not ingest battery, Chemical Burn Hazard.
- This product contains a coin / button cell battery. If the coin / button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.
- Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

ATTENTION

- IL Y A RISQUE D'EXPLOSION SI LA BATTERIE EST REMPLACÉE PAR UNE BATTERIE DE TYPE INCORRECT. METTRE AU REBUT LES BATTERIES USAGÉES CONFORMÉMENT AUX INSTRUCTIONS.
- Ne pas ingérer la pile, risque de brûlure chimique.
- Ce produit contient une pile de type bouton/pièce de monnaie. Si la pile de type bouton/pièce de monnaie est avalée, elle peut causer de graves brûlures internes en seulement 2 heures et peut entraîner la mort.
- Gardez les piles neuves et usagées hors de portée des enfants. Si le compartiment de la pile ne se ferme pas correctement, cessez d'utiliser le produit et gardez-le d'atteinte des enfants. Si vous suspectez que des piles ont été avalées ou insérées dans une partie du corps, consultez un médecin sans tarder.


Installing the HDD




- If you are adding a new or previously used HDD to this product in addition to the HDD(s) originally installed, format the new HDD manually in the set before use.
- If you wish to replace or add an HDD, contact your dealer or our customer service first.

PRN-6400DB4/PRN-6400B4/PRN-3200B4
PRN-6405DB4/PRN-6405B4/PRN-3205B4
XRN-6410DB4/XRN-6410B4/XRN-3210B4


- 1 Use the front cover lock key to unlock the cover. Grab the front cover with both hands and pull it to the left to remove it.

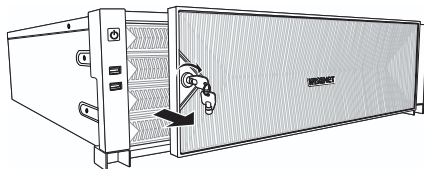


- 2 Press the orange button on the hard disk bracket to the left and pull forward to separate the main body and the hard disk bracket.

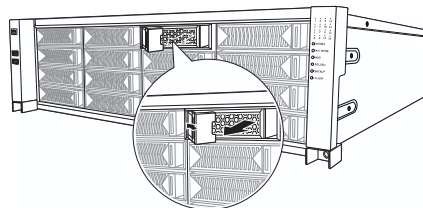

- 3 Mount a HDD in the HDD bracket and screw it in using the screws provided.

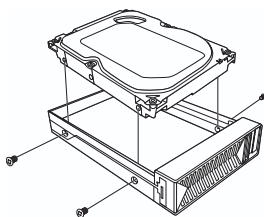


- 4 Once the HDD is mounted in the bracket, push the bracket into the main body and close the front cover.
 - Fit the front cover into the right notch of the main body, then press and close until you hear a 'click'.
 - Use the front cover lock key to lock the front cover so that it does not get separated.

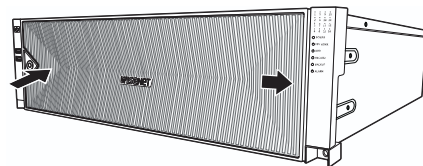


PRN-3200B2/PRN-1600B2
PRN-3205B2/PRN-1605B2
XRN-6410RB2/XRN-3210RB2


- 1 Use the lock key on the front cover to unlock it, and press and pull the left notch of the front cover to separate it.

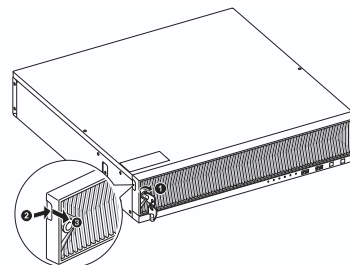


- 3 Mount a HDD in the HDD bracket and screw it in using the screws provided.

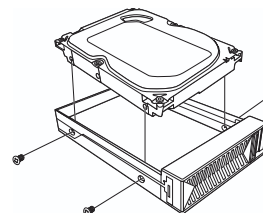


- 2 Press the orange button on the hard disk bracket to the left and pull forward to separate the main body and the hard disk bracket.

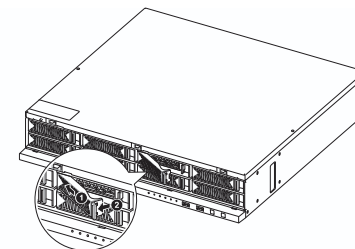


- 4 Once the HDD is mounted in the bracket, push the bracket into the main body and close the front cover.
 - Fit the front cover into the bottom notch on the recorder, and then press and close until you hear a 'click'.
 - Use the front cover lock key to lock the front cover so that it does not get separated.

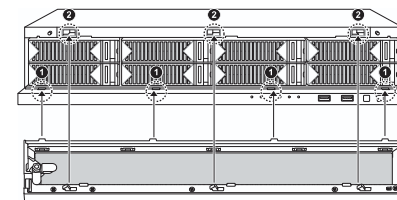


- 1** Remove the screws from the top and back sides of the recorder, and push the cover back to release it.

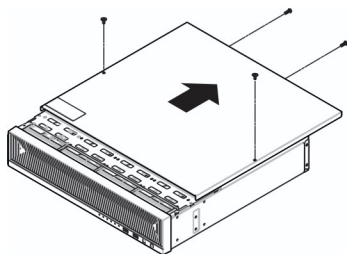


- 2** Remove the screws from the left/right sides and release the bracket.

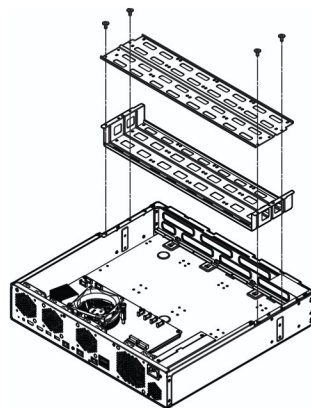

- 3** Mount 8 hard disks into the bracket, and fix it using screws.

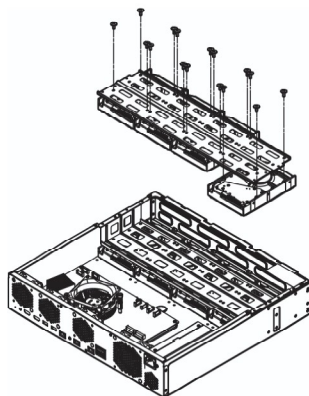


- 4** Fix the hard-disk-mounted bracket to the recorder using screws.

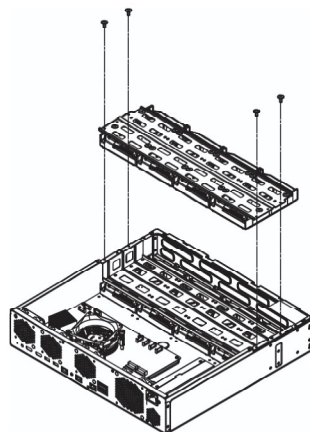

- 5** Connect the SATA/power cable of the hard disk to the connector of the main board.

- Refer to the figure below for the hard disk location number and connector number.

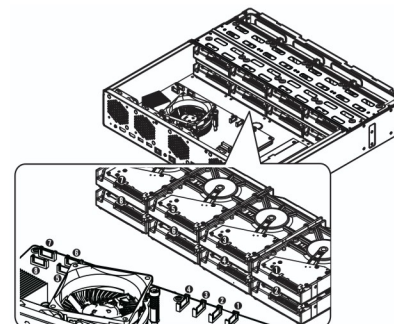

- 6** Make sure that there is no problem in the connection port and routing inside the recorder, and then fix it using screws after closing the cover.
- When dosing the cover, be careful not to damage the cable.

