 


Model PPLV1

Models PPLK1 and PPLK1PH

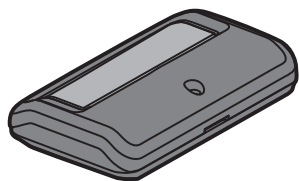 


NOTE: The images are for reference and your remote control may look different.

INTRODUCTION

The Passport LITE is a credentialed remote control. The Passport LITE remote control is a versatile remote control that can be used on access control systems, commercial door operators, gate operators, and external receivers (Models PPWR, 850LM, 860LM, STAR1000) that use Security+ 2.0® technology.

NOTE: Passport LITE credentialed remote controls are not compatible with CPWR, CPWR3, RFMODKT, and RFMODKT3 Passport products.

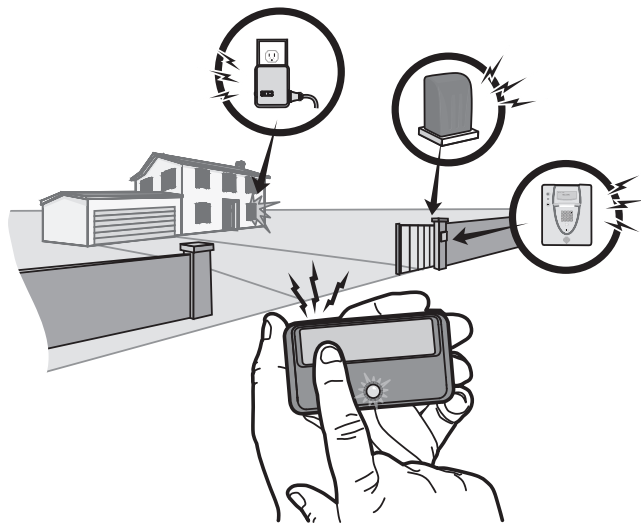

PASSPORT LITE REMOTE CONTROLS

⚠️ ⚡ WARNING

To prevent possible SERIOUS INJURY or DEATH from a moving gate or garage door:

- ALWAYS keep remote controls out of reach of children. NEVER permit children to operate, or play with remote controls.
- Activate gate or door ONLY when it can be seen clearly, is properly adjusted, and there are no obstructions to gate or door travel.
- ALWAYS keep gate or garage door in sight until completely closed. NEVER permit anyone to cross path of moving gate or door.



 
WARNING: This product can expose you to chemicals including lead, which are known to the State of California to cause cancer or birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov

PROGRAMMING

Depending on your product, the LEARN button or LCD menu will be used to program the remote control. If programming to an access control system or gated entry, contact your property manager or LiftMaster® dealer for assistance with any programming or operating instructions.

NOTE: Passport Lite remote controls are NOT compatible with residential garage door openers.

1. Locate the LEARN button on your product or the PROGRAM button on the LCD (if applicable).

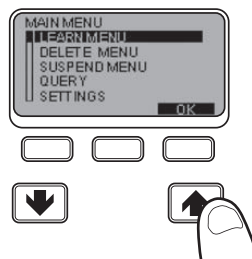

2. Press and release the yellow LEARN button on your product or the PROGRAM button on the LCD.

NOTE: The button color on commercial products may vary.

3. Press and hold the remote control button you wish to use until your product's programming LED turns off.
4. To test, press the programmed button on the remote control and the product will activate.

Please refer to your access control system owner's manual for instructions on programming the Passport LITE credentialed remote controls.

HOW TO USE THE REMOTE CONTROL

 
Press and hold the button down until the door or gate starts to move. For keychain remote controls with a proximity sensor, hold the remote control 1-2" away from the reader face and wait for a confirmation beep or LED from the reader. Operation of the proximity sensor varies depending on the access control system. For additional information refer to the owner's manual for the access control system.

THE REMOTE CONTROL BATTERY

To replace battery, open the case as shown. Insert battery positive side up (+). Replace the battery with only 3V CR2032 coin cell battery. Dispose of old battery properly.


VISOR REMOTE

Pry open the case first in the middle (1), then at each side (2 and 3) with the visor clip.

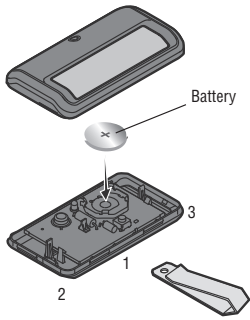

KEYCHAIN REMOTE

 Pry open the case with a screwdriver blade.

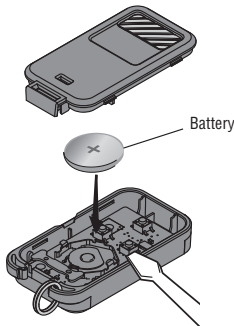

WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH** of **CHILDREN**.
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.

- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- Battery Type: CR2032
- Battery Voltage: 3 V
- Non-rechargeable batteries are not to be recharged.
- Do not force discharge, recharge, disassemble, heat above (manufacturer's specified temperature rating) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- Ensure the batteries are installed correctly according to polarity (+ and -).
- Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
- Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

NOTICE: To comply with FCC and or Industry Canada rules (IC), adjustment or modifications of this receiver and/or transmitter are prohibited, except for changing the code setting or replacing the battery. THERE ARE NO OTHER USER SERVICEABLE PARTS.
Tested to Comply with FCC Standards FOR HOME OR OFFICE USE. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

REPLACEMENT PARTS

Visor Clip..... K029B0137

ONE YEAR LIMITED WARRANTY

The Chamberlain Group LLC (“Seller”) warrants to the first retail purchaser of this product, for the residence in which this product is originally installed (except where prohibited by applicable law (which may include the Province of Quebec)), that it is free from defects in materials and/or workmanship for the applicable warranty period stated for the product(the “Warranty Period”). The warranty period commences from the date of purchase. For more information, visit www.liftmaster.com/warranty

Contact Us

For additional information or assistance, please visit:
support.chamberlaingroup.com