



IP Audio | Quick Start Guide

Quick Start Guide




Features

- Compatible with Speco Audio Manager
- Compatible with both SecureGuard® VMS & SecureGuard® CMS
- Supports PoE (no local power supply needed)
- Supports prerecorded messages, scheduling, HTTP, and Alarm in.
- Compatible with VOIP SIP devices

Hardware Interface

There are 3 input connections:


- 1) Alarm input connection
- 2) PoE connection
- 3) DC power connection

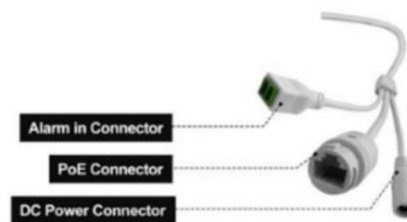

***Please use either the PoE connection or the DC power connection. DO NOT use both at the same time or it will cause damage to the IP speaker.**

Getting started with Speco Audio Manager

- 1) Download Speco Audio Manager from Specotech.com. This software allows you to scan devices, set zones, schedules, etc.
- 2) Go to the Support tab at www.specotech.com.

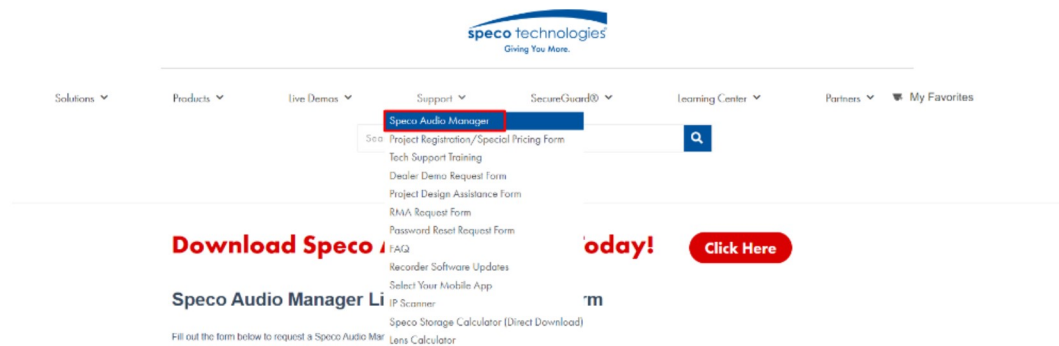

- 3) Click on the “Click Here” button, and the Speco Audio Manager software download will begin.
- 4) Run Speco Audio Manager installer from the shortcut.
- 5) Click on Scan Device and this will find every Speco IP speaker on the network.


Speco Audio Manager

Speco Audio Manager						
Search Scan Device RTP Multicast Options						
☐	No.		Device Name	MAC	IP Address	Netmask
☐	1		Speco_IP Speaker	5c:f2:07:60:20:b0	192.168.56.162	255.255.255.0
☐	2		Speco_IP Speaker	5c:f2:07:60:21:10	192.168.56.141	255.255.255.0

Logging into the IP Speaker

- 1) Using Speco Audio Manager, double-click on the IP address of the speaker to connect to the web interface of that speaker.
- 2) Enter the default username and password of the IP speaker.
- 3) Click on “Sign in” to log into the IP speaker.

Username: admin | Password: 1234

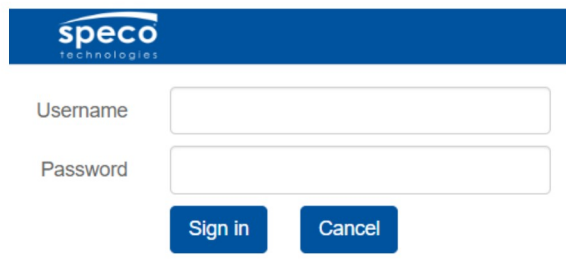
The image shows a login interface for Speco Technologies. At the top is a blue header with the 'speco technologies' logo. Below the header, there are two input fields: 'Username' and 'Password'. The 'Username' field contains the text 'admin' and the 'Password' field contains '1234'. Below the input fields are two buttons: 'Sign in' and 'Cancel'.

Navigating the Web Interface

Once logged into the IP speaker, you will now be able to do the following.

- 1) **Status-** View the device’s information. This includes the time, firmware, SIP accounts, Space available, and Network status.
- 2) **Basic-** Set the network parameters and set the Date & Time.
- 3) **ONVIF-** Enable ONVIF. It will be enabled by default.
- 4) **SIP Account-** Create two SIP accounts in the IP speaker.
- 5) **Audio-** You can enable or disable audio codecs, increase/decrease the volume of the IP speaker, and enable/disable the microphone if the IP speaker has one. ***Microphones are disabled by default**
- 6) **Media File-** Choose from 5 preset bell files or add up to 10 mp3 files.
- 7) **Alarm-** Enable the Alarm output and set the audio file to play.
- 8) **Schedule-** Create up to 10 different schedules.

- 9) **RTP Multicast**- Create up to 10 different RTP addresses and set the priority for each.
- 10) **Firewall**- Set any firewall rules in the IP speaker.
- 11) **System**- Reboot, reset, or upgrade firmware of the IP speaker. You can also change the username and password of the IP speaker here.

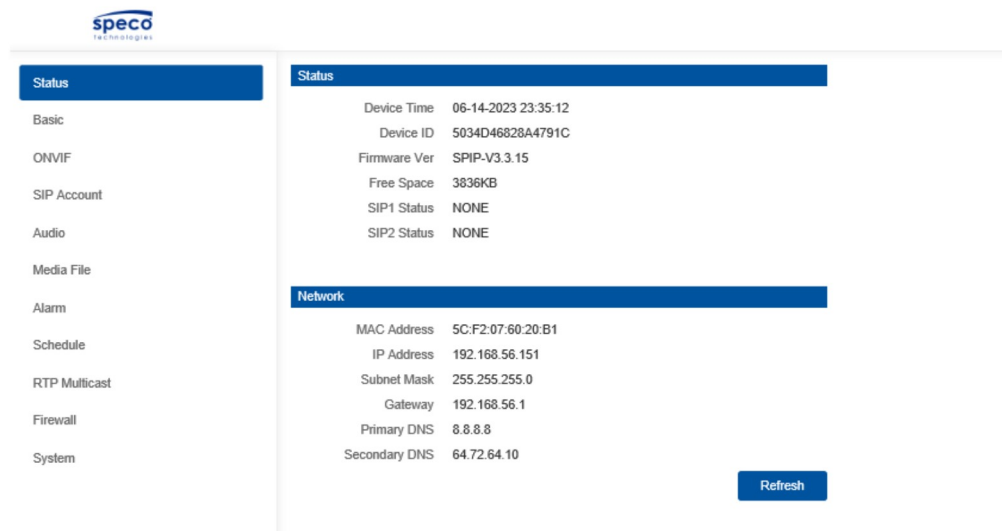

The screenshot displays the Speco Technologies web interface. On the left is a navigation menu with the following items: Status (highlighted), Basic, ONVIF, SIP Account, Audio, Media File, Alarm, Schedule, RTP Multicast, Firewall, and System. The main content area is divided into two sections. The top section, titled 'Status', contains the following information: Device Time (06-14-2023 23:35:12), Device ID (5034D46828A4791C), Firmware Ver (SPIP-V3.3.15), Free Space (3836KB), SIP1 Status (NONE), and SIP2 Status (NONE). The bottom section, titled 'Network', contains: MAC Address (5C:F2:07:60:20:B1), IP Address (192.168.56.151), Subnet Mask (255.255.255.0), Gateway (192.168.56.1), Primary DNS (8.8.8.8), and Secondary DNS (64.72.64.10). A 'Refresh' button is located at the bottom right of the Network section.

Status	
Device Time	06-14-2023 23:35:12
Device ID	5034D46828A4791C
Firmware Ver	SPIP-V3.3.15
Free Space	3836KB
SIP1 Status	NONE
SIP2 Status	NONE

Network	
MAC Address	5C:F2:07:60:20:B1
IP Address	192.168.56.151
Subnet Mask	255.255.255.0
Gateway	192.168.56.1
Primary DNS	8.8.8.8
Secondary DNS	64.72.64.10

Refresh



Speco Technologies is constantly developing and improving products. We reserve the right to modify product design and specifications without notice and without incurring an obligation. Rev. 7/6/2023. We are not responsible for typographical errors. ©2023 Speco Technologies. All rights reserved.

For full details on the setup and installation of Speco Technologies' products, please visit www.specotech.com.