

Dual Voltage Speakers for Fire and ECS/MNS Systems – Wall and Ceiling Mount



**SYSTEM
SENSOR®**

3825 Ohio Avenue, St. Charles, Illinois 60174
800/736-7672, FAX: 630/377-6495
www.systemsensor.com

156-0001-002

For use with the following models:

Wall Speakers: SPRL, SPWL

Ceiling Speakers: SPCRL, SPCWL

PRODUCT SPECIFICATIONS

Standard Operating Temperature:	32°F to 120°F (0°C to 49°C)
Humidity Range:	10 to 93% Non-condensing
Nominal Voltage:	25 Volts or 70.7 Volts
Maximum Supervisory Voltage:	50 VDC
Speaker Frequency Range:	400 – 4000 Hz
Power Settings:	¼, ½, 1, 2 Watts
Input terminal wire gauge:	12 to 18 AWG

PRODUCT DIMENSIONS

WALL PRODUCTS	Length	Width	Depth
Wall Speaker	6.520" (165 mm)	5.00" (127 mm)	0.97" (24.6 mm)
CEILING PRODUCTS	Length	Width	Depth
Ceiling Speaker	6.8" (173 mm)	N/A	1.00" (25.4mm)

MOUNTING BOX OPTIONS

SPEAKERS
SBBSPRL/SBBSPWL (wall), SBBCRL/SBBCWL (ceiling), 4" x 4" x 2 1/8" or deeper (When using 12AWG, 14 AWG, or adding extra wires in the box, a deeper box or extension ring is recommended.)

NOTICE: This manual shall be left with the owner/user of this equipment.

BEFORE INSTALLING

Please read the System Sensor Voice Evacuation Application Guide, which provides detailed information on speaker notification devices, wiring and special applications. Copies of this manual are available from System Sensor. NFPA 72 and NEMA guidelines should be observed.

Important: The notification appliance used must be tested and maintained following NFPA 72 requirements.

GENERAL DESCRIPTION

System Sensor series of notification appliances offer a wide range of audible and visible devices for life safety notification. Our line of speakers is designed to be used at either 25 or 70.7 volts, and operate at any one of four input power levels. Our speakers are suitable for dry and damp environments. These products are electrically backwards compatible with previous generation of System Sensor speakers. With its low total harmonic distortion, the System Sensor SPL series offers high fidelity sound output. Wall and ceiling products may be used interchangeably (wall products may be used on ceiling and ceiling product may be used on wall).

The speakers, and all power level settings, are listed to ANSI/UL 1480 requirements for public mode applications.

FIRE ALARM SYSTEM CONSIDERATIONS

All wiring must be installed in compliance with the National Electrical Code (NEC) and applicable local codes. System Sensor recommends installing fire alarm speakers in compliance with NFPA 72, ANSI/UL 1480 and NEC 760.

WIRING AND MOUNTING

All wiring must be installed in compliance with the National Electric Code and the local codes as well as the authority having jurisdiction. Wiring must not be of such length or wire size which would cause the notification appliance to operate outside of its published specifications. Improper connections can prevent the system from alerting occupants in the event of an emergency.

Wire sizes up to 12 AWG (2.5 mm²) may be used with the mounting plate. The mounting plate ships with the terminals set for 12 AWG wiring.


Make wire connections by stripping about 3/8" of insulation from the end of the wire. Then slide the bare end of the wire under the appropriate clamping plate and tighten the clamping plate screw.

See Figure 1 for wiring terminals and strip guide reference.

1. Connect the speaker. (See Figure 1.)

2. There are two rotary switches on the back of the product. The first switch is used to select either 25 or 70.7 volts input and the second switch is used to select the input power of ¼, ½, 1 or 2 watts. (See Figure 2.)

FIGURE 1. WIRING DIAGRAM AND WIRING TERMINALS

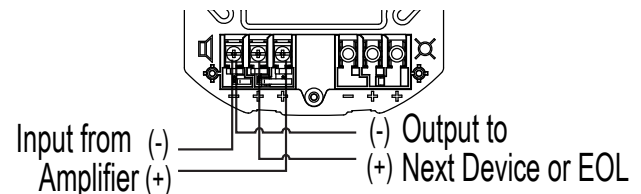


A0380-02

Wiring Terminals

1. Negative (-). Line in and out
2. Positive (+). Line in and out
3. Positive (+). Line in and out

NOTE: Do not loop electrical wiring under terminal screws. Wires connecting the device to the control panel must be broken at the device terminal connection in order to maintain electrical supervision.

FIGURE 2. SPEAKER WATTAGE AND VOLTAGE SETTINGS

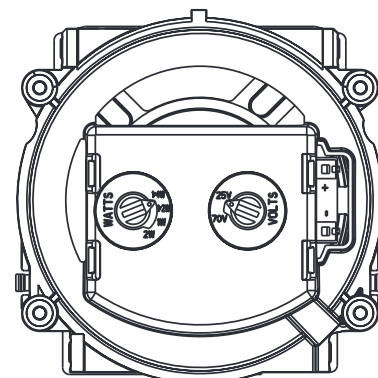


A0419-01

SHORTING SPRING FEATURE

System Sensor notification appliances come with a shorting spring that is provided between terminals 2 and 3 of the mounting plate to enable system continuity checks after the system has been wired, but prior to installation of the final product. (See Figure 3.) This spring will automatically disengage when the product is installed, to enable supervision of the final system.

FIGURE 3. SHORTING SPRING

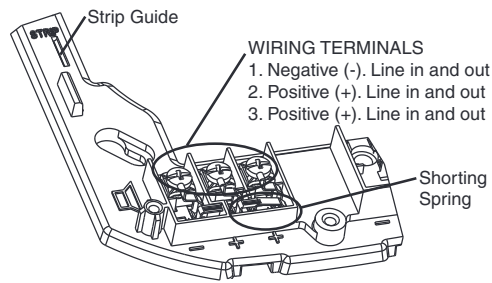

A0499-02

AVAILABLE POWER SETTINGS

System Sensor offers a wide range of power settings for your life safety needs, including ¼, ½, 1, and 2W. Sound levels data per UL 1480 can be found in Table 1. Directional characteristics can be found in Table 2.

TABLE 1. SOUND LEVELS FOR EACH TRANSFORMER POWER SETTING

Setting	UL Reverberant (dBA @10 ft)	UL Anechoic (dBA @10 ft)
¼ W	79	79
½ W	82	82
1 W	85	85
2 W	88	88

CAUTION

Signal levels exceeding 130% rated signal voltage can damage the speaker. Consequently, an incorrect tap connection may cause speaker damage. This means that if a 25V tap is selected when a 70.7V amplifier is being used, speaker damage may result. Therefore, be sure to select the proper taps for the amplifier voltage/input power level combination being used.

TABLE 2 DIRECTIONAL CHARACTERISTICS

Angle (degrees)	Decibels
70°	-3dB
90°	-6dB

MOUNTING AND REMOVING APPLIANCE

1. Attach mounting plate to junction box. (See Figures 4 and 5.)
2. Connect field wiring to terminals. (See Figure 1.)
3. If the product is not to be installed at this point, use the protective dust cover to prevent contamination of the wiring terminals on the mounting plate.
4. To attach product to mounting plate:
 - a. Remove the protective dust cover.
 - b. Hook the tabs on the top of the product housing into the grooves on mounting plate.
 - c. Pivot the product into position to engage the terminals on the mounting plate. Make sure that the tabs on the back of the product housing fully engage with the mounting plate.
 - d. Hold product in place with one hand, and secure product by tightening the single mounting screw in the front of the product housing.

Ceiling Models only: To remove product from the mounting plate, loosen the captive mounting screw and press the locking button.

CAUTION

The “hold in place” snaps are not intended to secure the product to the back box. The product must be secured to the back box using the screws provided.


CAUTION

Factory finish should not be altered: Do not paint!

CAUTION


Do not over tighten mounting plate screws; this may cause mounting plate to flex.

FIGURE 4. WALL SPEAKER

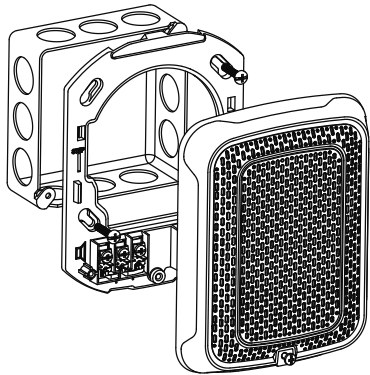

A0500-01

FIGURE 5. CEILING SPEAKER

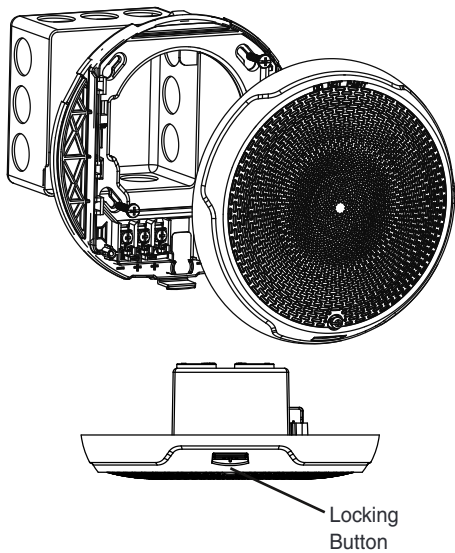

A0501-02

A0576-00