



IP Audio | User Manual

Table of Contents

Overview	3
Web Configuration.....	4
Logging into the IP Speaker	5
Navigating the Web Interface	5
Status Menu	6
Basic Menu	6
ONVIF Menu.....	7
SIP Account Menu.....	7
Audio Menu	8
Media File Menu	8
Alarm Menu	9
Schedule Menu	9
RTP Multicast Menu.....	10
Firewall Menu	11
System Menu	12


Overview

The Speco SPIP series are IP based paging speakers designed for indoor and outdoor applications. Our Speco IP speakers are compatible with both the SIP & the ONVIF protocol. This will allow for the use of VoIP in applications. Each IP speaker has up to 10 RTP multicast addresses. Alarm in and HTTP URL can combine with our alarm systems. Pre-recorded messages and scheduled broadcasting are also another way that the Speco IP speakers meet the paging demands.




Web Configuration

- 1) Download Speco Audio Manager from Specotech.com.
- 2) This can be found under the support tab at Specotech.com.

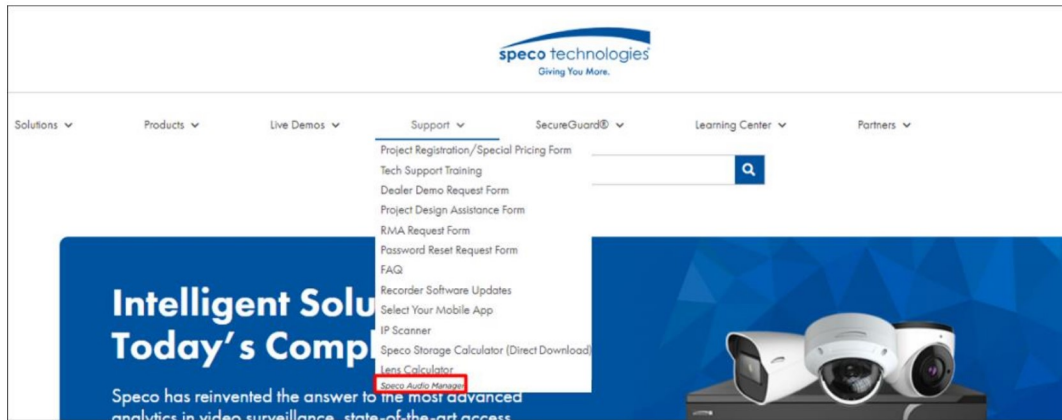


- 3) Extract the zip-file and run the exe for Speco Audio Manager on your computer.
- 4) Put the Speco Audio Manager shortcut on to your desktop/laptop.
- 5) Lastly run Speco Audio Manager and click on scan device. This will find every Speco IP speaker on the network.

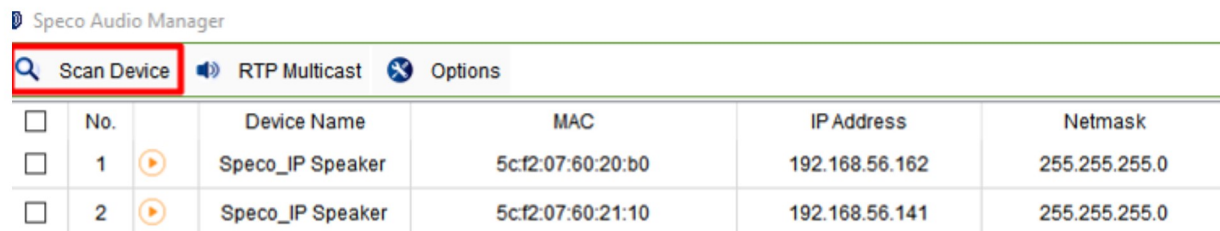

Logging into the IP Speaker

- 1) Through the Speco Audio Manager if you double click on one of the speakers IP addresses it will direct you to the web interface of that IP speaker.
- 2) Every Speco IP speaker will have the same default username & password.
- 3) Click on “Sign in” to log into the IP speaker.

Username: admin | Password: 1234

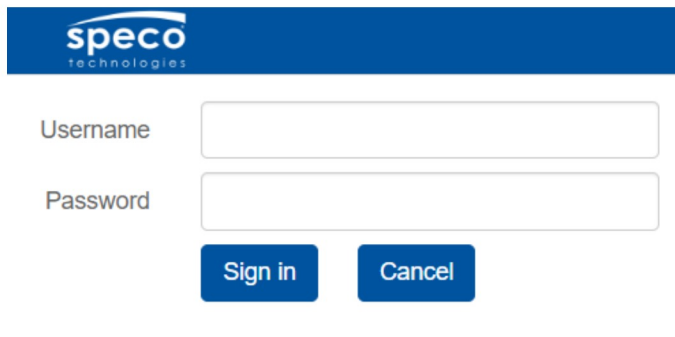The image shows a login form for Speco Technologies. At the top is a blue header with the 'speco technologies' logo. Below the header, there are two input fields: 'Username' and 'Password'. The 'Username' field is a simple text box, and the 'Password' field is a text box with a small eye icon to its right. Below these fields are two blue buttons: 'Sign in' and 'Cancel'.


Navigating the Web Interface

Once logged into the IP speaker there will be eleven menus to choose from. The following menus are:

- 1) **Status**
- 2) **Basic**
- 3) **ONVIF**
- 4) **SIP Account**
- 5) **Audio**
- 6) **Media File**
- 7) **Alarm**
- 8) **Schedule**
- 9) **RTP Multicast**
- 10) **Firewall**
- 11) **System**

Status Menu

On this menu the information consists of the date/time, the devices ID, the firmware version, how much space is free on the device, the SIP account status, and the network information will also be listed at the bottom of the page. It's important to know that you can only view the information here.

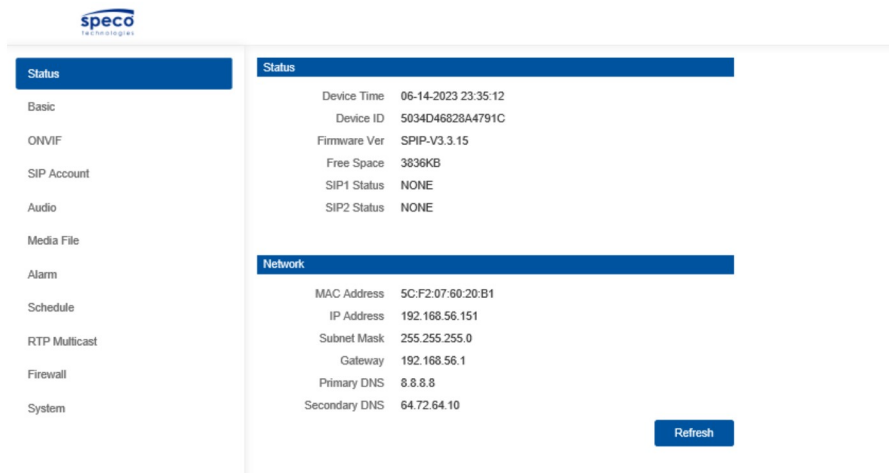

The screenshot shows the 'Status' menu in the SPECO IP Audio web interface. On the left is a sidebar with navigation links: Status, Basic, ONVIF, SIP Account, Audio, Media File, Alarm, Schedule, RTP Multicast, Firewall, and System. The main content area is titled 'Status' and displays the following information:

Device Time	06-14-2023 23:35:12
Device ID	5034D46828A4791C
Firmware Ver	SPIP-V3.3.15
Free Space	3836KB
SIP1 Status	NONE
SIP2 Status	NONE

Below this, the 'Network' section displays:


MAC Address	5C:F2:07:60:20:B1
IP Address	192.168.56.151
Subnet Mask	255.255.255.0
Gateway	192.168.56.1
Primary DNS	8.8.8.8
Secondary DNS	64.72.64.10

A 'Refresh' button is located at the bottom right of the network information.

Basic Menu

The Basic Menu will list the date/time, and the network settings. On this menu you will be able to make any necessary changes to the settings. Every IP speaker will be set to DHCP by default. If you wanted to change the IP speaker to static, you can do this by clicking on the static IP address button and clicking save at the bottom.

***If the IP speaker doesn't have a way to receive DHCP, the default IP address will be 192.168.5.200**

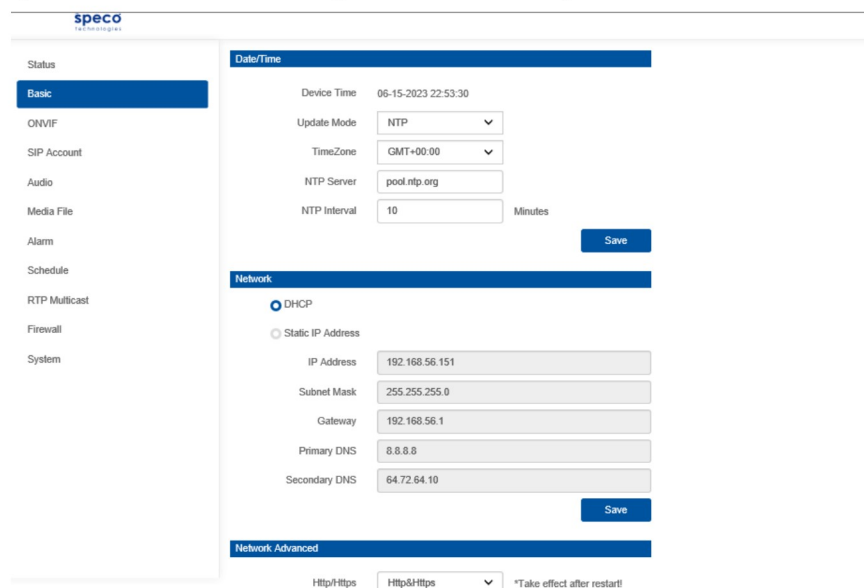

The screenshot shows the 'Basic' menu in the SPECO IP Audio web interface. The sidebar on the left is the same as in the Status menu. The main content area is titled 'Basic' and contains three sections:

- Date/Time:**
 - Device Time: 06-15-2023 22:53:30
 - Update Mode: NTP (dropdown)
 - TimeZone: GMT+00:00 (dropdown)
 - NTP Server: pool.ntp.org
 - NTP Interval: 10 Minutes
 - Save button
- Network:**
 - ☒ DHCP
 - ☐ Static IP Address
 - IP Address: 192.168.56.151
 - Subnet Mask: 255.255.255.0
 - Gateway: 192.168.56.1
 - Primary DNS: 8.8.8.8
 - Secondary DNS: 64.72.64.10
 - Save button
- Network Advanced:**
 - Http/Https: Http&Https (dropdown)
 - *Take effect after restart!

ONVIF Menu

The ONVIF menu consists of an enable/disable option for ONVIF. You can also set the ONVIF username and password.

***ONVIF will be enabled by default.**

SIP Account Menu

The SIP account menu allows you to create up to two separate SIP accounts. SIP is a protocol that initiates a direct call to that specific VoIP device, and this will include IP speakers. This will give you the option to have two-way audio with IP speakers that have a built-in microphone.

Expire Time	Set the expire time of registered account information
Ringing Tone	5 system ringtones and 10 users upload media files
Auto Answer	answer immediately and answer delay when a calling incomes
Incoming Notify	Put an input URL, when a incoming call ringing, URL take effect
Answer Notify	Put an input URL, when a incoming call answered, URL take effect

Audio Menu

The Audio menu will have the option to select between four different audio codecs: **OPUS**, **G.722**, **G.711U**, and **G.711**. In this menu you can also set the volume control of the IP speaker. If the IP speaker has a microphone, you will see the option to enable the microphone and set the volume of the IP speaker.



The screenshot shows the Speco Technologies web interface. On the left is a sidebar menu with options: Status, Basic, ONVIF, SIP Account, **Audio** (highlighted), Media File, Alarm, Schedule, RTP Multicast, Firewall, and System. The main content area is divided into two panels: **Codec** and **MIC**.

Codec Panel:

- Codec Setting:** A list of checkboxes for OPUS, G.722, G.711U, and G.711A, all of which are checked.
- Speaker Panel:**
 - Volume (0-100):** A text input field with the value 37.
 - Amp Auto OFF:** A dropdown menu set to YES.
 - Jitter Buffer (60 - 2000):** A text input field with the value 360, followed by the unit 'ms'.
 - HPF:** An unchecked checkbox.
 - NR:** An unchecked checkbox.

MIC Panel:

- MIC Enable:** A checked checkbox.
- Gain:** A dropdown menu set to None.
- Volume (0-100):** A text input field with the value 44.
- AEC:** A checked checkbox.
- AEC Time (1-200):** A text input field with the value 20, followed by the unit 'ms'.
- AGC:** A checked checkbox.
- AGC Mode:** A dropdown menu set to Auto.
- AGC Target (0-31):** A text input field with the value 3.
- AGC Gain (0-90):** A text input field with the value 30.
- HPF:** An unchecked checkbox.
- NR:** A checked checkbox.
- NR Level:** A dropdown menu set to 3.


A blue **Save** button is located at the bottom right of the interface.

Jitter buffer: Helps make the audio more stable.

Amp Auto OFF: Will be set to “Yes” by default. This will eliminate any noise when not broadcasting.

Media File Menu

The Media File menu consists of 5 preset bell options to choose from. You can also set up to 10 of your own audio files and play the files directly through the IP speaker. The Maximum media file size is listed as a total of 3836 kilobytes. ***Through Speco Audio Manager there is no file size limit**

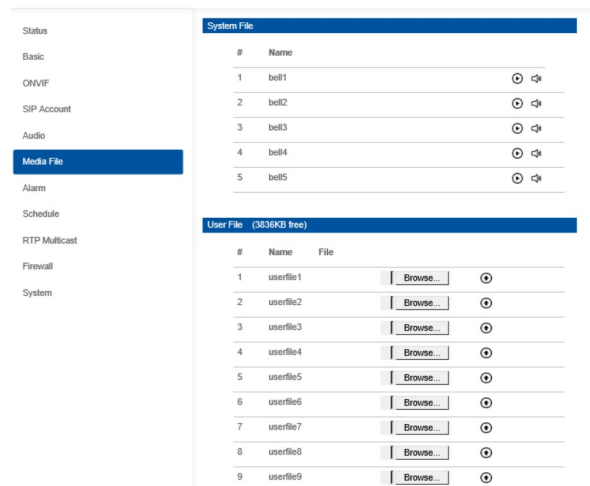

The screenshot shows the Speco Technologies web interface with the **Media File** menu selected in the sidebar. The main content area displays two sections: **System File** and **User File (3836K free)**.

System File:

#	Name	
1	bell1	⊞ 🔊
2	bell2	⊞ 🔊
3	bell3	⊞ 🔊
4	bell4	⊞ 🔊
5	bell5	⊞ 🔊

User File (3836K free):

#	Name	File	
1	userfile1	Browse...	⊞
2	userfile2	Browse...	⊞
3	userfile3	Browse...	⊞
4	userfile4	Browse...	⊞
5	userfile5	Browse...	⊞
6	userfile6	Browse...	⊞
7	userfile7	Browse...	⊞
8	userfile8	Browse...	⊞
9	userfile9	Browse...	⊞
10	userfile10	Browse...	⊞

Alarm Menu

The Alarm menu allows for the user to set up one alarm input/output to the IP speaker. By default, you will have to enable the alarm input. The alarm output will have to be selected through this menu first, then it will play either one of the preexisting media files or it will play a custom audio clip. Once the alarm is enabled, you will also have the option to enable “Play File Enable”, which means you can take the example URL commands, and they will play the audio clip by just sending it through a web address.

Schedule Menu

This menu will allow the user to create a custom schedule. The schedule menu is designed to be used for schools, factories, and office projects. The schedule allows for the user to make a regular bell, announcement or alarm happen at a specific time/date. In each IP speaker there are 10 different schedules that can be created. To create a schedule, click on the edit option, and then a new schedule window will come up. Enable the schedule and customize the schedule you wish to create by: giving it a name, start time/end time, allowed days in the schedule, action time, action type, the file it will be playing, and lastly the cycle mode. After creating the schedule click save at the bottom.

#	Name	Time	Action	File	Edit option	Delete option
1						
2						
3						
4						
5						
6						
7						
8						
9						
10						

RTP Multicast Menu

The RTP multicast menu will be used to set up RTP addresses to zone out the IP speakers. RTP stands for **Real-Time Transport Protocol**. This allows the user to stream audio over the internet, thereby enabling VoIP (Voice over Internet Protocol). On this menu you will see a list from 1 through 10. This means you can create up to 10 RTP addresses, and depending on what slot you put the RTP address in will determine what priority it is set too. Number 1 being the highest priority on the list & number 10 being the lowest priority on the list. This will allow you to do priority paging. After creating an RTP list, click save at the bottom.

***RTP address Range: 224.0.0.0-239.255.255.0**

***Port Range: 1500-6300**

RTP Multicast

Priority	IP Address (e.g. 239.255.0.1:5004)
1	
2	
3	
4	
5	
6	
7	
8	
9	
10	

Save

Firewall Menu

This menu is used primarily to keep your network safe. You can edit the firewall settings by clicking on the edit option. From the edit option, you can add any specific rules that you wish to add to your IP speaker's firewall. To do this you have to first enable the firewall rules to do this. You can also add firewall defensive rules to the IP speaker. Again, this will have to be enabled first to use this feature. You can create up to 5 rules for both categories in your firewall settings.

Firewall Rules					
#	Name	Type	IP/MAC	Action	
1					
2					
3					
4					
5					

Automatic Defense Rules					
#	Name	Protocol	Port Range	Rate	
1		-			
2		-			
3		-			
4		-			
5		-			

Firewall Rules

Firewall Add/Edit

Enable ☐

Name

Rule Type IP

Protocol ALL

IP Address

Net Mask

Action ACCEPT

Save

Cancel

Firewall Defensive Rules

Automatic Defense Add/Edit

Enable ☐

Name

Protocol TCP

Port Range -

Rate (1-10000) /s

Save

Cancel

System Menu

The System menu will allow you to Reboot, Reset, and upgrade the firmware of the IP speaker. On this page you will also be able to change the IP speaker's username and password from the default to a more unique username and password if needed.

The screenshot displays the 'System Menu' interface, which is divided into two main sections: 'Upgrade' and 'Security'. The 'Upgrade' section is highlighted with a red box and contains three buttons: 'Reboot', 'Reset', and 'Upgrade'. Each button has a corresponding action: 'Reboot Device Now', 'Reset to Factory Setting', and 'Browse...' (with a note 'No file selected.'). The 'Security' section is also highlighted with a red box and contains five input fields: 'User Name', 'Password', 'New User Name', 'New Password', and 'Confirm Password'. A 'Save' button is located at the bottom right of the 'Security' section.

Upgrade	
Reboot	Reboot Device Now
Reset	Reset to Factory Setting
Upgrade	Browse... No file selected.

Security	
User Name	
Password	
New User Name	
New Password	
Confirm Password	
Save	



Speco Technologies is constantly developing and improving products. We reserve the right to modify product design and specifications without notice and without incurring an obligation. Rev. 3/21/2023. We are not responsible for typographical errors. ©2023 Speco Technologies. All rights reserved.