



Wall Mounted Range Hood System

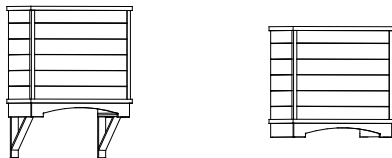

Important Notes

- Always read the instructions completely and carefully before beginning assembly.
- Remove and check contents for damage and/or missing parts. Keep the original cartons and packing materials, which are required for any authorized adjustment by our dealers.
- These instructions are for reference only. Make sure installation procedures comply with all applicable building codes in your area.


Parts List

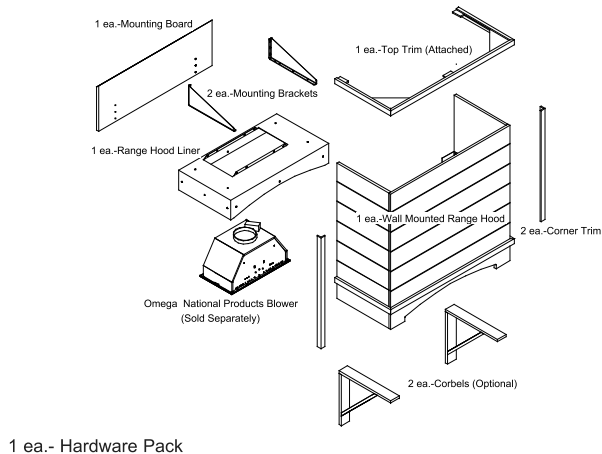


Form OME-111, 11/2017
©Omega National Products

Assembly Instructions


Step 1: Install 6 each "T" nuts into the back of the mounting plate into the counter bored holes. Hammer them flush to the surface (See figure 1).

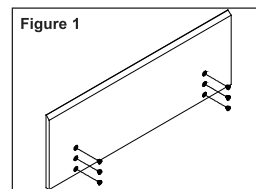

Step 2: Draw a level line on the wall centered where the Range Hood is to go 8.00" (with Corbels) and 6.38" (No Corbels) above where the bottom of the Range Hood will be (See figure 2). A distance of 30 inches from the stove top to the wood hood is recommended. Check local building codes and regulations for final determination.

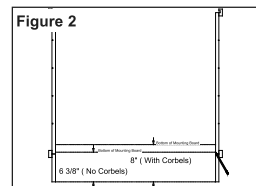


Step 3: Screw the mounting plate to the wall matching the bottom of the mounting plate to the line on the wall. Make sure to hit at least two studs and to use at least 6 screws of sufficient type, size, and length for the application (See figure 3).

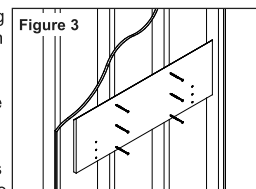



Warning: Failure to fasten this panel to studs or using the wrong screws may cause a failure of the mounting system and possible injury.

Step 4: Start 6 each 10-24 x 3/4" screws into the "T" nuts that were previously installed (See figure 4).


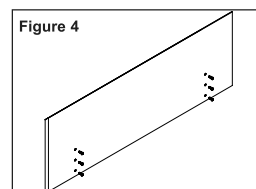


Form OME-111, 11/2017
©Omega National Products


Step 5: Insert the Omega National Products Blower into the liner from below. Using the 4 holes in the side of the blower attach to the liner with 4 each 8-32 x 1/2" screws and square nuts (See figure 5).

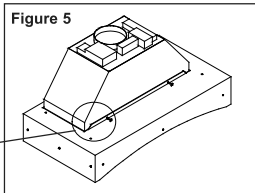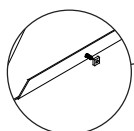


Step 6: Fasten the Metal Mounting brackets to the liner with 4 each 10-24 x 3/4" screws and nuts. Only hand tighten these at this time (See figure 6).

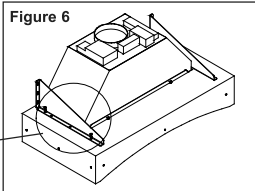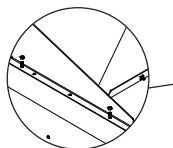

Step 7: Using help if necessary, lift the liner, Blower and mounting bracket assembly into position and hang on the screws extending from the mounting plate. Make sure the brackets are firmly seated into the key hole slot and then tighten all the screws (See figure 7).

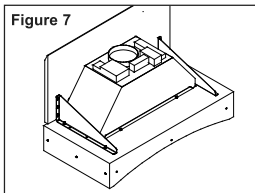


Step 8: Make all ventilation and electrical connections at this time. These must be done in accordance to all applicable building codes and requirements in your area.

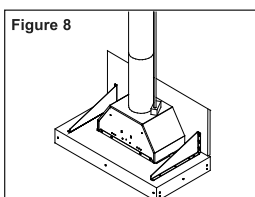


Form OME-111, 11/2017
©Omega National Products


Step 9: Carefully position the Wood Range Hood against the wall and slide down onto the Mounting Board. The liner should be slightly above the wood (See figure 9).

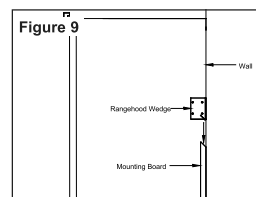

Step 10: Fasten the metal liner to the Wood Range Hood at this time using 6 each #8 x 1/2" pan head screws (See figure 10).

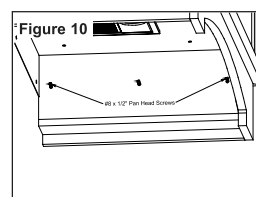


Step 11: Fasten the corner mouldings in place using a fine head brad nail. If trimming or putting RH against the ceiling see the trimming instructions.

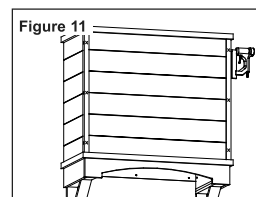

Note: If using Omega National Products RH with Corbels proceed to Step 12.


Step 12: Put the corbels in position and fasten with screws, nails, or glue. The Corbels are not necessary for support (See figure 12).

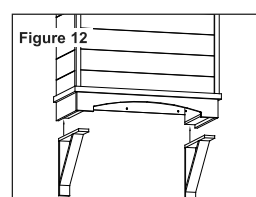


Form OME-111, 11/2017
©Omega National Products

Trimming and Ceiling Installation Instructions


Step 1: Carefully remove the screws holding on the top trim and then carefully remove the top trim. This trim has not been glued on but the finish may keep it from being easily removed (See figure 1).

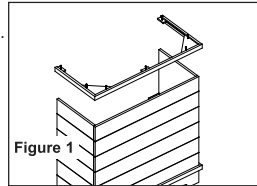


Step 2: Draw a level line on the wall centered where the Range Hood is to go 34" (with Corbels) down from the ceiling and 35 7/8" (No Corbels) (See figure 2). The bottom of the Range Hood will be 42" down from the ceiling. A distance of 30 inches from the stove top to the wood hood is recommended. Check local building codes and regulations for final determination.

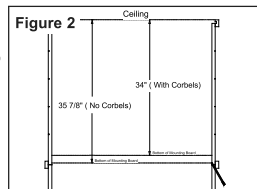

Step 3: If trimming the RH is necessary it is recommended to trim near or on the grooves for a balanced look. Make sure to protect the RH from scratching or marring by the saw. Change the dimensions above in Step 2 by the amount trimmed off.

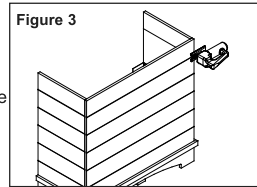


Step 4: Temporarily fasten the mounting board to the wall on the line drawn with 2 screws. Make sure to hit the studs.

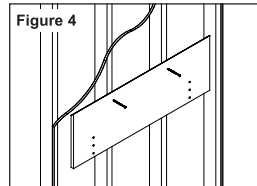


Form OME-111, 11/2017
©Omega National Products

Step 5: Temporarily hang the RH on the Mounting Board (see Step 9). The RH should be 3/4" to 7/8" away from the ceiling. The top trim can be slipped in to check the fit. Make adjustments to the fit by moving the Mounting Board up or down and reattaching to the wall. When the fit is satisfactory permanently attach the Mounting Board to the wall (Installation Step 3)

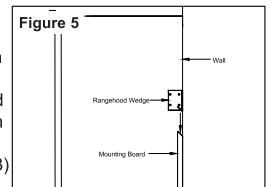


Note: Proceed with the Installation Instructions making sure to look at each step from the beginning to make sure nothing was missed.

Step 6: Slide the Top Trim in between the ceiling and the top of the RH, it can be attached with pin nails at this time.

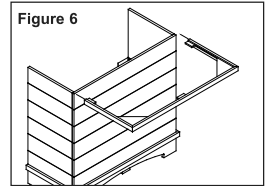

Step 7: Cut corner trim pieces to length and install as in Installation Step 11.

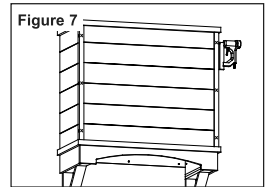

Omega National

PRODUCTS
1010 Rowe St. Elkhart, IN 46516
(574) 295-5353 Fax (800) 367-3329
www.omeganationalproducts.com

Form OME-111, 11/2017
©Omega National Products