



Modern Select Range Hood

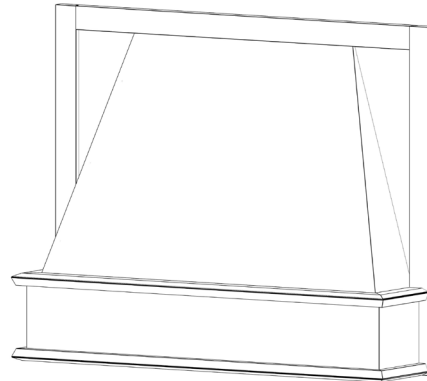


Important Notes

- Always read the instructions completely and carefully before beginning assembly.
- Remove and check contents for damage and/or missing parts. Keep the original cartons and packing materials, which are required for any authorized adjustment by our dealers.
- These instructions are for reference only. Make sure installation procedures comply with all applicable building codes in your area.


Parts List

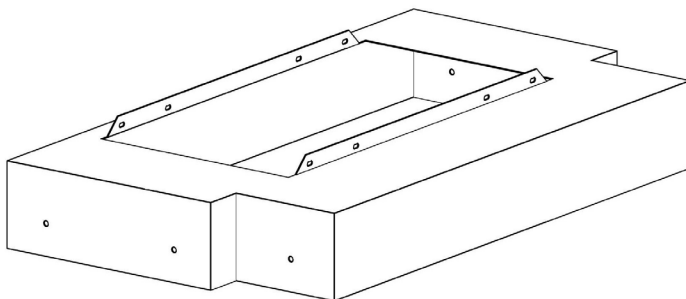

1 each: Metal Liner

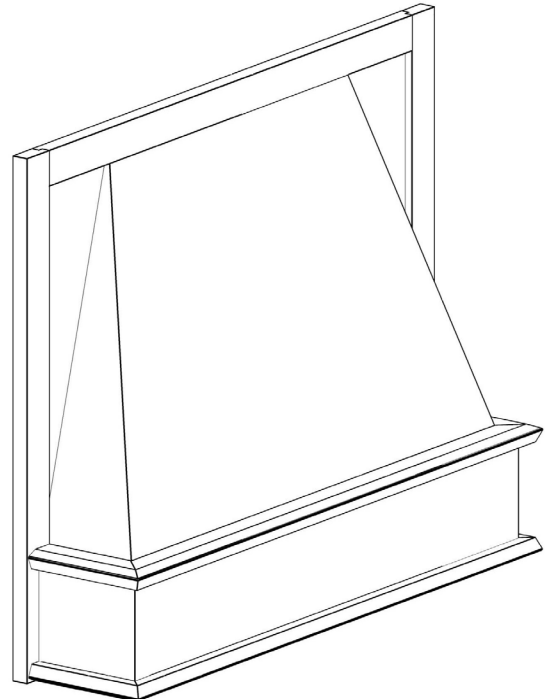

1 each: Wood Range Hood

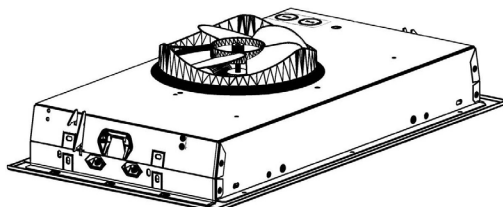


1 each: Broan Blower
(Sold Separately)

Assembly Instructions


Step 1: Place the Select Series Range Hood between cabinets at the desired height, make sure the cabinet face frames are parallel and evenly spaced at 30" or 36" depending on Rangehood (See figure 1).

Figure 1

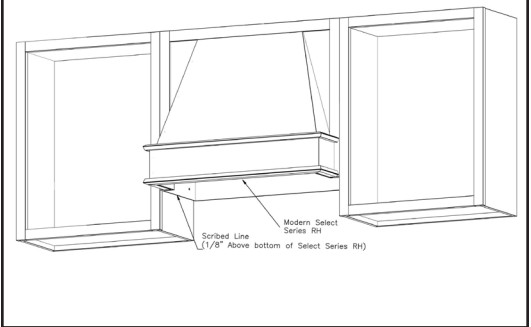


Step 2: Mark the location of the bottom of the Wood Hood on both cabinets and then remove it to install the Metal Liner. Measure up 1/8" above the marks made earlier and scribe a level line horizontally front to back on the sides of the cabinets (See figure 2).

Figure 2

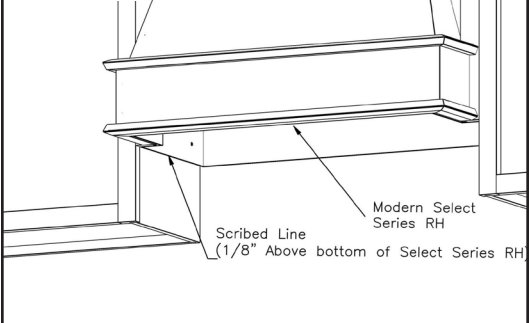


Step 3: Raise Metal Liner so that bottom edge of liner is level with scribed lines. Use four (4) #8 x 1/2" screws provided to attach liner to adjacent cabinets through pre-drilled holes in liner. (If metal liner is not flush to cabinet sidewalls, it may be necessary to use a filler piece to avoid bowing the liner.) Locate studs and place two #8 x 1 1/4" screws through the rear of liner (See figure 3).

Figure 3

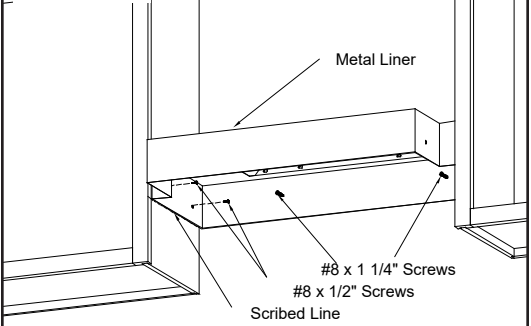


Step 4: Remove the liner and insert the Broan Blower into the liner from below. Using the 4 threaded holes on the sides of the blower, attach to the liner with 4 each 8-32 x 1/4" screws found in the Broan Blower hardware pack. (See figure 4).

Figure 4

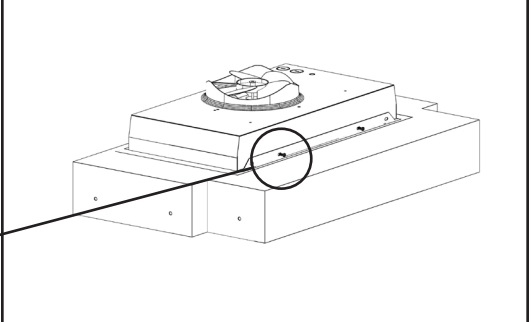

See form OME-116 for more detail on the Broan installation.

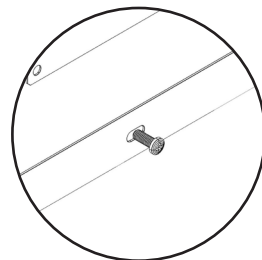

Step 5: Re-install the liner and Blower between the cabinets using help if necessary. (See figure 5).

These Broan Blowers can be used:

RHVPF300SS BROAN 260 CFM

RHVB400SS BROAN 400 CFM

RHVB600SS BROAN 600 CFM

These units can be purchased through





Omega National Products by Rev-A-Shelf or

Omega National Products by Rev-A-Shelf distributors.

Step 6: Make all ventilation and electrical connections at this time. These must be done in accordance with all applicable building codes and requirements in your area (See figure 6).

Step 7: Remove the shipping brace from the back of the Range Hood (See figure 7).


Step 8: Slide decorative hood front into position over T-Shaped liner and between adjacent cabinets. Install the hood front by adjoining to adjacent cabinets through the front frames using (4) #8 x 2 1/2" screws (not provided). Predrilling may be necessary to avoid splitting the rangehood or cabinets. (See figure 8).

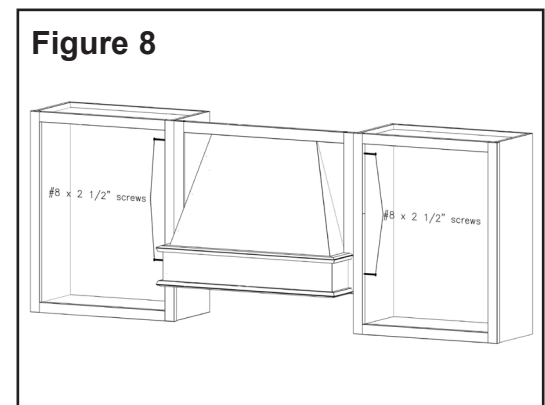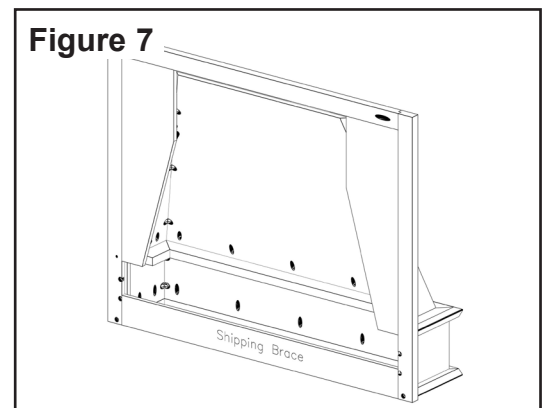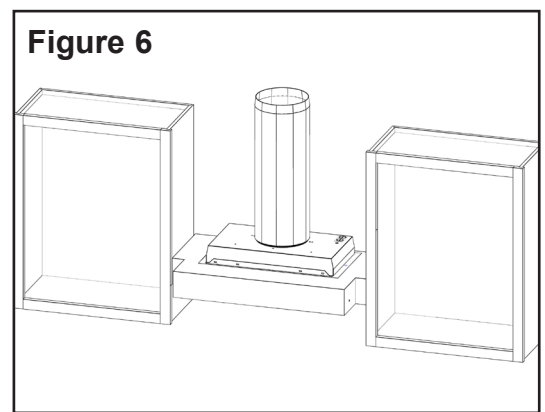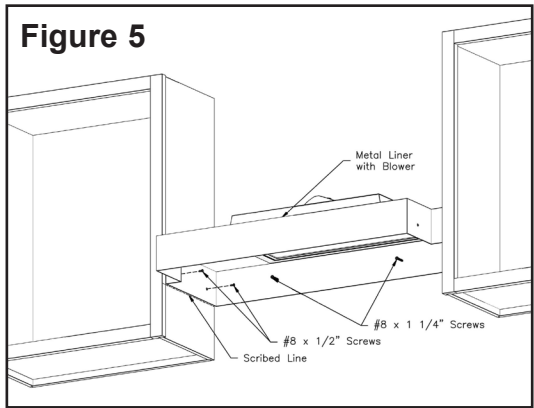

Removable Front Instructions


Step 1: To be able to use the removable front feature, first remove the 2 shipping screws. (See figure 01).

Figure 01

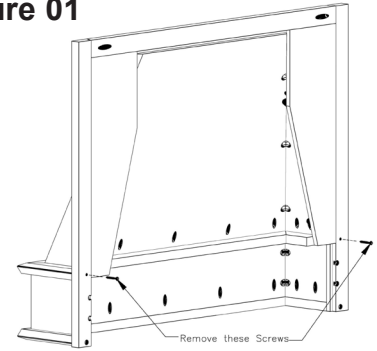


Step 02: To remove the front of the range hood, grasp the top side mouldings on the apron, and pull towards you. (See figure 02).

Figure 02

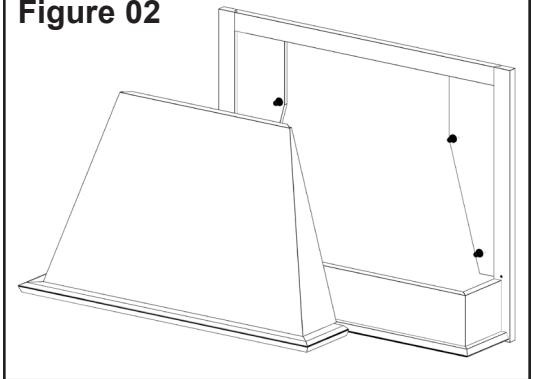

Step 03: To replace the front of the range hood, grasp the top side mouldings on the apron, and carefully align the front onto the top of the apron, and push into place. (See figure 02).

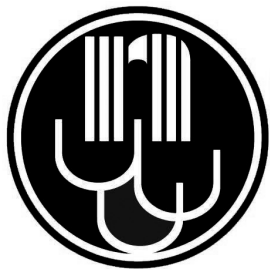

Omega National Products

by:  **REV-A-SHELF**

1010 Rowe Street | Elkhart, IN USA 46516-5589

Phone (574) 295-5353 | Fax (574) 295-5329