
Zehnder Arteplano Towel Rail



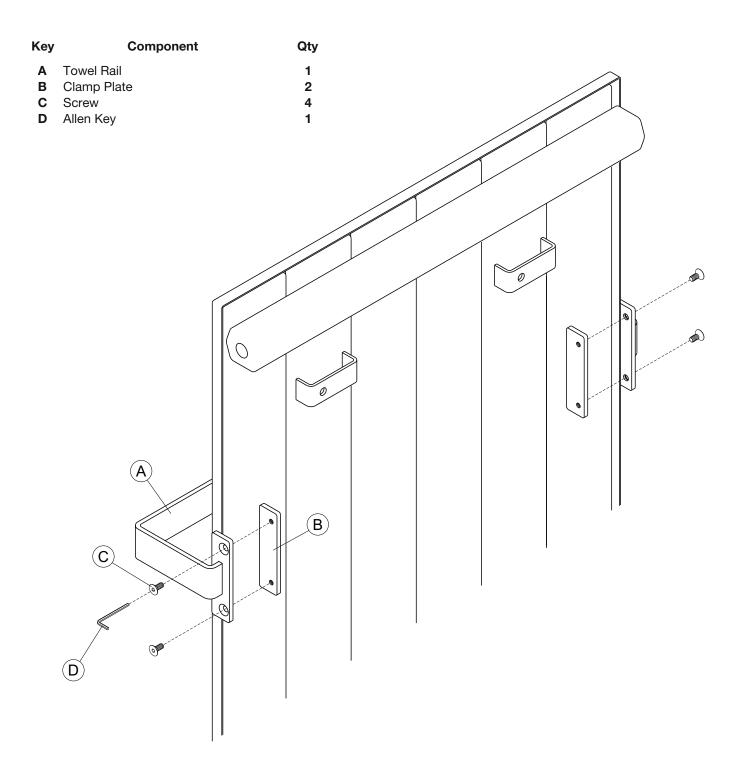

Assembly Instructions

Place towel rail (A) on radiator.

Loosely fit clamp plates (B) to towel rail (A) using screws (C) and Allen key (D) .

Position towel rail at desired height and with the rear flange of the radiator between the towel rail (A) and clamp plate (B) tighten screws (C) to secure in place.





Issue 1.0