


Zehnder Folio Vertical Electric

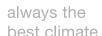

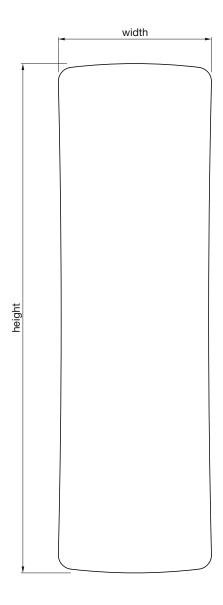

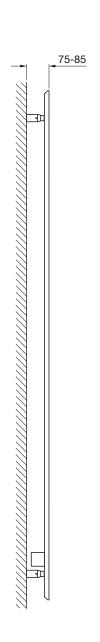



All dimensions shown are in millimetres

Construction: internal - copper/aluminium honeycomb/graphite

external - aluminium panels

1.2m long flying lead (2 core) Connections:

Model	Height ± 2mm	Width ± 2mm	Finish	Output <i>Watts</i>	Weight kg
FZV-180-042/GF FZV-180-052/GF	1796 1796	441 540	painted painted	500 750	11.0 12.5
FZV-180-062/GF	1796	740	painted	1000	15.5
					Issue 1.0





Zehnder Folio Vertical Electric





Tools & Material Required

Tape measure
Screwdriver - crosshead & flathead
Pliers
Electric drill
Masonry drill bit
Spirit level
Stepladder (for taller radiators)

Key	Component	Qty
Α	Boss	4
В	Wall Plug	4
С	Bracket	4
D	Screw, 6mm dia x 50mm	4
Е	Washer	4
F	Grub Screw	4
G	Allen Key	1

Assembly Instructions

Screw bosses (A) to fixings on the back of the radiator.

Accurately mark out bracket holes on wall using spirit level.

Drill four holes to a minimum depth of 65mm & insert wall plugs (B).

Attach brackets (C) to wall with screws (D) & washers (E).

Hang radiator onto wall by inserting bosses (A) into brackets (C).

Tighten grub screws (F) with Allen key (G).

Electric radiators should be fitted only by a qualified electrician and must be earthed and connected to a cable outlet in the bathroom in accordance with I.E.E. wiring regulations. The electrical connection should be made to a '5 amp fused fixed spur' located outside the bathroom.

Note: for maintenance purposes, cable outlets must remain accessible and cables must not be buried directly into walls.

