


Tools & Material Required	Key	Component	Qty
Allen key - 12mm	Α	Valve Body	1
Adjustable Spanner	В	Nut	2
	С	Valve Tail (1/2" BSP)	2
	D	Compression Fitting (15mm)	2

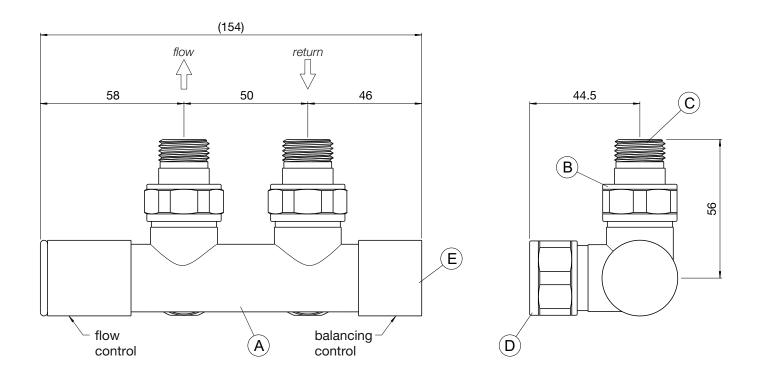

## **Fitting Instructions**

Fit valve tails (C) to radiator using 12mm Allen key, ensuring nut (B) is in place.

Note: over-tightening of valve tails may cause damage to surface finish of radiator connections. Do not use grips.

Loosen compression fittings (D) and apply valve body (A) to 15mm pipe tails.

Install radiator onto bracket mountings and tighten valve tails (C) onto valve body (A).

Tighten compression fittings (D).

After filling and venting radiator, remove cap (E) and adjust balancing control to balance radiator.





Tel: 01276 605800

retailsales@zehnder.co.uk www.zehnder.co.uk

Fax: 01276 24058