Zehnder Valve Set 6

always the best climate **zehn**d

Tools & Material Required

Allen key - 12mm Spanner - 29mm Adjustable Spanner Screwdriver - flathead

 (A)

(E)

 (H)

balancing -

 (A)


F

 (\mathbf{H})

control

15

return

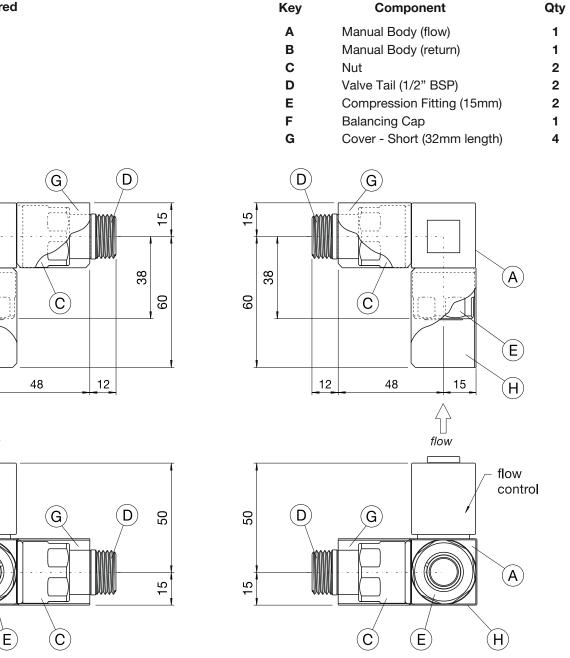

Assembly Instructions

Fit valve tails (D) to radiator using 12mm Allen key, ensuring nut (C) is in place. Note: over-tightening of valve tails may cause damage to surface finish of radiator connections. Do not use grips. Loosen compression fittings (E) and apply valve bodies (A) & (B) to 15mm pipe tails.

Install radiator onto bracket mountings and tighten valve tails (D) onto valve bodies (A) & (B).

Tighten compression fittings (E).

After filling and venting radiator, balance radiator: remove balancing cap (F) by twisting anti-clockwise, regulate the flow by turning the screw with a screwdriver to the desired position and then replace the balancing cap (F) by rotating clockwise until cap is square to the body.

Finally, fit covers (G).



Concept House Watchmoor Point Camberley Surrey GU15 3AD Tel: 01276 605800 Fax: 01276 24058 retailsales@zehnder.co.uk www.zehnder.co.uk