

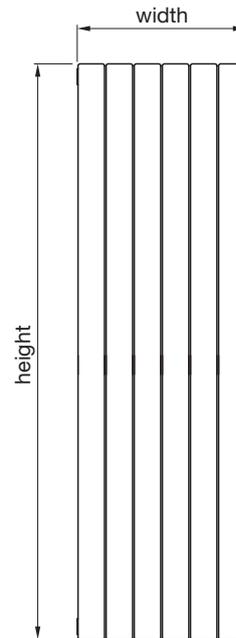


ROEHD

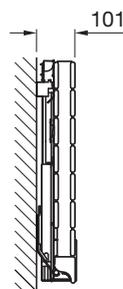

ROEV



All dimensions shown are in millimetres

All steel construction: **70mm x 11mm ribs
dia 38mm headers**

Connections: **1.2m long flying lead (2 core)**

Model	Height ± 2mm	Width ± 2mm	Number of Tubes	Output Watts	Weight kg
ROEV150-040/GF	1517	370	5	750	24.0
ROEV180-045/GF	1817	444	6	1000	32.0
ROEV180-060/GF	1817	592	8	1500	40.0
ROEV200-075/GF	2017	740	10	2000	44.0
ROEHD040-080/GF	444	800	6	750	21.5
ROEHD040-110/GF	444	1100	6	1000	28.3
ROEHD040-150/GF	444	1500	6	1500	37.7
ROEHD060-080/GF	592	800	8	1000	28.7
ROEHD060-110/GF	592	1100	8	1250	38.5
ROEHD060-130/GF	592	1300	8	1500	44.8
ROEHD060-150/GF	592	1500	8	2000	50.4

Issue 1.0



Zehnder Roda Electric - horizontal



Tools & Material Required

Screwdriver
Electric drill
Masonry drill bit

Key	Component	Qty
A	Horizontal Levelling Piece	1
B	Bracket	2
C	Spirit Level	1
D	Wall Plug*	4
E	Screw, 6mm dia x 50mm*	4
F	Spring Retaining Clip	2

* Wall Plugs & Screws not supplied

Assembly Instructions

Attach horizontal levelling piece (A) to two brackets (B).

Accurately mark out bracket holes on wall using spirit level (C), to dimensions as shown on Technical Data Sheet.


Drill four holes to a minimum depth of 65mm & insert wall plugs (D).

Fix brackets (B) to wall with screws (E) then remove horizontal levelling piece (A) and spirit level (C).

Hang radiator onto brackets (B). Engage spring retaining clips (F) on top of the two brackets (B).

Electric radiators should be fitted only by a qualified electrician and must be earthed and connected to a cable outlet in the bathroom in accordance with I.E.E. wiring regulations. The electrical connection should be made to a '5 amp fused fixed spur' located outside the bathroom.

Note: for maintenance purposes, cable outlets must remain accessible and cables must not be buried directly into walls.

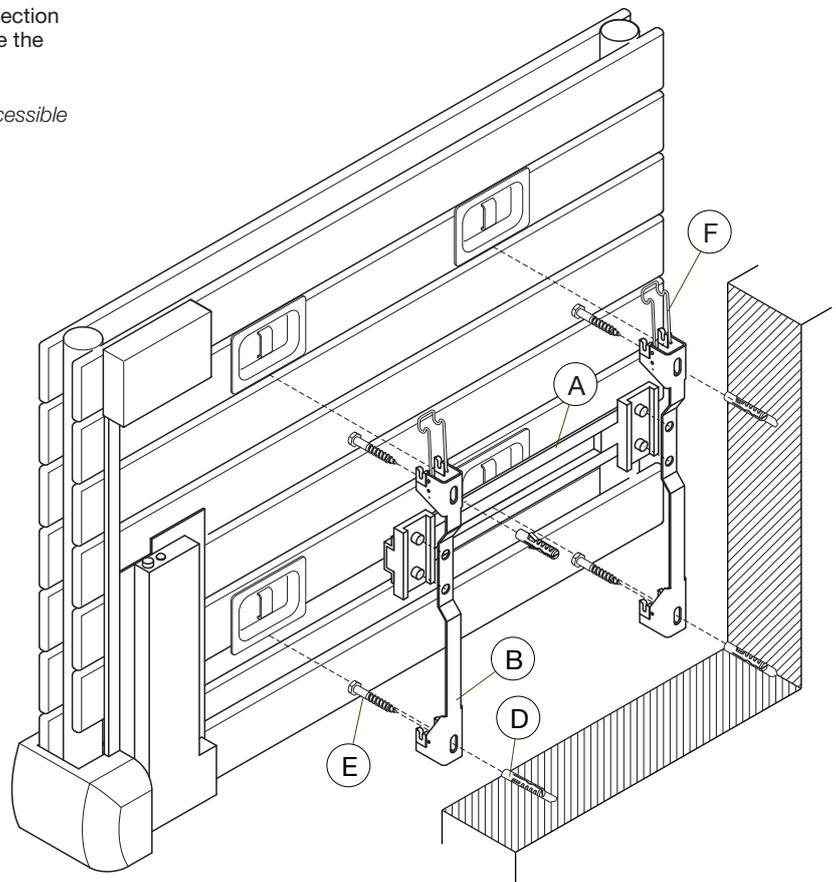

Issue 1.0



Zehnder Group UK Ltd

Concept House
Watchmoor Point
Camberley
Surrey GU15 3AD

Tel: 01276 605800
Fax: 01276 24058
retailsales@zehnder.co.uk
www.zehnder.co.uk

Registered in England: 2296696

Zehnder Roda Electric - vertical



Tools & Material Required

Tape measure
Electric drill
Masonry drill bit
Screwdriver
Allen key
Spirit level
Stepladder (for taller radiators)

Key	Component	Qty
A	Wall Plug*	9
B	Wall Brackets	2
C	Securing Bracket	1
D	Screw - 6mm dia x 50mm*	9
E	Grub Screw	1

* Wall Plugs & Screws not supplied

Assembly Instructions

Accurately mark out bracket holes on wall using spirit level.

Drill nine holes & insert wall plugs (A).


Attach wall brackets (B) & securing bracket (C) to wall with screws (D).

Hang radiator onto hinge pins on the wall brackets. Rotate radiator towards wall until locking pin on radiator locates in securing bracket (C).

Secure in position by tightening grub screw (E) with allen key.

Electric radiators should be fitted only by a qualified electrician and must be earthed and connected to a cable outlet in the bathroom in accordance with I.E.E. wiring regulations. The electrical connection should be made to a '5 amp fused fixed spur' located outside the bathroom.

Note: for maintenance purposes, cable outlets must remain accessible and cables must not be buried directly into walls.

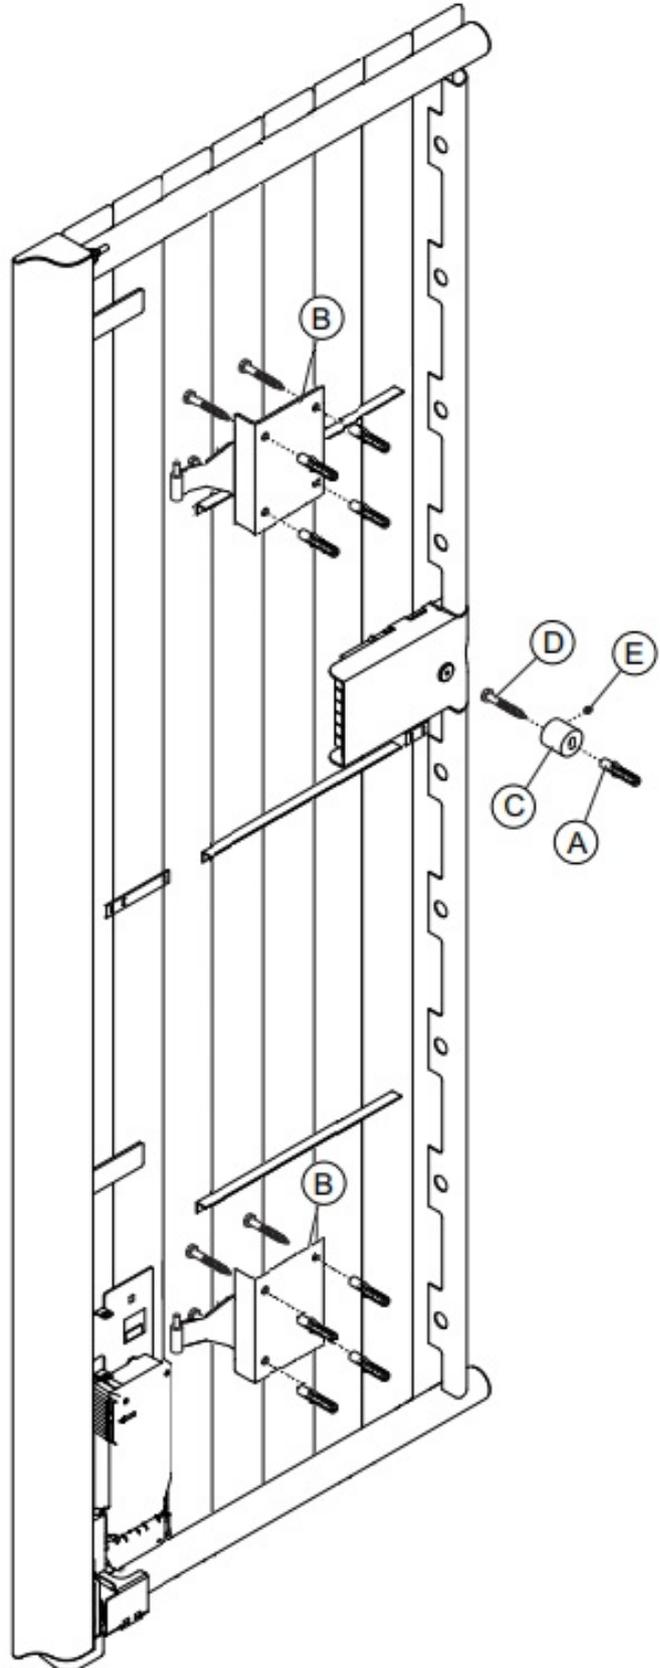

Issue 1.0



Zehnder Group UK Ltd

Concept House
Watchmoor Point
Camberley
Surrey GU15 3AD

Tel: 01276 605800
Fax: 01276 24058
retailsales@zehnder.co.uk
www.zehnder.co.uk

Registered in England: 2296696