



# Installation Instructions for Circular Curb Mount Unit Skylights (CC2, CC3)




- Step 1.) Check curb(s) for proper dimension (O. D. Curb), square, flat and plumb. Also check curb(s) to make sure they are properly flashed into the roofing system.
- Step 2.) Apply bed of mastic (compatible with roofing material) to top of curb(s). Mastic is to be furnished by the installer.
- Step 3.) Remove unit(s) from box or crate and install on curb. Center unit on curb leaving a 5/8" flashing space around perimeter. CAUTION: Do not remove units and lay flat on roof. Heat build up could deform domes.
- Step 4.) Install 8d stainless steel or galvanized nails (or equivalent size screw) in pre-drilled holes. Approximately 9 to 12 inches on center. Note: If anchors are going into pressure treated wood, stainless steel anchors are required.
- Step 5.) Installation is complete. Read Care and Maintenance information for proper care of your new Wasco Products, Inc. unit skylights.




# Installation Instructions for Circular Curb Mount Unit Skylights (CC2, CC3)

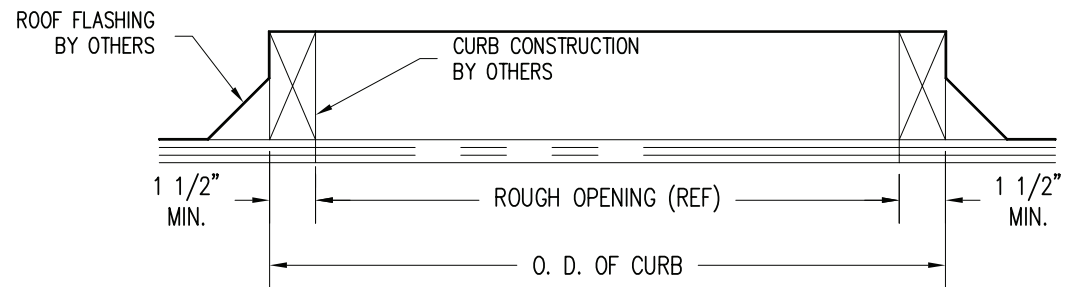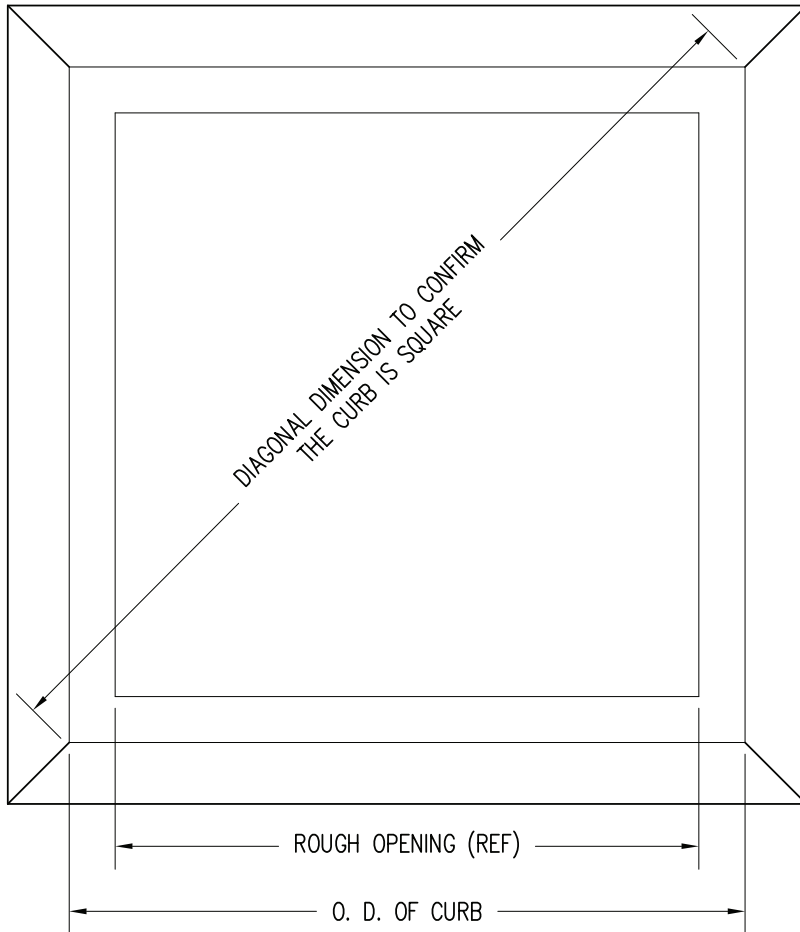

# Installation Instructions for Circular Curb Mount Unit Skylights (CC2, CC3)

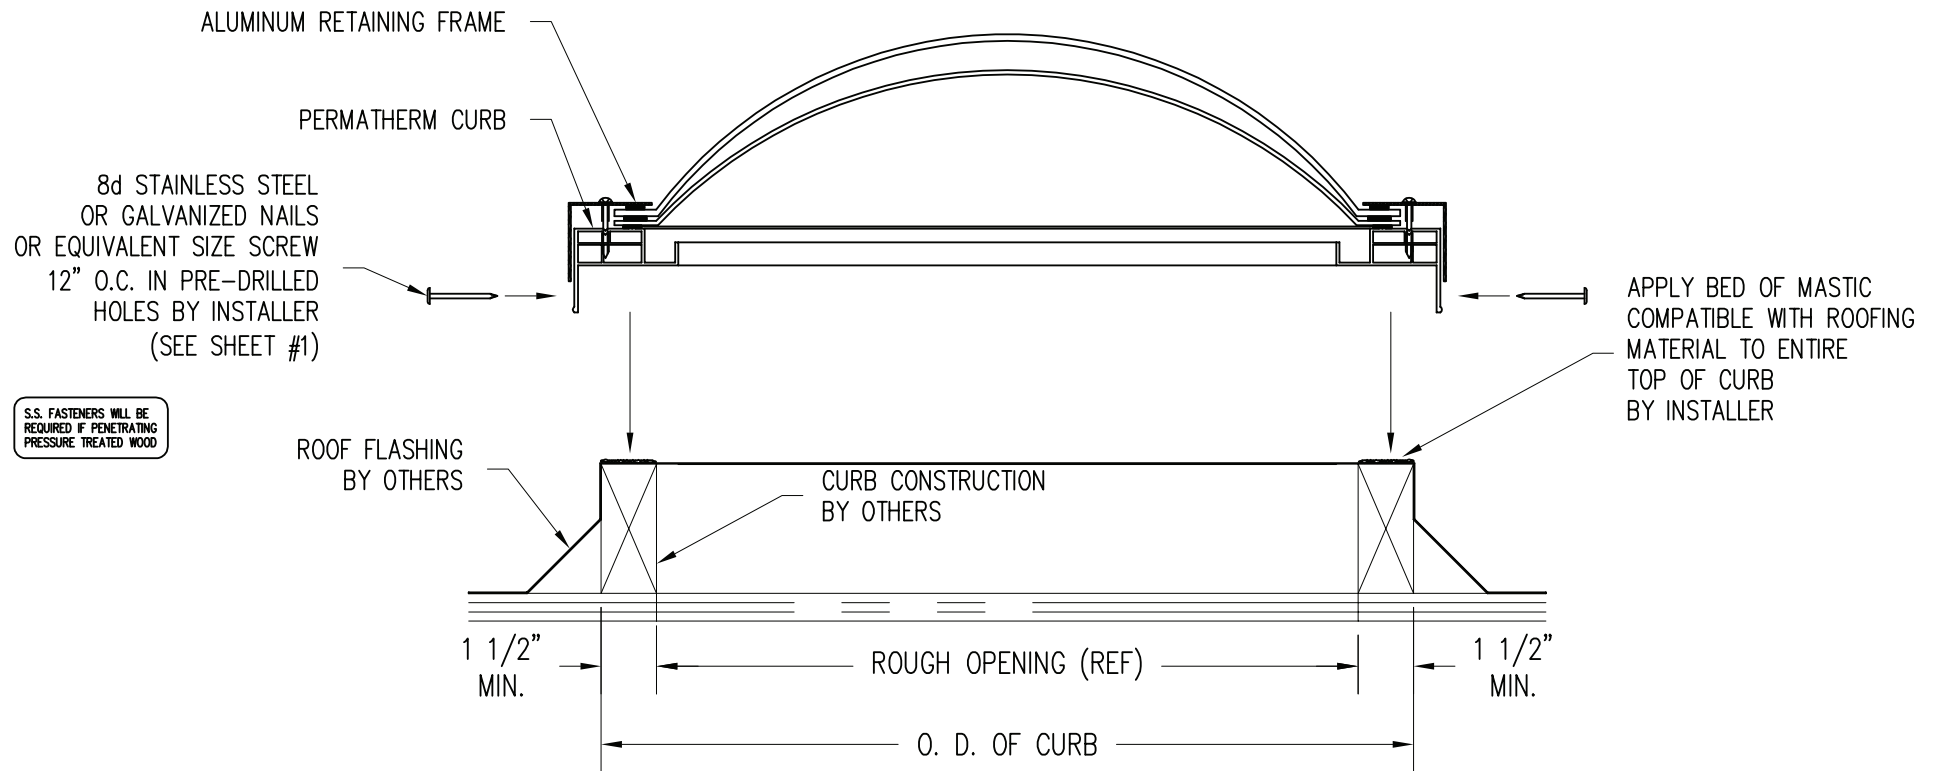

# Installation Instructions for Circular Curb Mount Unit Skylights (CC2, CC3)

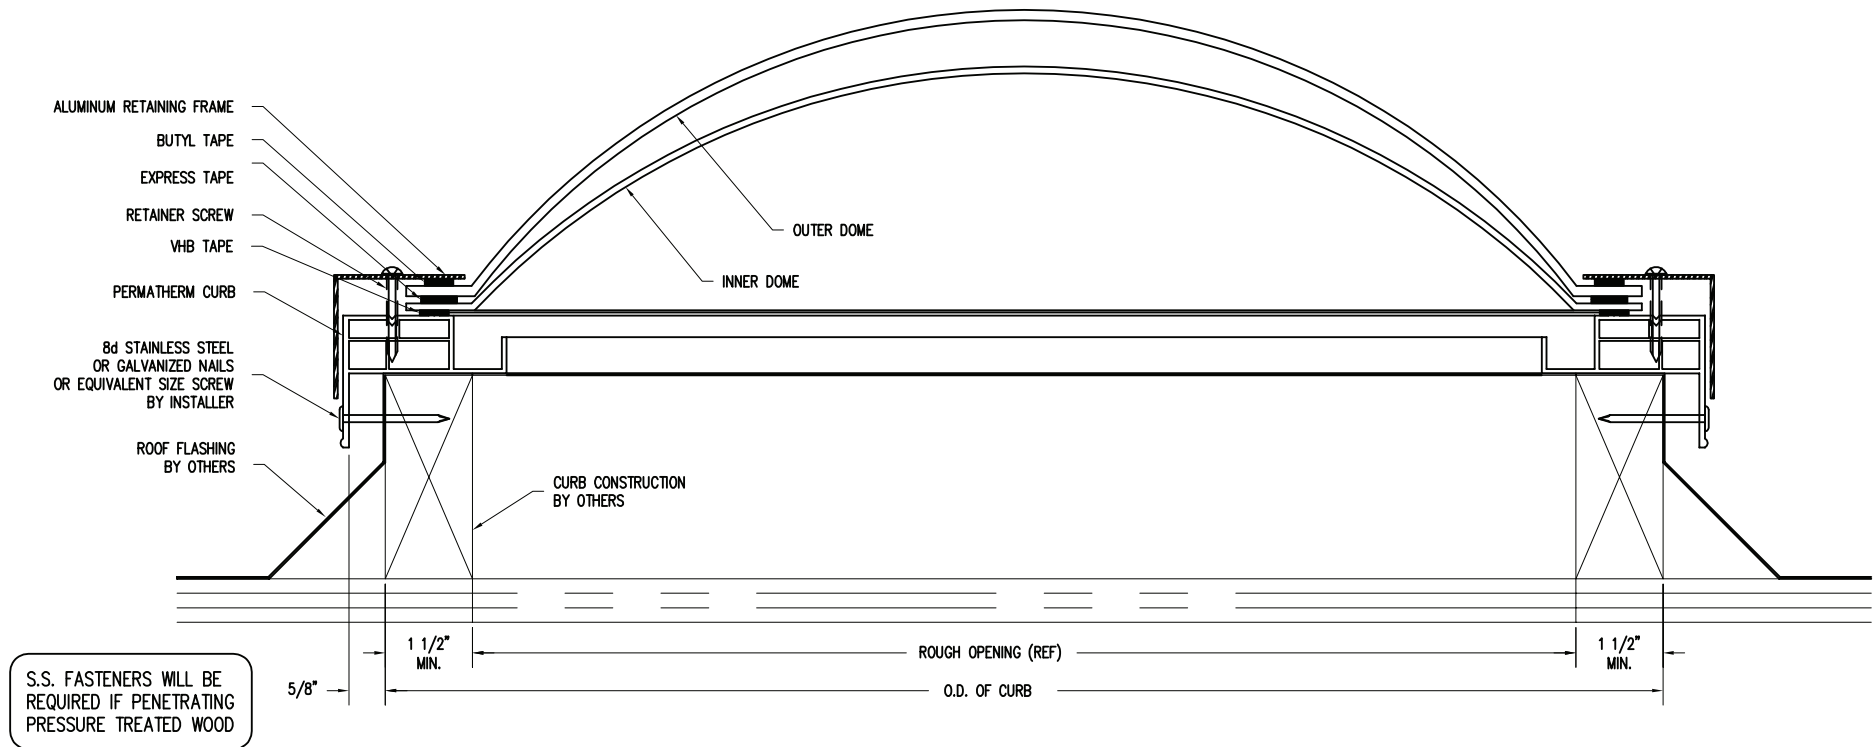

## VELUX America LLC

85 Spencer Drive • Unit A • Wells, ME 04090  
Tel 1-800-888-3589 • [veluxusa.com](http://veluxusa.com) • [wascoskylights.com](http://wascoskylights.com)

©2020 VELUX Group. ®VELUX and VELUX logo are registered trademarks.