




1" Metal Rod Spider INSTALLATION INSTRUCTIONS

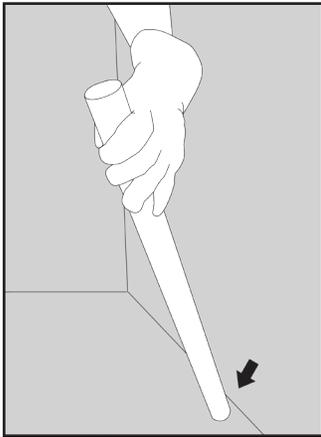


Hold 1" metal rod
against angled edge.

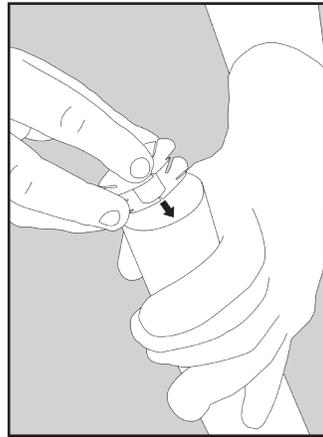

Insert metal Spider in pole
opening, with
concave side facing up.

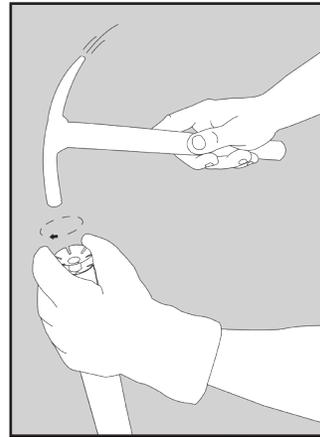

Using Tack Hammer,
hammer around edge of
Spider in a clockwise
motion.

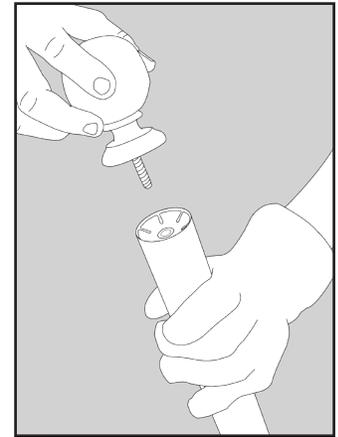

Your rod is now ready for the
finial to be inserted.