

Acer BIOS Flash SOP

(For None ME uEFI BIOS)

Document: SOP

Issue Date: 11/09/2011

Document Revision: v1.1

	APPROVED	CHECKED	PREPARED
BY	Vincent Lu	Seabird Fang	Jerry Jiang
DATE	11/09/2011	11/09/2011	11/09/2011

This document contains proprietary and confidential information of Foxconn. All rights and titles hereto remain with Foxconn. The recipient shall keep this document in strict confidence and shall use this document in the manner and solely for purposes expressly agreed to by Foxconn. The recipient shall not disclose or allow access to this document, in whole or in part, by third parties, nor use it for the benefit of the recipient or third parties. The recipient shall not change this document in form and substance by any means, including without limitation, decompile, reproduce, revise, and amend.

[illegible]

目录

Flash 2M uEFI BIOS SOP for DOS: 4

Flash 2M uEFI BIOS SOP for Windows: 8

Flash 2M uEFI BIOS SOP for DOS:

1. Copy BIOS folder to USB Disk. [You can rename the BIOS folder. For example: rename to P01-A0.](#)
2. Boot system to DOS mode.
3. Enter BIOS folder.
4. Enter "DOS" folder.

```
C:\>cd P01-A0  
C:\P01-A0>cd dos
```


5. Execute "dosflash.bat" file.

```
C:\>cd P01-A0  
C:\P01-A0>cd dos  
C:\P01-A0\DOS>dosflash.bat
```


6. Process to flash BIOS ([Don't reset](#)).

```
+-----+  
|               AMI Firmware Update Utility(APTIO)  v2.37               |  
|      Copyright (C)2011 American Megatrends Inc. All Rights Reserved.      |  
+-----+  
Reading file ..... done  
FFS checksums ..... ok  
Reading flash ..... done  
Erasing flash ..... done  
Writing flash ..... done  
Verifying flash ..... done  
Erasing NVRAM ..... done  
Writing NVRAM ..... done  
Verifying NVRAM ..... done  
Erasing BootBlock ..... done  
Writing BootBlock ..... done  
Verifying BootBlock ... done
```


7. Reboot the computer after finished flash BIOS, and press "Del" to enter BIOS Setup.
8. In Exit page, select "Load Default Settings" and press "Enter" key.

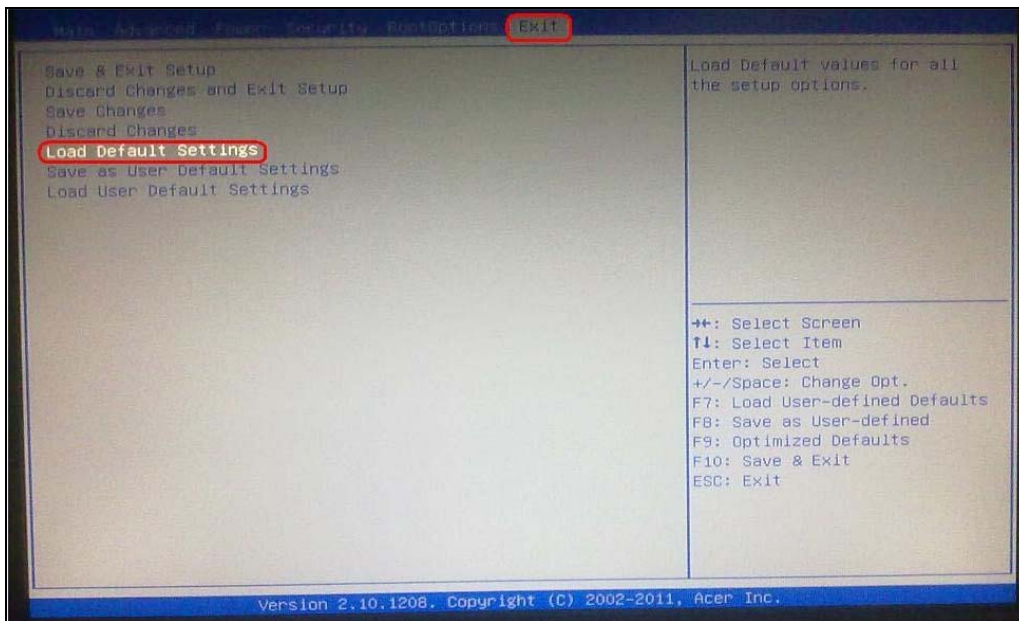


9. Select "Yes" and press "Enter" key.

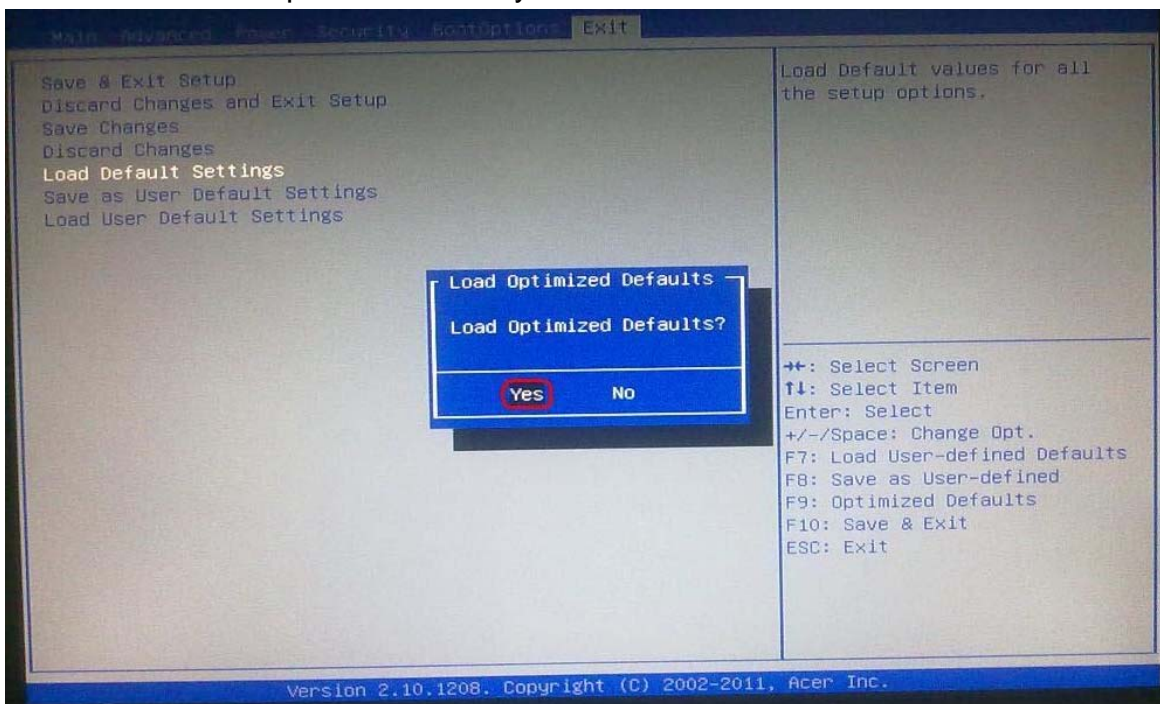

10. Select "Save & Exit Setup" and press "Enter" key.

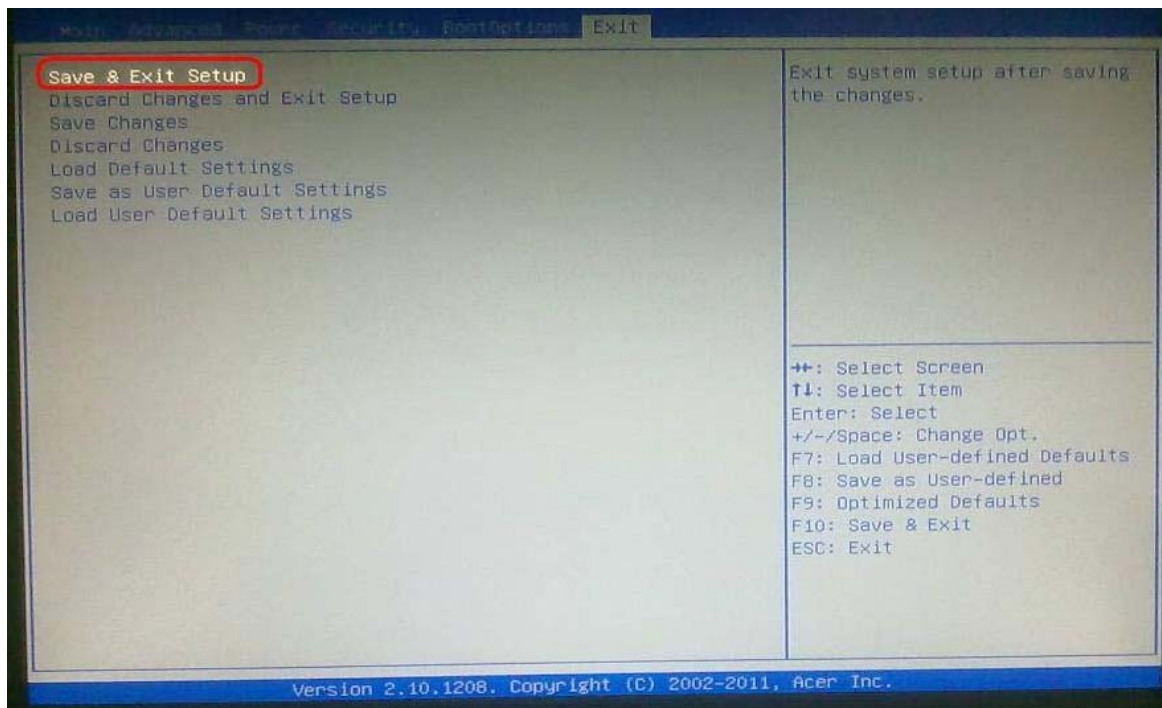

11. Select "Yes" and press "Enter" key.

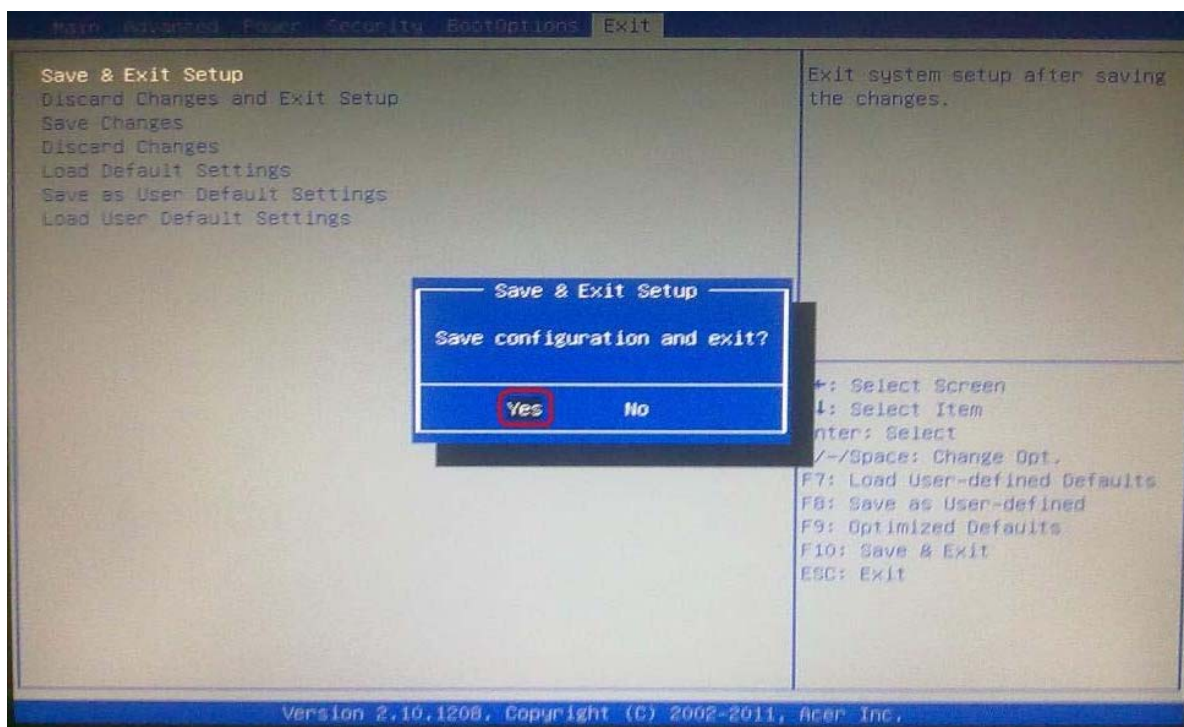

12. Flash BIOS is finished.

Flash 2M uEFI BIOS SOP for Windows:


1. Open “WIN\win32” folder if using Windows 32bit or Open “WIN\win64” folder if using Windows 64bit.

名称	修改日期	类型	大小
win32	2011/11/9 13:47	文件夹	
win64	2011/11/9 13:47	文件夹	

2. Please double click “flash.bat”.

AFUWIN.EXE	2011/4/22 09:58	应用程序	261 KB
AFUWIN.TXT	2011/5/22 09:36	文本文档	7 KB
AFUWINGUI.EXE	2011/4/22 10:01	应用程序	513 KB
AFUWINGUI.TXT	2011/5/22 09:37	文本文档	6 KB
AMI_Aptio_AFU_User_Guide_NDA.pdf	2011/2/17 11:31	Adobe Acrobat ...	265 KB
AMIFLDRV32.SYS	2010/7/30 15:16	系统文件	13 KB
flash.bat	2011/11/8 14:51	Windows 批处理...	1 KB
README.TXT	2011/5/22 09:37	文本文档	3 KB
README_AFUWIN.TXT	2011/2/17 11:37	文本文档	1 KB


3. Press “Yes” to continue flashing BIOS.

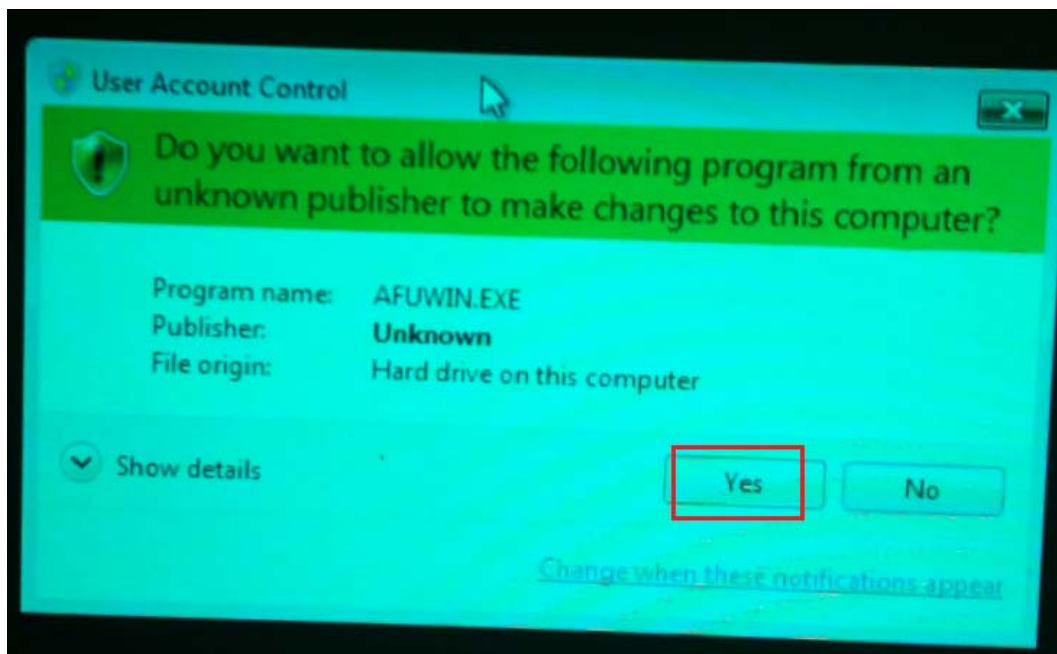


4. Please waiting BIOS update process. Please restart you system after updating BIOS completely.

5. When system restart, please press “Del” to enter BIOS Setup.


6. In Exit page, select "Load Default Settings" and press "Enter" key.

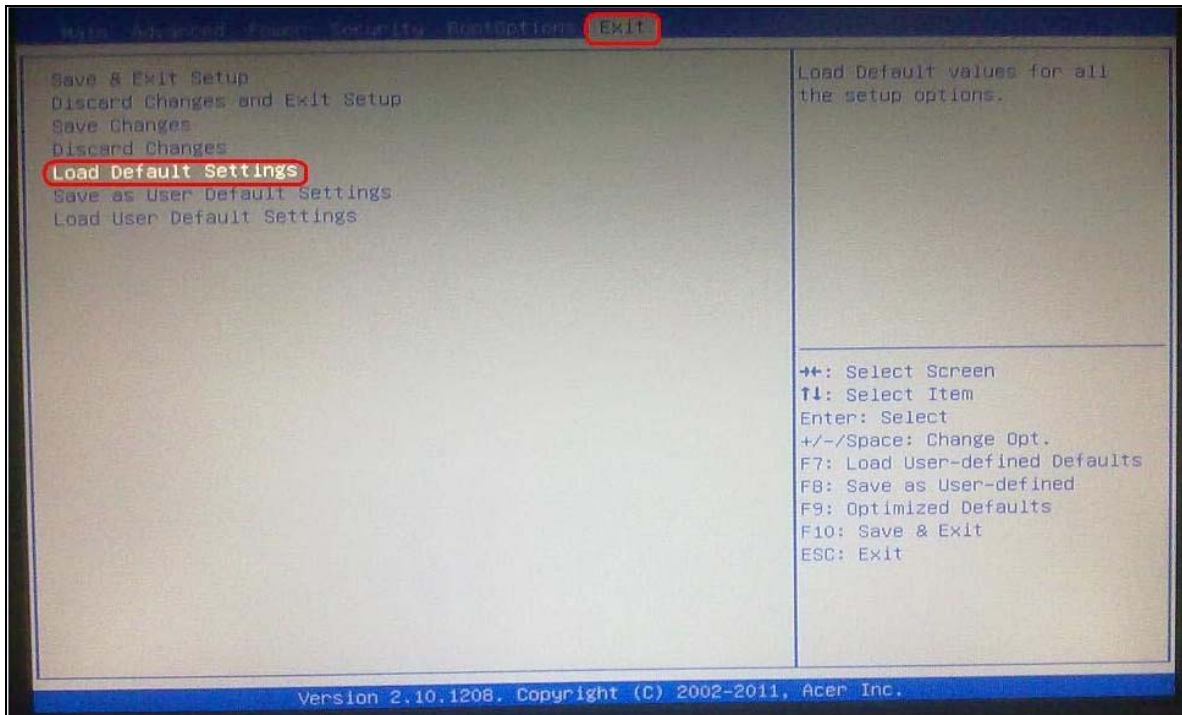


7. Select "Yes" and press "Enter" key.

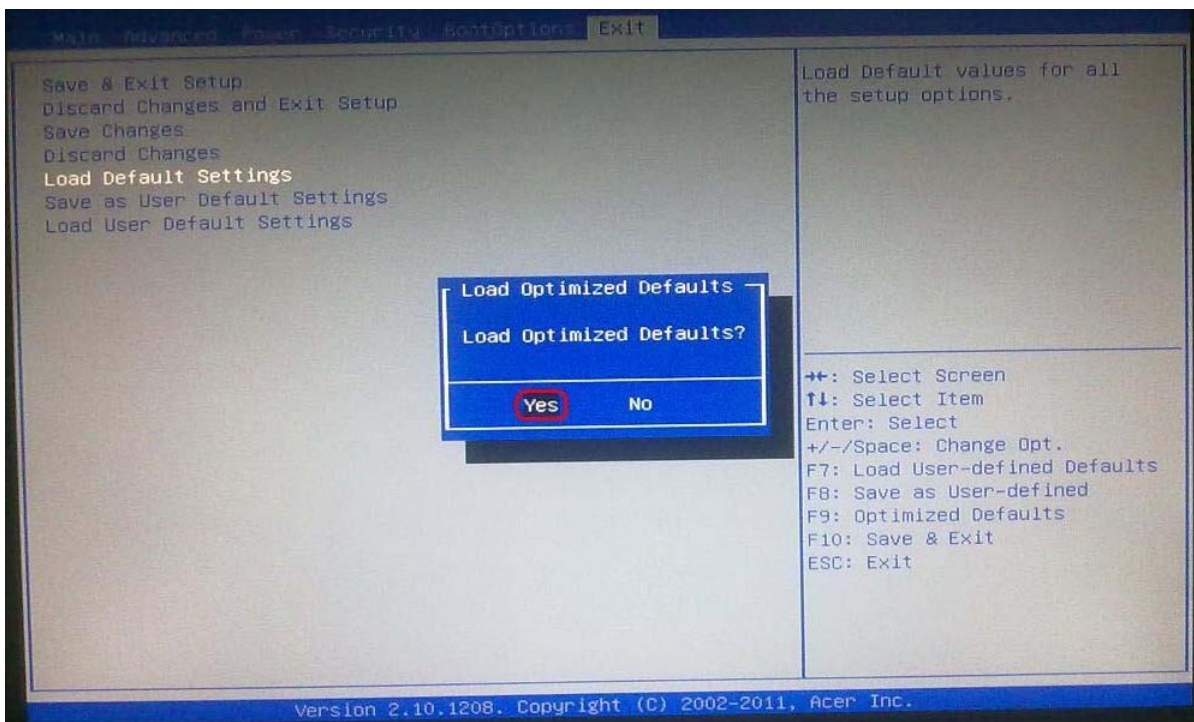

8. Select "Save & Exit Setup" and press "Enter" key.

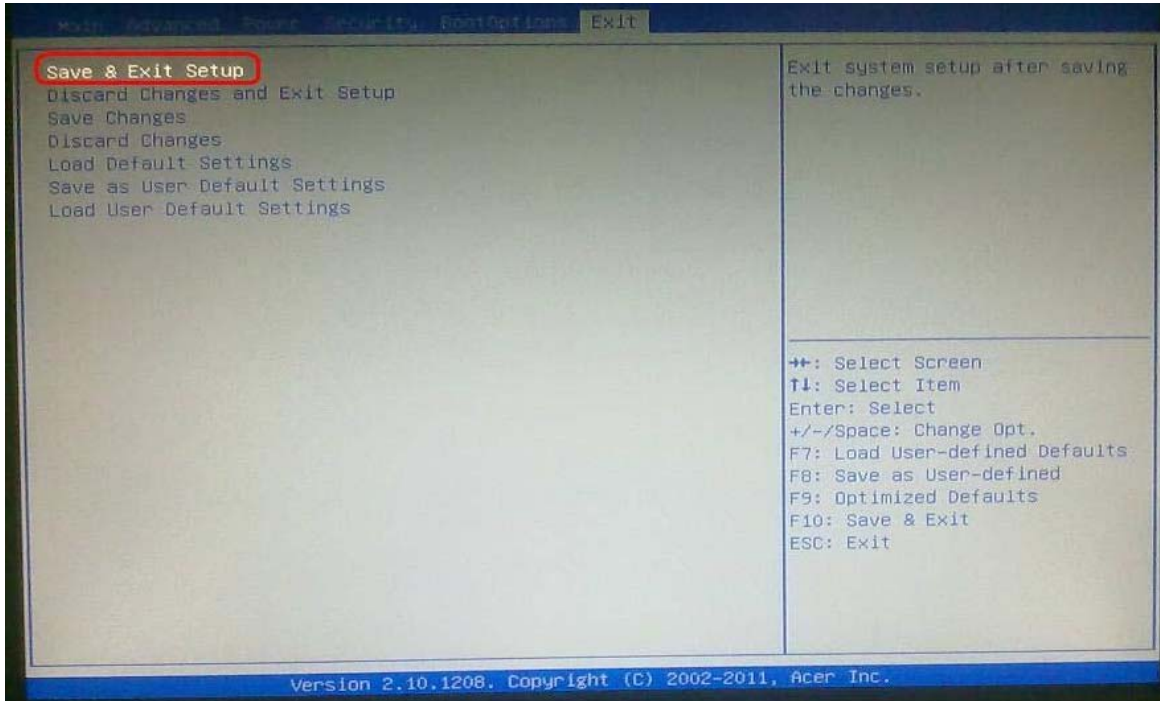

9. Select "Yes" and press "Enter" key.

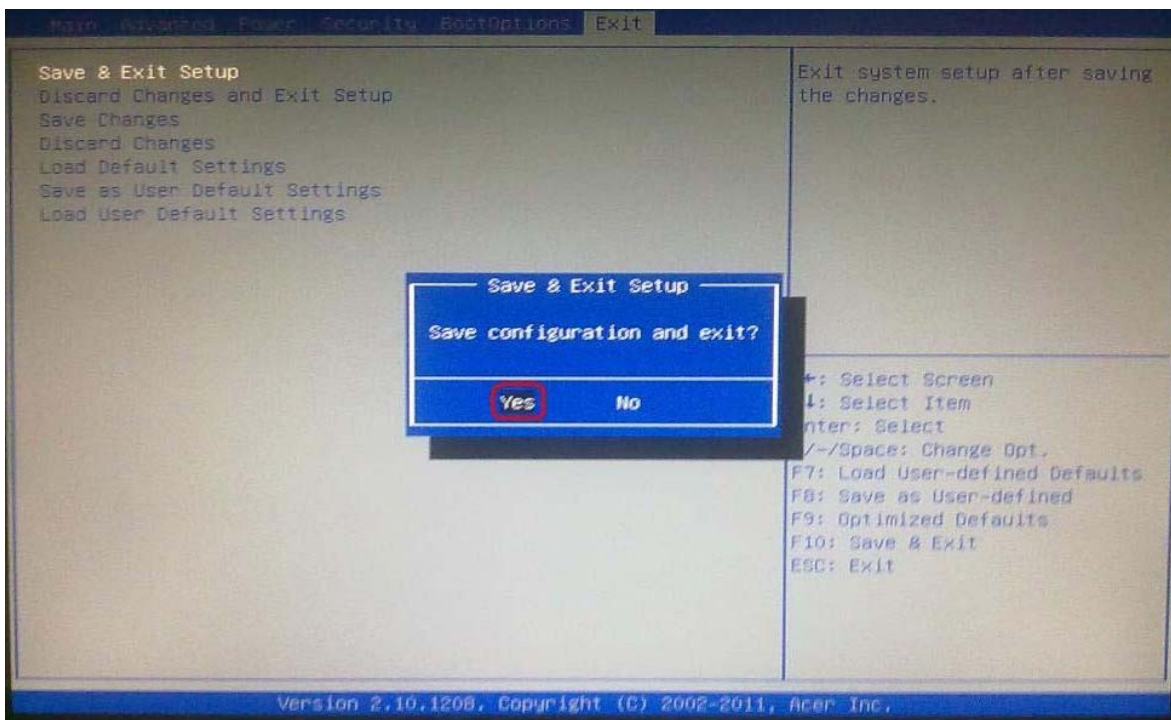

10. Flash BIOS is finished.