




Arlington Industries, Inc.


1 Stauffer Ind. Park - Scranton, Pa. 18517
800-233-4717 570-562-0646
www.aifittings.com - E-MAIL : sales @ aifittings.com
Manufacturers of Quality Electrical Products

**WARNING: TURN OFF POWER AT
MAIN PANEL BOX**


Installation Instructions For : IN BOX™ DBHM1C & DBHM1W - STUCCO / MASONRY STYLE

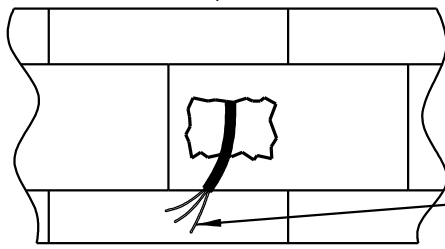

1. Cut Hole in Block.
Pull Wiring.

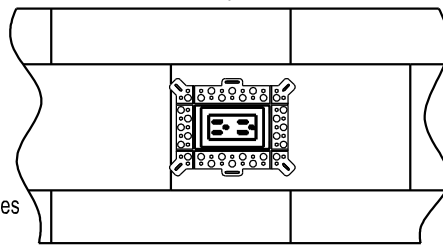


2. Fasten Recessed Box to Block with
Masonry Fasteners. Wire Device *

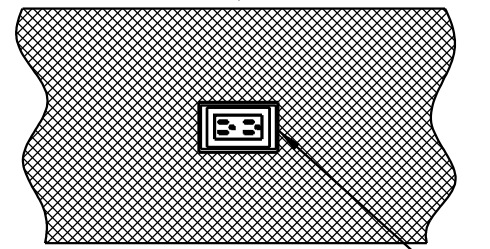


3. Mud Stucco Completely Around
Flange Area. Caulk As Needed


Installation Instructions For : IN BOX™ DBHS1C & DBHS1W - VINYL SIDING VERSION

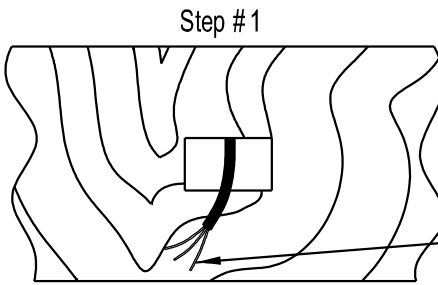

1. Cut Hole in Substrate. Pull Wiring.

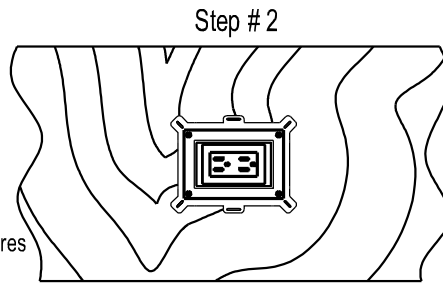


2. Install Recessed Box. Wire Device *

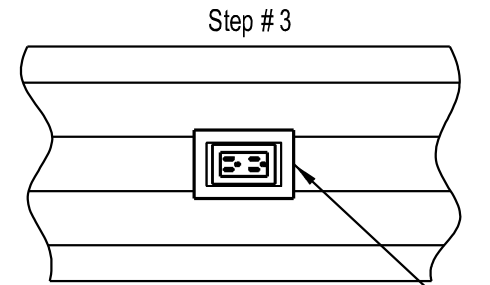


3. Install Siding. Caulk As Needed

Installation Instructions For : IN BOX™ DBHB1C & DBHB1W - BRICK VERSION

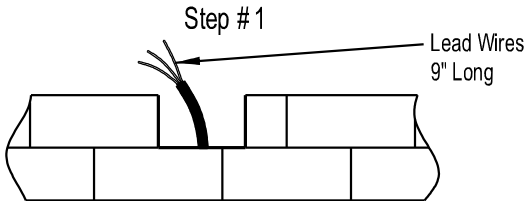


1. Leave Opening in Brick.

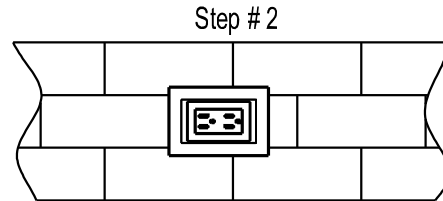


2. Install / Mortar Recessed Box in Place. Wire Device *


Installation Instructions For : IN BOX™ DBHR1C & DBHR1W (For: RETRO FIT STEPPED SIDING)

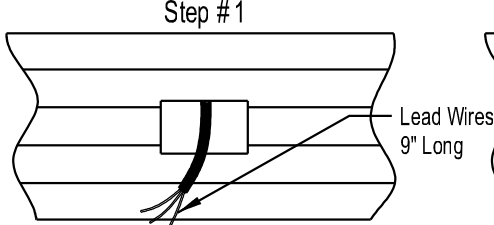

1. Cut Hole in Siding & Substrate. Pull Wiring.

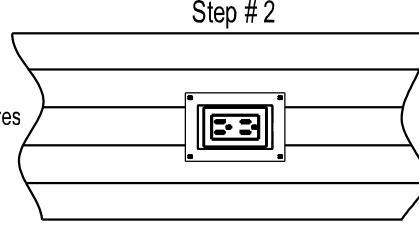


2. Install Recessed Box with Stainless Screws
Provided. Wire Device *

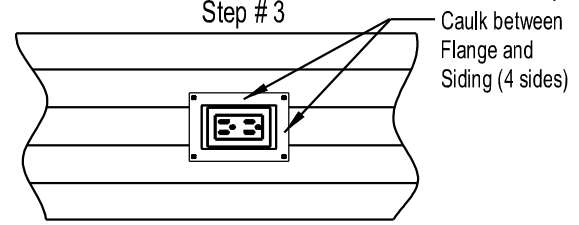


3. Caulk As Shown.


(For: RETRO FIT FLAT SIDING / T111)

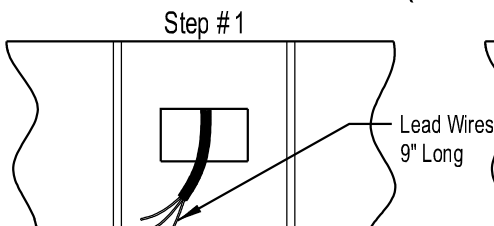

1. Cut Hole in Siding & Substrate. Pull Wiring.

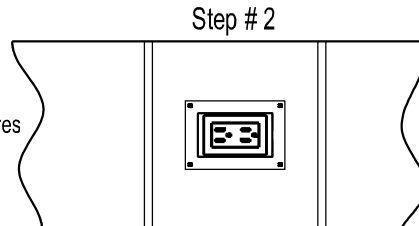

2. Install Recessed Box with Stainless Screws
Provided. Wire Device *

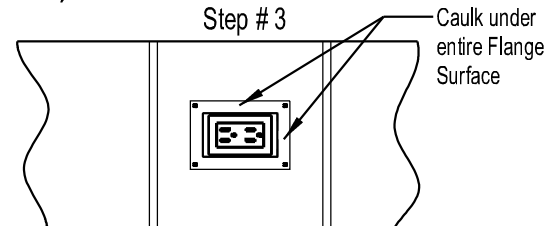


3. Caulk As Shown.



* Note: Connect the Wires and Install the Device according to manufacture's instructions and Local and National Electrical Codes.
If you have any questions or if parts are missing, Please call our Customer Service Department at 1-800-233-4717. Do not call or return this product to your local store or distributor.



Method #1

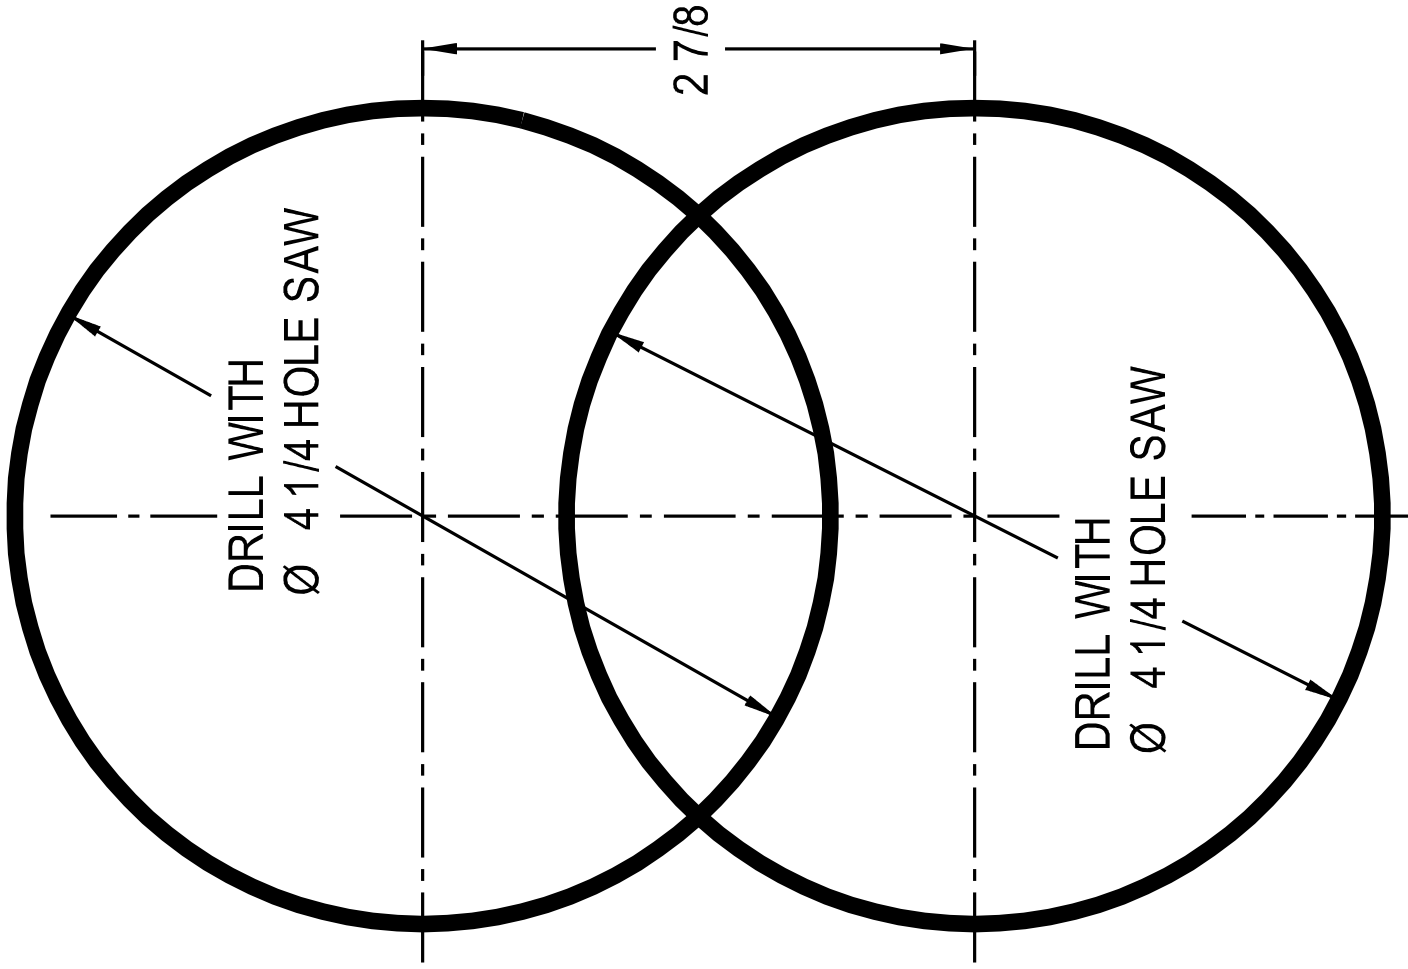

Method #2

TEMPLATE

CUT HOLE IN SUBSTRATE OR SIDING

