

INSTRUCTIONS



Structured Cable Products™
Quality Installations Deserve Quality Products

Part # 908 and 909

Step 1:

Cut your cable using a proper cable cutter.



Step 2:

Insert the cable into the cable stripper



Choose "6" for RG6
and RG6/Quad


Step 3:

Turn the stripper clockwise 4-5 rotations and remove cut pieces




Step 4:

Fold exposed braid over the jacket. Leave the inner foil attached to the dielectric and make sure that the foil is undamaged and smooth.

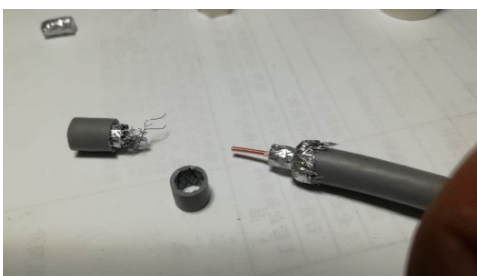

Step 5:

Push the connector over the foil and allow the support mandrel to slide. Press and turn until the dielectric is flush with the support mandrel face

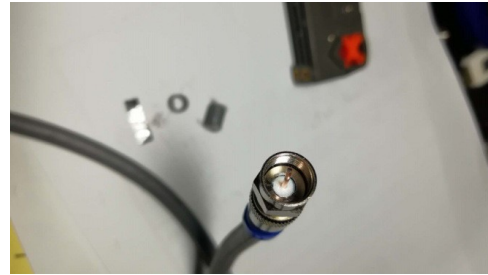

Step 6:

Open the tool - press the outside split jaw tabs and pull out the connector assembly...

