

Securitron® TSB Touch Sense Bar

ASSA ABLOY

Installation & Operating Instructions

Experience a safer
and more open world

Description

Securitron TSB is an exit device for doors secured by magnetic locks. The assembly consists of an aluminum bar available in lengths to fit on standard U.S. door openings: (36", 42", and 48"), Polycarbonate end pieces to mount the bar on the door, and an electronic touch sensor mounted within the bar. Fasteners for metal doors are included. For through door mounting, please call factory for a no-charge Securitron TSB-TDM kit.

NOTE: that US type or metric fasteners are supplied depending of the version of the bar which has been ordered. The metric version part numbers include the suffix: "M".

When the bar is touched, a relay in the sensor is tripped, releasing the lock. The bar's sensitivity is adjustable. In the unlikely event of sensor failure, a push switch is mounted on the back side of the bar. Depressing the switch has the same effect as activating the sensor by touch and therefore represents built in safety redundancy. **The Securitron TSB cannot be used outside in rain conditions.**

As the Securitron TSB is normally used to allow egress on an electrically secured door, make sure that you are complying with applicable building codes for your area. Check with your local building department and/or fire prevention department.



Recommended Tools

- Medium, Small Phillips Drivers
- Drill Motor
- 1/4", 3/8", 1/8" Drill Bits
- Wire Cutter/Stripper
- Volt/Ohm Meter
- Crimp Connectors And Pliers

Mounting Hole Marking

- 1 PLAN AND MARK the mounting hole positions. Be sure that you have the correct length bar for the door.
- 2 REMOVE the screws that secure the end caps on both ends of the bar. If it appears that the bar is longer than it should be for the door, see *Cutting Instructions*.
- 3 MAKE NOTE which end has the sensor (circuit board) in it. This is the end that should be mounted on the hinge side for easiest wire exit from the door.

A template located at the end of this instruction manual has been provided, although it is generally preferable to hold the bar in position and use it as a "self-template." The templates are particularly valuable if door preparation is to be done in advance. In setting your mounting holes, there are three concerns:

- They must be level or the bar will be tilted.
- They must be the correct distance apart.
- They must be correctly placed "left/right" on the door.

Leveling is best done by use of a carpenter's level.

If one is not available, measure from the mounting hole positions on each edge of the door to the door bottom. This is not as effective as it assumes that the door is level which is not always true.

NOTE: In general, US building codes require the height of the bar above the door bottom to be between 30" and 44".

If the bar is used as its own template, you will automatically get correct separation between the mounting holes.

NOTE: If you use the templates, there is a line drawn on each template which must line up with the outer edge of the plastic end pieces on the bar. After you've mounted the templates, hold up the bar to make sure the end piece lines up to get the correct distance.

Left/right placement on the door is an important

point. In most installations, the bar should be centered on the door. This produces the most attractive result. However, if the door has a vertical door stop on the edge that swings open, you may need to shift the bar somewhat towards the hinge side to avoid scraping the stop when the door opens. You should always experimentally position the bar on the door and open the door to see that there is no interference.

Finally, if the installation is on an aluminum frame glass door, make sure you don't position the bar so that the mounting screws go into the glass. On standard doors, keeping the mounting holes at least 3/4" (19 mm) from the inner edge of the aluminum will be safe.

Mounting Hole Drilling

There are three different procedures depending on the door type.

Hollow Metal Doors employ supplied machine screws and “blind nut” fasteners. This method leaves the outside of the door unaffected. Longer machine screws and sex bolts may be used on hollow or solid wood doors, solid metal doors, or chalk filled fire doors, the Securitron TSB-TDM kit for this type of mounting can be ordered from the factory at no-charge. With this method, the sex bolt heads do show from the outside of the door.

NOTE: The Securitron Touch Sense Bar may not be used on a fire rated door that requires a fire rated latch (the Securitron TSB has no latch), but sometimes fire doors are used on openings where a fire rated barrier is not required, because the customer has selected this door type for other reasons (such as solidity).

Another method is to use wood screws (not supplied) on a solid wood door. By “solid wood”, we mean hardwood interior rather than pressed wood as the wood needs enough structural integrity to hold wood screws. This method is strong and simple and has the advantage of not showing sex bolts heads from the outside of the door.

HOLLOW METAL DOORS

- DRILL four 3/8" [9.5 mm] diameter holes only deep enough to get through the inner side of the door — *not completely through the door.*

FOR THROUGH BOLT MOUNTING ON VARIOUS DOOR TYPES

- DRILL four 1/4" [6 mm] holes completely through the door. For this type of installation (which may also be elected for a solid wood door) you will be using screws and finishing sex bolts suitable for a 1-3/4" [44 mm] thick door supplied in the Securitron TSB-TDM kit. Nearly all North American commercial doors are this thickness. If the doors you are working on are different, you will have to purchase different length screws or apply some spacing techniques (described later).

FOR A SOLID WOOD DOOR

- You may elect to mount the bar with wood screws (not furnished). We recommend 2-3/4" [70 mm]) #14 wood screws with a hex, pan, oval or round head. DRILL four 3/16" [5 mm] diameter holes to a depth of 1-1/4" [30 mm].

Wireway Hole Drilling

The Securitron TSB connects to its power source and to the devices it controls via a six-conductor cable with push-on connector (supplied). There are several different methods of getting this cable from the Securitron TSB to external connection points.

The first issue is whether the cable needs to enter the door (in which case a wireway hole must be drilled in the door), or not. For most installations, it is preferred that the cable enter the door. Exit from the door may be via the supplied door cord which may be mounted at the top of the door where it is out of the way, or via any of many commercially available transfer hinges or pivots (such as Securitron EPT Electric Power Transfer or Securitron ELH Electric Hinge) which serve to route the wiring off the door in a concealed manner. A wireway hole is then drilled into the door in the position shown on the template. It should be 3/8" [9.5 mm] in diameter. The cable is then pulled into the door.

An alternate technique exists which does not route the cable into the door but which takes it directly from the end piece to the frame via the door cord. This technique is preferred when the door type is difficult to pull a wire through (such as any solid door). It is also a good technique when the frame is not hollow as the door cord can route the cable directly from the end piece to a surface box mounted opposite the end piece.

For the best security and appearance, you will not use the plastic door cord terminator when you route the cord into the end piece. You will drill a hole in the plastic end piece. The hole should be drilled through the bottom flat of the end piece on the hinge side. The **ideal hole size** is 23/64" (9.1 mm) but as this drill size is unusual, 3/8" (9.5 mm) also works.

NOTE: Diagram 1 shows the end piece you would select if the hinge side of the door was on the left. If it's on the right,

use the other end piece but still locate the hole at the inner, rear corner. With this method, the door cord is used to route the cable directly from the end piece to the frame.

Wire Routing

If you elect the method of wire routing which uses a hole in the end piece (see **Diagram 2**), you must route your cable through the end piece prior to mounting the end piece to the door. This is because the flat cable connector will not pass through the hole you have drilled in the end piece.

- 1 THREAD the cable end without the connector down through the elongated slot in the end piece (the slot is directly under the circuit board).
- 2 ROUTE it through the drilled hole in the elongated slot in the end piece so that it exits the end piece.
- 3 PASS the stainless door cord over the cable and slide it until you can push it into the hole you have drilled in the end piece.
- 4 SECURE the stainless cord inside the end piece with the supplied "E" clamp. See **Diagram 2**. It shows this assembly for the end piece you would use for a door with hinges to the left. If the hinges are on the right, use the opposite end piece. The drawing will be "reversed" but the concept is unchanged.

NOTES: if you are mounting to a surface box, a second "E" clamp has been supplied so that you can simply drill a hole in the box and secure the stainless cord from the inside with the second "E" clamp. If the frame is hollow, you would employ the plastic door cord terminator when you mount the other end of the door cord to the frame. You are now ready to mount the bar to the door.

Diagram 1 Bottom view of hinge side end piece.


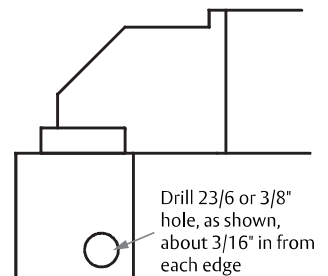


Diagram 2 Rear view of end piece showing cable routing through end piece.

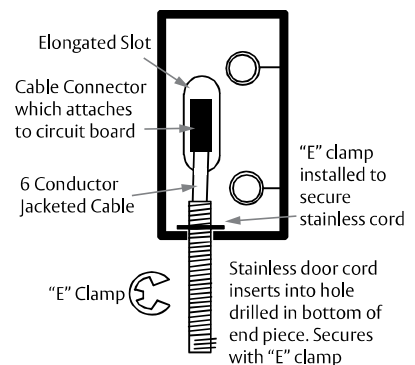

Bar Mounting

The holes you have drilled for bar mounting were different depending on the type of door. Similarly the final mounting procedure depends on the door type.

HOLLOW METAL DOOR

- 1 Identify the four supplied blind nuts.
- 2 Insert the nuts with the knurl engaging the edge of each hole.
- 3 Utilize the supplied collapsing tool to collapse the nuts. Use of the tool is shown in **Diagram 3**.
- 4 Use the shorter (2-1/4" or 54 mm) supplied machine screws.
- 5 Place a tooth washer under the head of each screw and mount the bar. Do not over torque.

THROUGH BOLT + SEX BOLT MOUNTING

- 1 Using longer 3-1/2" (90 mm) machine screws with the sex bolts supplied in the Securitron TSB-TDM kit. You should have already drilled 1/4" (6 mm) holes through the door.
- 2 From the outside of the door, enlarge the holes to 3/8" (9.5 mm) diameter, 1" (25 mm) deep. Push in the sex bolts.
- 3 Place a tooth washer under the head of each screw and mount the bar.

NOTE: that the screw length is suitable for a 1-3/4" (44 mm) thick door.

Nearly all North American commercial doors are this thickness. If you have a door of different thickness, a number of techniques can be applied. Screws of different lengths can be purchased or the supplied screws may be cut (if the door is thinner).

Since the sex bolts are short, however, some final adjustments may be necessary. Spacing washers may be added under the screw heads but if you raise the heads too high they will interfere with removal of the circuit board (if this ever becomes necessary).

The board can still be removed but the mounting screws will have to come out first and this is inconvenient. Another technique that is possible on solid doors is to recess the sex bolts into the door by using a 1/2" (12.5 mm) counter bore.

SOLID WOOD DOOR

If you have elected to use wood screws (not furnished), place a tooth washer under the head of each screw and mount the bar.

Diagram 3 Collapsing the blind nuts (Metal Door).




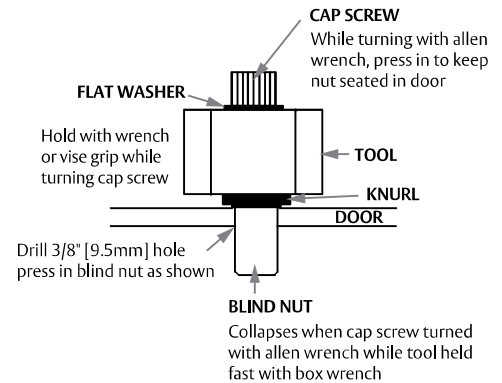


Diagram 4 End view showing three fastening methods depending on door type.

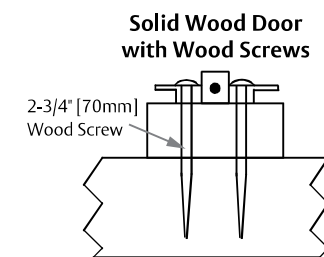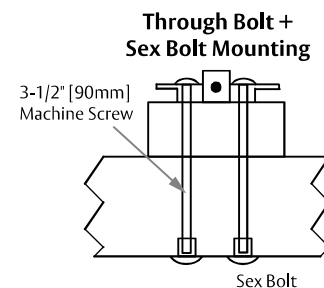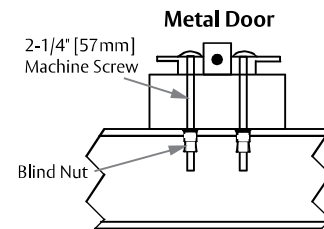

Cutting the Bar

If the bar needs to be shortened to install properly, it can be easily cut in the field. It must be cut from the end which does not mount the sensor.

- 1 REMOVE the end piece completely by unscrewing the two self tapping screws that hold it to the bar. It is better to remove both end pieces so as to avoid damaging the sensor circuit board by metal filings.

NOTE: that when you remove the second end piece which carries the sensor, the sensor will slide out easily with the end piece. There is, however, a ring terminal which circles one of the end piece-to-bar mounting screws. This ring terminal is connected by a wire to the circuit board. This connection is how the sensor "sees" the bar.

- 2 When you REINSTALL the end piece, be sure to reinstall the ring terminal.

NOTES: Cutting is ideally performed by a band or cut-off saw to produce a neat result. However, with care, a hacksaw can be used. The cut need not be perfect because the bar "pockets" into the end cap. This hides a poor cut from viewing from the front.

The rear of the bar is not pocketed, however, and if the bar is being mounted on an aluminum frame glass door, a sloppy cut will be apparent from the outside and will worsen the appearance of the installation.

Electrical Specifications

Power Supply:

Voltage – 12/24 VDC

Current – 50 milliamps at rest (*not being touched*) and 12 milliamps while operating (*being touched*)

Relay Contacts: Maximum 2 amps at 30 VDC

The Securitron TSB has 6 colored wires which are for sensor power and DPST relay output:

Red	+ DC Power
Black	– DC Power
White	Relay Common, Pole 1
Green	Relay Normally Closed, Pole 1
Blue	Relay Common, Pole 2
Orange	Relay Normally Open, Pole 2

Sensor Wiring

The cable connector is plugged into the male connector on the circuit board so that the cable routes directly back into the end piece. When the bar is touched, the relay changes state.

For additional safety, the operation of the Securitron TSB is fail safe, itself. When the Securitron TSB receives power, its control relay automatically energizes. It de-energizes when the unit is touched.

For releasing a magnetic lock, (Diagram 5 and 6) shows typical connections of sensor, power supply and fail safe (released when powered) lock. Fail secure electric locks are normally not permitted for use with the Securitron TSB on required exit applications. NO contacts, however, are available from the sensor for special signaling applications and for integration with the Request to Exit (REX) function of an access control installation, as will be explained.

Installation of the MOV in parallel with the electric lock. The MOV is supplied loose with the Securitron TSB. It is a black or blue disk-like component with two bare wires for connection. The MOV acts to suppress the lock's inductive kickback which will greatly shorten the life of the relay contacts if not suppressed. To work properly it should be spliced in as close to the electric lock as possible. It has no polarity. If, however, Securitron's Magnalock is used in the installation, the MOV is not necessary as the Magnalock is internally suppressed.

When connecting power, polarity must be observed. As an additional safety feature, the Securitron TSB includes a low voltage sensing circuit. The unit will keep working normally if input voltage declines until it reaches roughly 9 volts. At that point, the Securitron TSB will automatically act as if all power was removed.

If a lock is being controlled, it will release. Input voltage could decline if the unit was being operated on batteries and the batteries were discharging or because of a fault in the power supply.

Diagram 5 Typical wiring for one magnetic lock

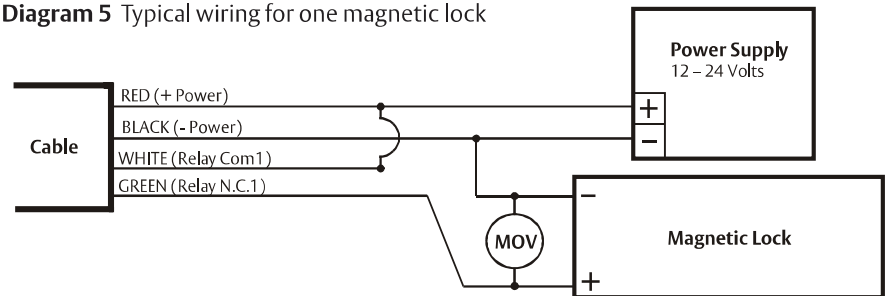


Diagram 6 Typical wiring for multiple magnetic locks


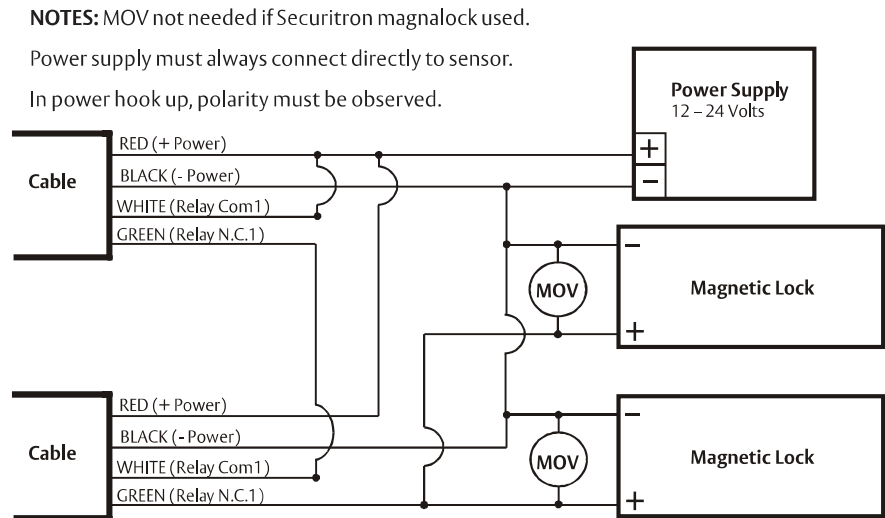


Diagram 7 Double break wiring

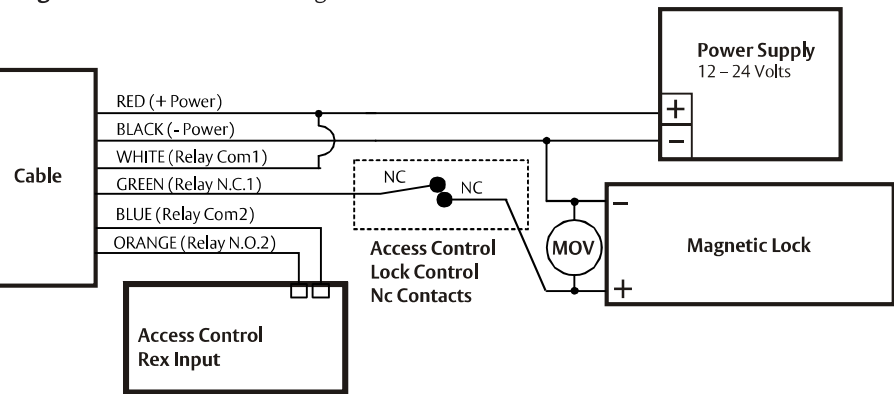

Double Break Wiring

Many installations include a controlled access device such as a digital keypad or card reader. Such devices typically have a REX (request to exit) input. When dry contacts close on this input, the entry device will open the lock for the same amount of time that is programmed for entry. Use of the REX input for exit has two benefits: you pick up timed exiting and also in the case of most entry controls, the REX input must be used for exiting to avoid an alarm condition at the door.

If the REX input alone is used for exiting a safety reliability problem will exist. If the entry device malfunctions, exit will not be possible and people may be trapped. We therefore always recommend double break wiring which is supported by the Securitron TSB because of its two pole relay. The Securitron TSB's NC contacts are used to break power to the fail safe electric lock while its NO contacts trip the REX input of the controlled entry device. This releases the lock a second time, hence the term, "double break". If the controlled entry device fails for any reason, direct exit is still possible.

All Securitron Equipment Installation

Diagrams 6 and 7 show "generic" use of the Securitron Touch Bar with any type magnetic lock and power supply. Often, Securitron supplies all of these products and the installer expects an interconnection drawing for all Securitron products. We provide such drawings in many of our manuals. In this case, the replacement of the generic products shown above with Securitron products is so simple as not to require separate drawings. Just note that for any Securitron

Magnalock, the red wire denotes the "+" input and the black wire denotes the negative. Remember that you don't need to install the MOV with any Securitron Magnalock. Securitron offers a wide range of different power supplies, so it is necessary to consult the individual power supply manual to identify the DC output terminals. Then connect the power supply outputs to the rest of the system as shown above.

Adjusting Sensitivity

With wiring completed, sensor adjustment should be set.


NOTE: that the sensor board has a potentiometer on it accessible when the bar's end cap is removed (see **Diagram 8**).

The potentiometer has a small red LED light installed in front of it that will aid you in adjusting the sensitivity. The potentiometer on the sensor will increase sensitivity when turned clockwise and decrease it when turned counterclockwise.

- 1 TURN the pot clockwise *without touching the bar* with a small flat blade screwdriver until you see the red LED light turn on; you should also hear the relay click off. In this condition, sensitivity is so high that the bar is "sensing" all of the time.

- 2 SLOWLY ROTATE the pot counter-clockwise until you see the red LED light turn off (you should hear the relay click on).
- 3 THEN ROTATE another 15 degrees counter-clockwise. This is generally a good setting.
- 4 BEFORE REPLACING THE END CAP, experiment by touching the bar and observe that the lock releases. Experiment with gloves if you expect that they will be used. You may want to increase the sensitivity somewhat, but if you leave it just below the point where it is continuously released, you risk a condition where the unit will fail by being released all the time.

Diagram 8 End view of sensor/circuit board

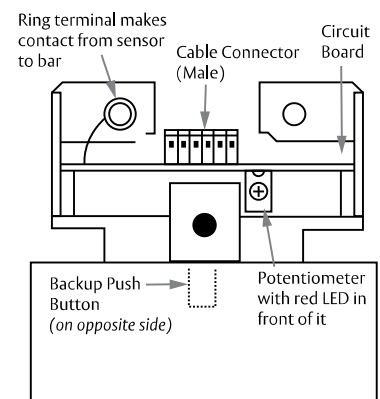


Use of Redundant (Backup) Switch and Labels

A red push switch is mounted on the rear of the bar. The purpose of this switch is to provide backup in case of any malfunction or mis-adjustment of the sensor. Pushing the button breaks the connection between the WHITE (COM1) and GREEN (NC1) wires just the same way as if the bar was touched. It therefore provides a "hard" backup circuit break which will release the controlled fail safe lock. It does not however affect the COM2 and NO2 circuit (BLUE and ORANGE). If these NO contacts are being used, for example, to provide REX input to an access control system, pushing the backup button will not achieve this, but egress safety is maintained as with the switch mounted, there are two independent controls which can release the door. In the event that the sensor fails, the button will still work.

A label is supplied which should be affixed to the bar (see **Diagram 9**) to draw attention to the backup switch. Application of the label is particularly important where people encounter the bar whom are not familiar with it such as in a public occupancy. The label includes two arrows owing to the uncertainty of which end of the bar it will be mounted on.

A second label stating "PUSH TO EXIT" is also shipped with the bar. If desired, this label can be affixed to the front center of the bar itself in order to prompt users that the bar (rather than the door) must be pushed to gain egress.

Diagram 9 Emergency Release Button

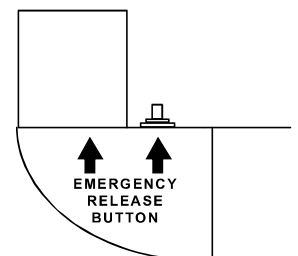

Electric Lock Selection

Electric lock selection is important to obtain best results from the Securitron TSB. The product allows silent and immediate egress without the mechanical action of traditional exit devices which require periodic maintenance and replacement. Having no moving parts, the Securitron TSB possesses an extended operating life. **The product was designed for use with Securitron's Magnalock.** The Magnalock secures the door with magnetic force only and therefore has no

possibility of jamming and thereby denying egress. The Magnalock also has internal electronics which allow it to release very rapidly. When used with the Securitron TSB, which is also a fast device, exit is immediate and the impression a person exiting gets is that the door is not locked at all. Other magnetic locks generally operate significantly more slowly than the Magnalock. This makes egress less convenient as a person must pause somewhat after touching the bar until the door releases.

Operational Security Considerations

Typical use of the Securitron Touch Sense Bar provides free egress from the interior protected area. The electric lock secures against unauthorized entry. It is of important concern that persons on the outside cannot activate the bar from the outside. This is a common problem with other interior release devices. For instance, if a panic bar with switch is used, it is possible to trip it from the outside if the intruder can introduce a coat hanger in between the door and frame. Aluminum frame glass doors tend to allow this more than other types. Similarly, microwave detectors used on the inside can sometimes be activated from the outside if the door is vibrated strongly.

The Securitron Touch Sense Bar is more secure with respect to the outside. To assure this, however, the user must be made aware of certain operational characteristics. The sensor functions by setting up an oscillating electric field which conforms along any metal surface that contacts the sensor's antenna wire. In the Securitron Touch Sense Bar it is the bar itself that carries the field. The electric field is disturbed by the near proximity of ionized fluids within the body, which form a conductive mass. It is this mass that the bar detects. As a proximity device the bar is sensitive to the closeness of the mass. For example, if a person

wearing gloves touches the bar with his finger tip, the door will generally not release. When the gloved hand is wrapped around the bar in normal use, the door will release because the conductive mass of the hand is in much closer contact with the bar.

The main security concern regarding outside entry is if a person could introduce a metal wire from the outside and make metal to metal contact with the bar. The field could then propagate along the wire and be activated by the intruder's hand. In practice, this is unlikely. The bar is anodized and therefore insulated so it will not make contact with the wire. The intruder would have to scratch away the anodization which requires both effort and knowledge. Also the field propagates weakly along a thin wire.

If, however, high security from the outside is critical in the application, two steps should be taken.

- 1 The sensitivity of the bar should be set as low as satisfies the exit performance requirements.
 - 2 The insulation on the bar should be increased by painting it. This significantly increases resistance to scratching. Electrostatic (powder coat) paint is recommended for greatest toughness.
-

Sensor Replacement

- 1 REMOVE THE END CAP on the sensor side. Remove the cable connector from the circuit board.
- 2 REMOVE THE TWO SCREWS that connect the end piece to the aluminum bar.

NOTE: that this will free the ring terminal that is soldered into the board on the pad marked, "bar". This ring terminal is the way the sensor makes contact with the bar. Slide the complete end piece out of the bar.

- 3 With the end piece now loose in your hand, PUSH the circuit board farther into the end piece. The direction is as if you were pushing it into the bar. There will be some resistance from the wires that connect the backup switch to the circuit board. Push it only far enough to completely reveal the rectangular body of the backup switch.

- 4 UNSCREW the cap that holds the backup switch to the end piece. Push up the freed backup switch. Now the complete sensor + backup switch can be slid away from the end piece by continuing to slide the board in the same direction.
- 5 To INSTALL the new sensor assembly, reverse the procedure detailed above.

NOTE: that the wires that connect the backup push button to the circuit board must be folded over in the center of the board- inside of the potentiometer. If the wires are allowed to fold outside the potentiometer, they will block access to it and the board will not be able to slide fully forward.

Securitron TSB-3 Template Back




Troubleshooting

PROBLEM	SOLUTION
The door will not release when the bar is touched	• To monitor operation of the bar, it is quite easy to see the red LED light indicator and hear the relay click when the bar is touched. • If the red LED does not turn on and you don't hear a click, try the backup switch. If the door does not release from the backup switch, it is almost certain that the overall wiring of the installation is at fault. If the door releases from the backup switch, the general wiring is correct but the sensor is not reading your touch. Make sure you understand section Adjusting Sensitivity on how to adjust sensitivity of the bar. It may be set too low. Another fault could be that the sensor itself is not receiving 12-24 DC power on the red and black wires. Check the power supply and, be sure the input polarity is correct. Also, even if power is being applied on the red and black wires, it's possible that it's not getting into the sensor. Check the connector block that plugs into the sensor card for loose wires. Finally, it is possible that the ring terminal that connects the sensor to the bar itself has come loose. See Diagram 8. • If the red LED does turn on and you can hear this click and the door does not release, try the backup switch. If the door still doesn't release, the problem must be in the installation wiring as it is nearly impossible to have a failed sensor relay and backup switch at the same time. Review your wiring to make sure the sensor is correctly applied in the circuit. If you see the red LED turn on and you hear the click but only the backup switch releases the door, call the factory as the defect appears to be in the relay contacts and the sensor will have to be replaced.
The door remains released constantly	• If you see the red LED turn on and hear a click when you touch the bar but the lock remains released, the problem is probably in the wiring which should be reviewed to be sure the sensor is correctly applied in the circuit. • If you see red LED on and don't hear a click, the sensor is probably adjusted too high (<i>review Adjusting Sensitivity</i>). Rotate the adjustment pot counter-clockwise <u>while not touching the bar</u>. If this doesn't lock the door, some effect is probably keeping the relay de-energized all the time (<i>remember: the relay is energized when the lock is secure to maintain fail safe operation</i>). • The most likely cause for the relay to remain energized is that the sensor "sees" an overwhelmingly large signal as if someone was continually touching the bar. This will happen if the bar is not properly isolated from a metal door. Because of the plastic end pieces, the intrinsic isolation of the bar from the door is many times greater than it needs to be. Make sure that there is no "foreign object" creating a conductive path from the bar to the door. An example would be metal blinds. The same effect will occur if the bar is used outside in the rain or if water is flowing down the inside of the door. This overcomes the electrical isolation needed between the bar and door. • Certain large electronic noise sources can "swamp" the sensor although this is rare. Examples would include large radio or radar transmitters in the building or a high voltage neon sign mounted within a few feet of the door. Call the factory if you suspect noise induced problems. • Finally, in very rare instances, the sensor can "hang up" in a condition that continuously releases the door. De-power the unit and turn the adjustment pot all the way counterclockwise. Then, re-power the unit and note that the door locks. Then, readjust the sensor potentiometer normally.

Securitron TSB-3 Template

Distance shown represents
38" [914.4 mm] Securitron
TSB-3 touch bar

- 42" [1066.8 mm] bar
add 6" [152.4 mm]
- 48" [1219.2mm] bar
add 12" [304.8 mm]

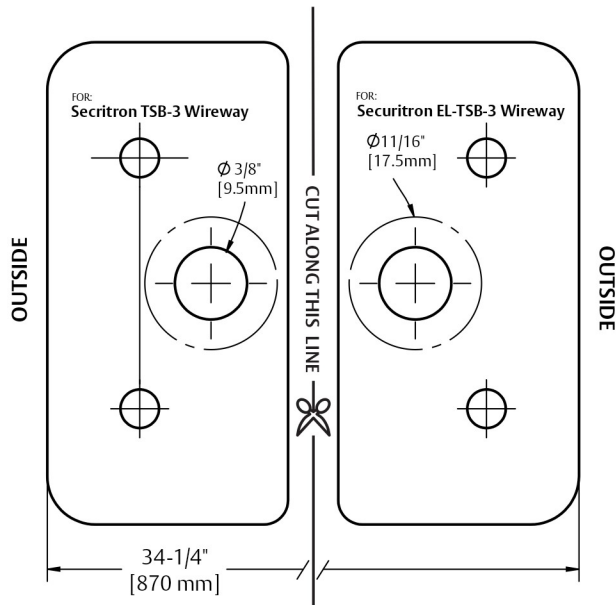

DO NOT photo copy template.
(Dimensions will change)



Warranty

For information on warranty coverage and replacement options,
please visit assaabloyesh.com/warranty

ELECTRONIC SECURITY HARDWARE

HES | Securitron

techsupport.esh@assaabloy.com | assaabloyesh.com

800 626 7590 | 10027 S. 51st Street Phoenix, AZ 85044 USA

Patent pending and/or patent www.assaabloydss.com/patents

Copyright © 2021, Hanchett Entry Systems, Inc., an ASSA ABLOY Group company.
All rights reserved. Reproduction in whole or in part without the express written
permission of Hanchett Entry Systems, Inc. is prohibited. 500-16410_6