



O2DB1 Quick Start Guide

Wi-Fi- PoE Video Doorbell with Face Detection Quick Setup Guide

This Quick Start Guide provides simplified instructions on how to get the system up and running.
For more detailed instructions, download the full installation manual from our website.

Install the doorbell on a LAN with internet access.

1. Using a web browser access the doorbell via the IP address.


Login

The login screen for the Speco Technologies O2DB1 device. It features a blue header with the "speco technologies" logo. Below the header, there are two input fields: "Name:" with the text "admin" entered, and "Password:" with a masked password represented by dots. At the bottom, there are two buttons: "Login" and "Cancel".


2. Camera image should be visible through web browser.




3. Change the IP address from DHCP to Static

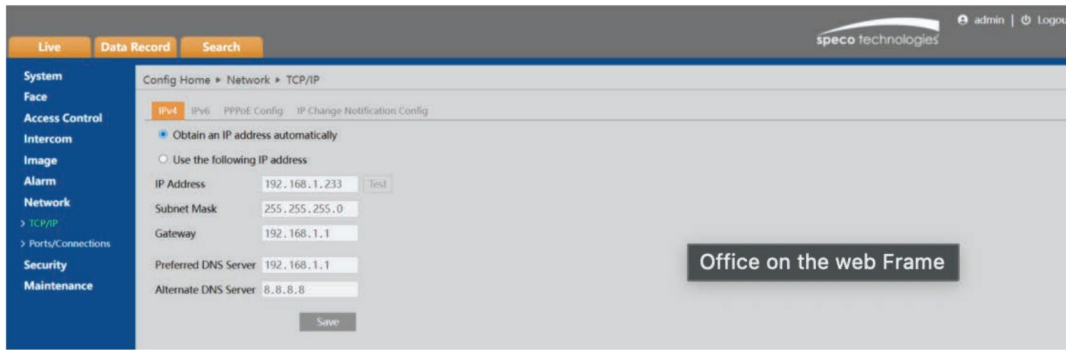


4. Device changed to static address with the same IP address.

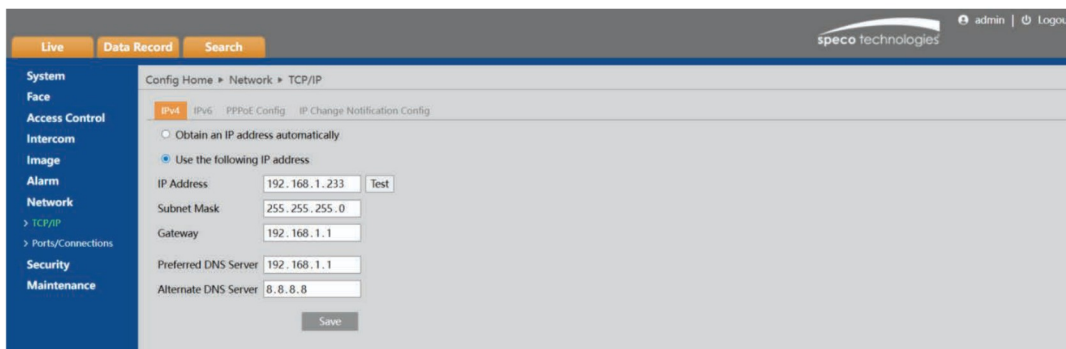


5. Enable Audio

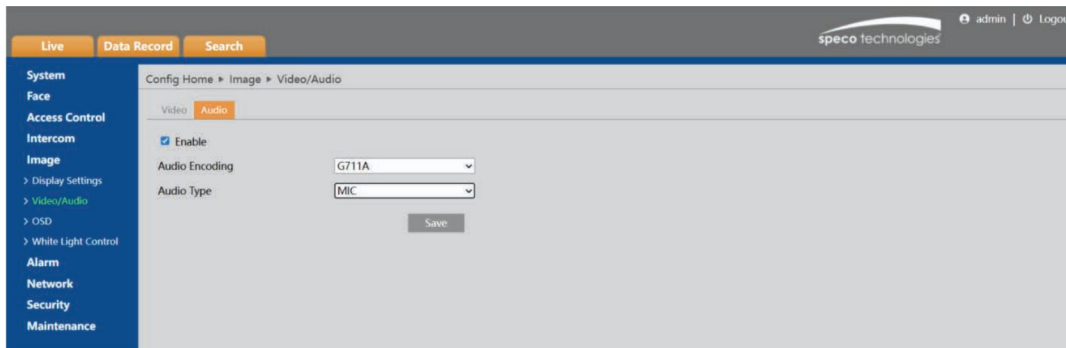


6. White Light Time/ Brightness / Trigger can be adjusted

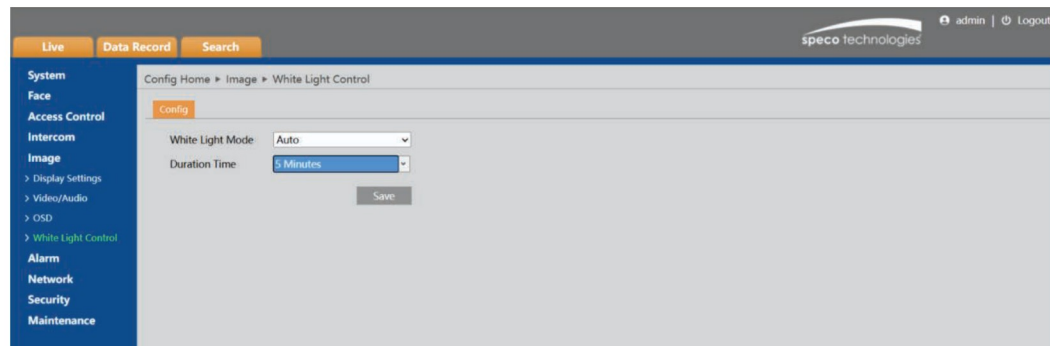


7. It is recommended to disable motion detection

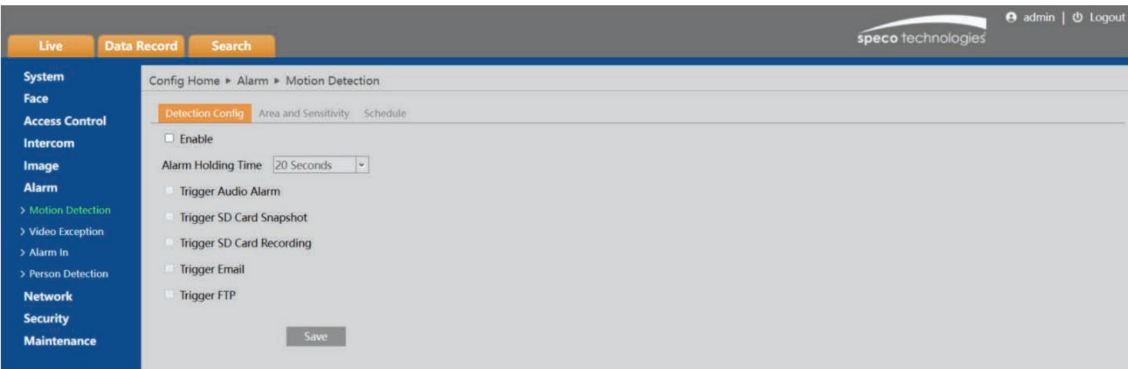


8. It is recommended to use Ai/ People Detection

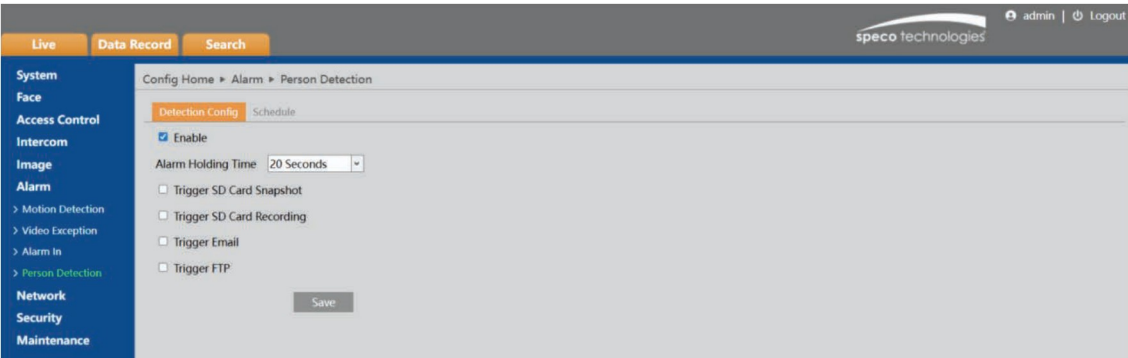


9. Add doorbell to the Speco Blue App by scanning the P2P QR

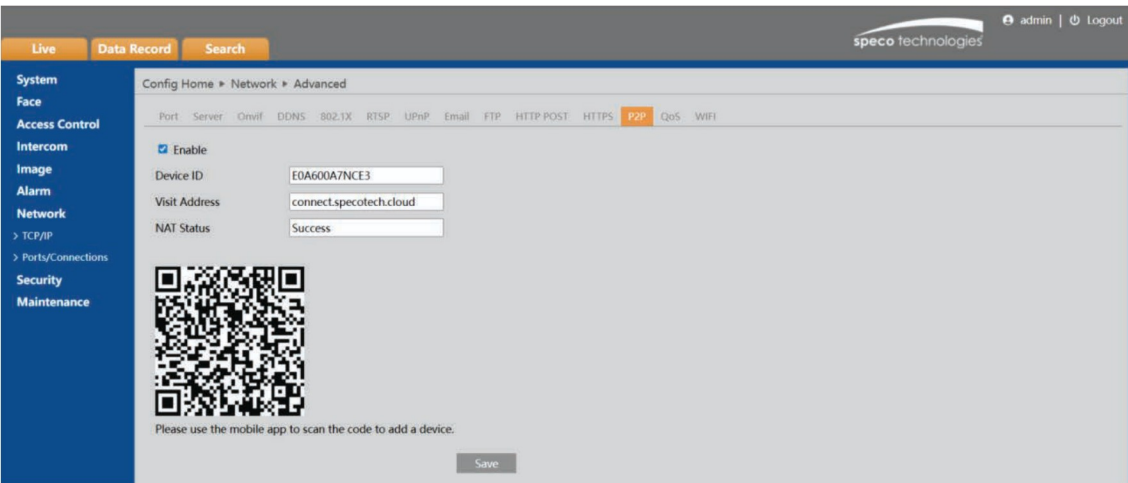


10. Once scanned device will appear as a doorbell.

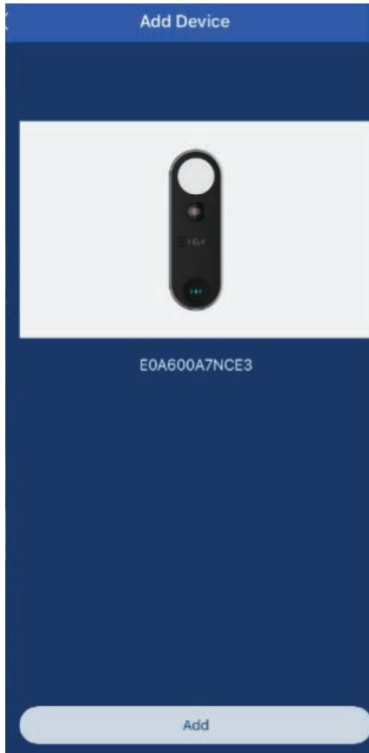


11. Enter the password

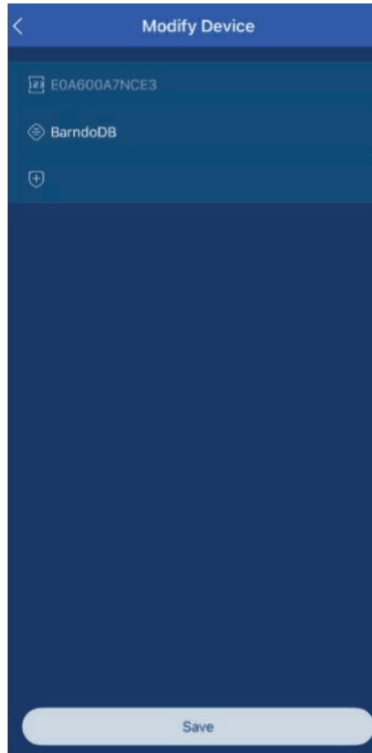

12. You can change the name of the device by clicking the pencil

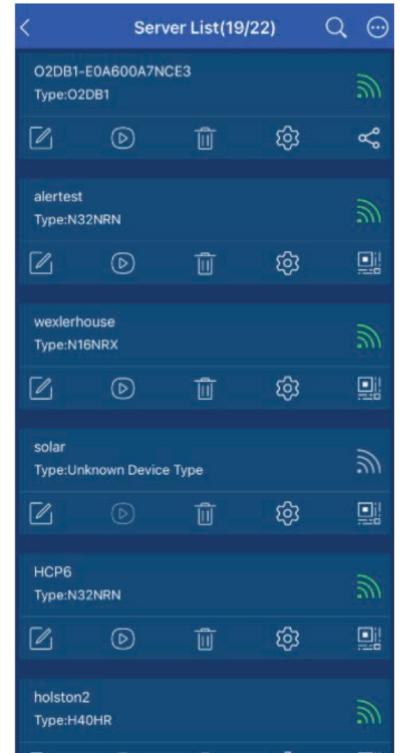

13. Test that device is live, mic is working.

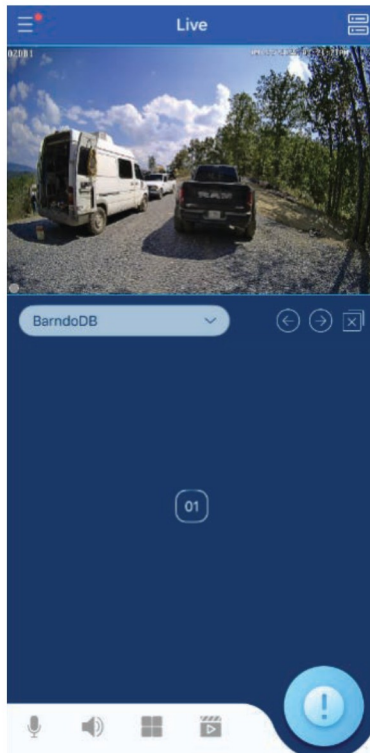

14. Test that doorbell feature works.

